

# ABB Fully Automatic Top-Load Washing Machine User Manual

---

## Table of Contents

1. Introduction
2. Product Overview
  - Available Models & Load Capacities
3. Installation Guide
  - Unboxing & Setup
  - Water & Power Connection
4. Usage Instructions
  - Control Panel & Functions
  - Washing Programs
  - Loading Clothes Correctly
5. Maintenance & Cleaning
6. Troubleshooting Guide
  - Common Issues & Solutions
7. Safety Precautions
8. Customer Support

---

## 1. Introduction

Thank you for purchasing a Fully Automatic Top-Load Washing Machine. This manual provides all the necessary information to ensure optimal performance, safety, and longevity of your appliance.

## 2. Product Overview

### Available Models & Load Capacities:

- **Model A:** 6.5 kg – Suitable for small families (2-3 members)
- **Model B:** 7.5 kg – Ideal for medium families (4-5 members)
- **Model C:** 9.0 kg – Best for large families (6+ members)

## 3. Installation Guide

## Unboxing & Setup

- Carefully remove the washing machine from its packaging.
- Place it on a flat, stable surface.
- Remove all safety packing materials.

## Water & Power Connection

- Connect the inlet hose to a running water source.
- Ensure the drain pipe is positioned correctly.
- Plug the power cord into a grounded outlet.

## 4. Usage Instructions

### Control Panel & Functions

- **Power Button:** Turns the machine ON/OFF.
- **Program Selector:** Choose washing mode (Normal, Quick Wash, Heavy, Delicates, etc.).
- **Start/Pause:** Begins or pauses the cycle.

### Washing Programs

- **Normal Wash:** Everyday clothes
- **Heavy Load:** Jeans, blankets
- **Delicate:** Lingerie, silk fabrics
- **Quick Wash:** Lightly soiled clothes

### Loading Clothes Correctly

- Do not overload the machine.
- Use the correct detergent and softener.
- Close the lid before starting the cycle.

## 5. Maintenance & Cleaning

- Clean the detergent drawer weekly.
- Wipe the drum and exterior with a damp cloth.
- Run a self-clean cycle monthly using a washing machine cleaner.

## 6. Troubleshooting Guide

Issue	Possible Cause	Solution
Machine won't start	Power supply issue	Check plug & socket
Water not filling	Low water pressure	Ensure tap is fully open
Excessive vibration	Uneven surface	Adjust machine level
Clothes not cleaned	Overloading	Reduce load & restart

## 7. Safety Precautions

- Do not insert hands inside the drum while running.
- Keep children away from the machine.
- Unplug the machine when not in use.

## 8. Customer Support

For further assistance, contact our customer support at **1800-XXX-XXXX** or visit [www.companywebsite.com](http://www.companywebsite.com).

---

**End of Manual**