

Updating and Installing the nrf52840 with Circuit Python and Halo Sword fx	
	plug in usb, double click reset button by usb port. Will timeout while reading directions... :) may have to reset more than once
Read, find all most recent file links here	https://learn.adafruit.com/introducing-the-adafruit-nrf52840-feather/update-bootloader
TLDR;	
Update bootloader	
1	double click the reset button by the usb port. Look in devices to find which COM is being used
2	get adafruit-nrfutil.exe on your pc
3	get latest bootloader (...3.2_s140_6.1.1.zip)
4	copy script from link above (change to correct COM, and version numbers and add .\ if it's not in your PATH
5	this takes a minute
Update the UF2	
1	double click the reset button by the usb port
2	download the adafruit uf2
3	Copy the adafruit_...5.3.1.uf2 to the feather
Install the Halo Sword code and libraries	
1	Copy the demo lib and sounds folders
2	Copy the code.py file