

WIRELESS ON/OFF SWITCH FUNCTIONS

ON - Dim Up

Press to turn your IKEA Home smart product on.
Press and hold to dim up.

OFF - Dim Down

Press to turn your IKEA Home smart product off.
Press and hold to dim down.

 **Pairing:** Add IKEA Home smart products to your system. See instructions below.

ADDING DEVICES TO YOUR WIRELESS ON/OFF SWITCH

When the wireless ON/OFF switch is sold together with an IKEA Home smart product (in the same package), they are already paired.

To add more products, just repeat the steps below:

Make sure that the main power is turned on.

1. Hold the ON/OFF switch close to the IKEA Home smart device you want to add (no more than 5 cm away).
2. Press and hold the pairing button for at least 10 seconds, you can find the pairing button under the rear cover.
3. A red light will shine steadily on the ON/OFF switch. On your IKEA Home smart device the pairing indicator will begin to dim and flash one time to indicate that it has been successfully paired.

Up to 10 IKEA Home smart devices can be paired with 1 ON/OFF switch.

Make sure to pair them one at a time. If the IKEA Home smart products are close to each other, disconnect those that have already been paired from the main power.

FACTORY RESET YOUR DEVICE**For wireless ON/OFF switch:**

Press the pairing button 4 times within 5 seconds.

CHANGING THE BATTERY

When the wireless ON/OFF switch is used regularly and as intended, the battery will last for approximately 2 years.

When it's time to replace the battery, a red LED indicator will flash when you toggle the ON/OFF switch.

Open the rear cover, and replace the battery with a new CR2032 battery.

CAUTION!

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

IMPORTANT!

- The wireless ON/OFF switch is for indoor use only and can be used in temperatures ranging from 0°C to 40 °C.
- Do not leave the wireless ON/OFF switch in direct sunlight or near any heat source, as it may overheat.
- The range between the wireless ON/OFF switch and the receiver are measured in open air. Different building materials and placement of the units can affect the wireless connectivity range.

CARE INSTRUCTIONS

To clean the wireless ON/OFF switch wipe with a soft dry cloth.

NOTE!

Never use abrasive cleaners or chemical solvents as this can damage the product.

TECHNICAL DATA

Type: E1743 wireless ON/OFF button

Input: 3V, CR2032 Battery

Range: 10 m in open air

For indoor use only

Operating frequency: 2405-2480Mhz

Output power: 3 dBm

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 ÄLMHULT



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.