

Step-by-Step Guide: Removing an Antminer S9 Fan

Introduction

Before beginning any work on your Antminer S9, ensure you follow safety precautions. This guide explains how to safely remove a fan from your Antminer S9. Whether you're troubleshooting, cleaning, or replacing a faulty fan, these steps will help you perform the task methodically.

Materials and Tools Needed

- **Antminer S9 unit**
 - **Phillips-head screwdriver**
 - **Anti-static wrist strap** (to prevent static damage)
 - **Plastic prying tool** (optional, for gently lifting parts)
 - **Replacement fan** (if you plan to install a new one)
 - **Clean, well-lit workspace**
-

Step 1: Power Down and Unplug

- **Turn Off:** Shut down the Antminer S9 using its power switch or by disconnecting it from the network.
 - **Unplug:** Disconnect the power supply to ensure there's no electrical current.
 - **Cool Down:** Allow the miner to cool if it was recently in operation.
 - **ESD Precautions:** Wear an anti-static wrist strap and work on an ESD-safe surface.
-

Step 2: Remove the Top Cover

- **Unscrew:** Use a Phillips-head screwdriver to remove all screws securing the top cover.
- **Lift Off:** Carefully lift off the cover to expose the internal components, including the fans and hash boards.

Step 3: Locate the Fan to be Removed

- **Identify:** The Antminer S9 typically has two fans. Determine which fan you need to remove (for cleaning, troubleshooting, or replacement).
 - **Inspect Mounting:** Note how the fan is attached (usually with screws and a power connector).
-

Step 4: Disconnect the Fan Power Connector

- **Locate Connector:** Find the cable that connects the fan to the control board.
 - **Unplug Gently:** Press the connector latch (if present) and pull the cable out gently. Avoid using excessive force to prevent damaging the connector.
-

Step 5: Remove the Fan Screws

- **Unscrew:** Use your screwdriver to remove all screws holding the fan in place.
 - **Keep Screws:** Set the screws aside in a safe place so they can be reused during reassembly.
-

Step 6: Remove the Fan

- **Lift Off:** Once the screws are removed and the connector is unplugged, gently lift the fan out of its mounting.
 - **Free Stuck Parts:** If the fan feels stuck, gently wiggle it until it releases. Take care not to damage adjacent components.
-

Step 7 (Optional): Install a New Fan

- **Position New Fan:** Place the replacement fan into the mounting bracket.
- **Secure:** Reinsert the screws to secure the new fan.
- **Reconnect:** Plug the fan's power connector back into the control board, ensuring a firm and secure connection.

Step 8: Reassemble the Antminer S9

- **Replace Cover:** Reattach the top cover of the miner.
 - **Screw In:** Secure the cover with the previously removed screws.
 - **Reconnect Power:** Plug the power supply back in.
-

Step 9: Test the Fan Operation

- **Power On:** Turn the miner back on.
 - **Verify Function:** Check that the fan is spinning correctly and that the miner is operating at normal temperatures.
 - **Monitor:** Observe the miner's status page (if available) to ensure the fan speed and performance are within expected ranges.
-

Conclusion

By following these steps, you should now have successfully removed (and optionally replaced) the fan on your Antminer S9. Regular maintenance—such as cleaning and checking connections—can help maintain optimal performance and prolong the life of your mining hardware.

References

[youtube.com](https://www.youtube.com)

– "Antminer L3/S9 Noctua Fan Upgrade Guide" (YouTube)

bitcointalk.org

– Discussion on fan orientation and basic removal tips from Bitcoin forums