



INPUT, OUTPUT, MODULATION CV

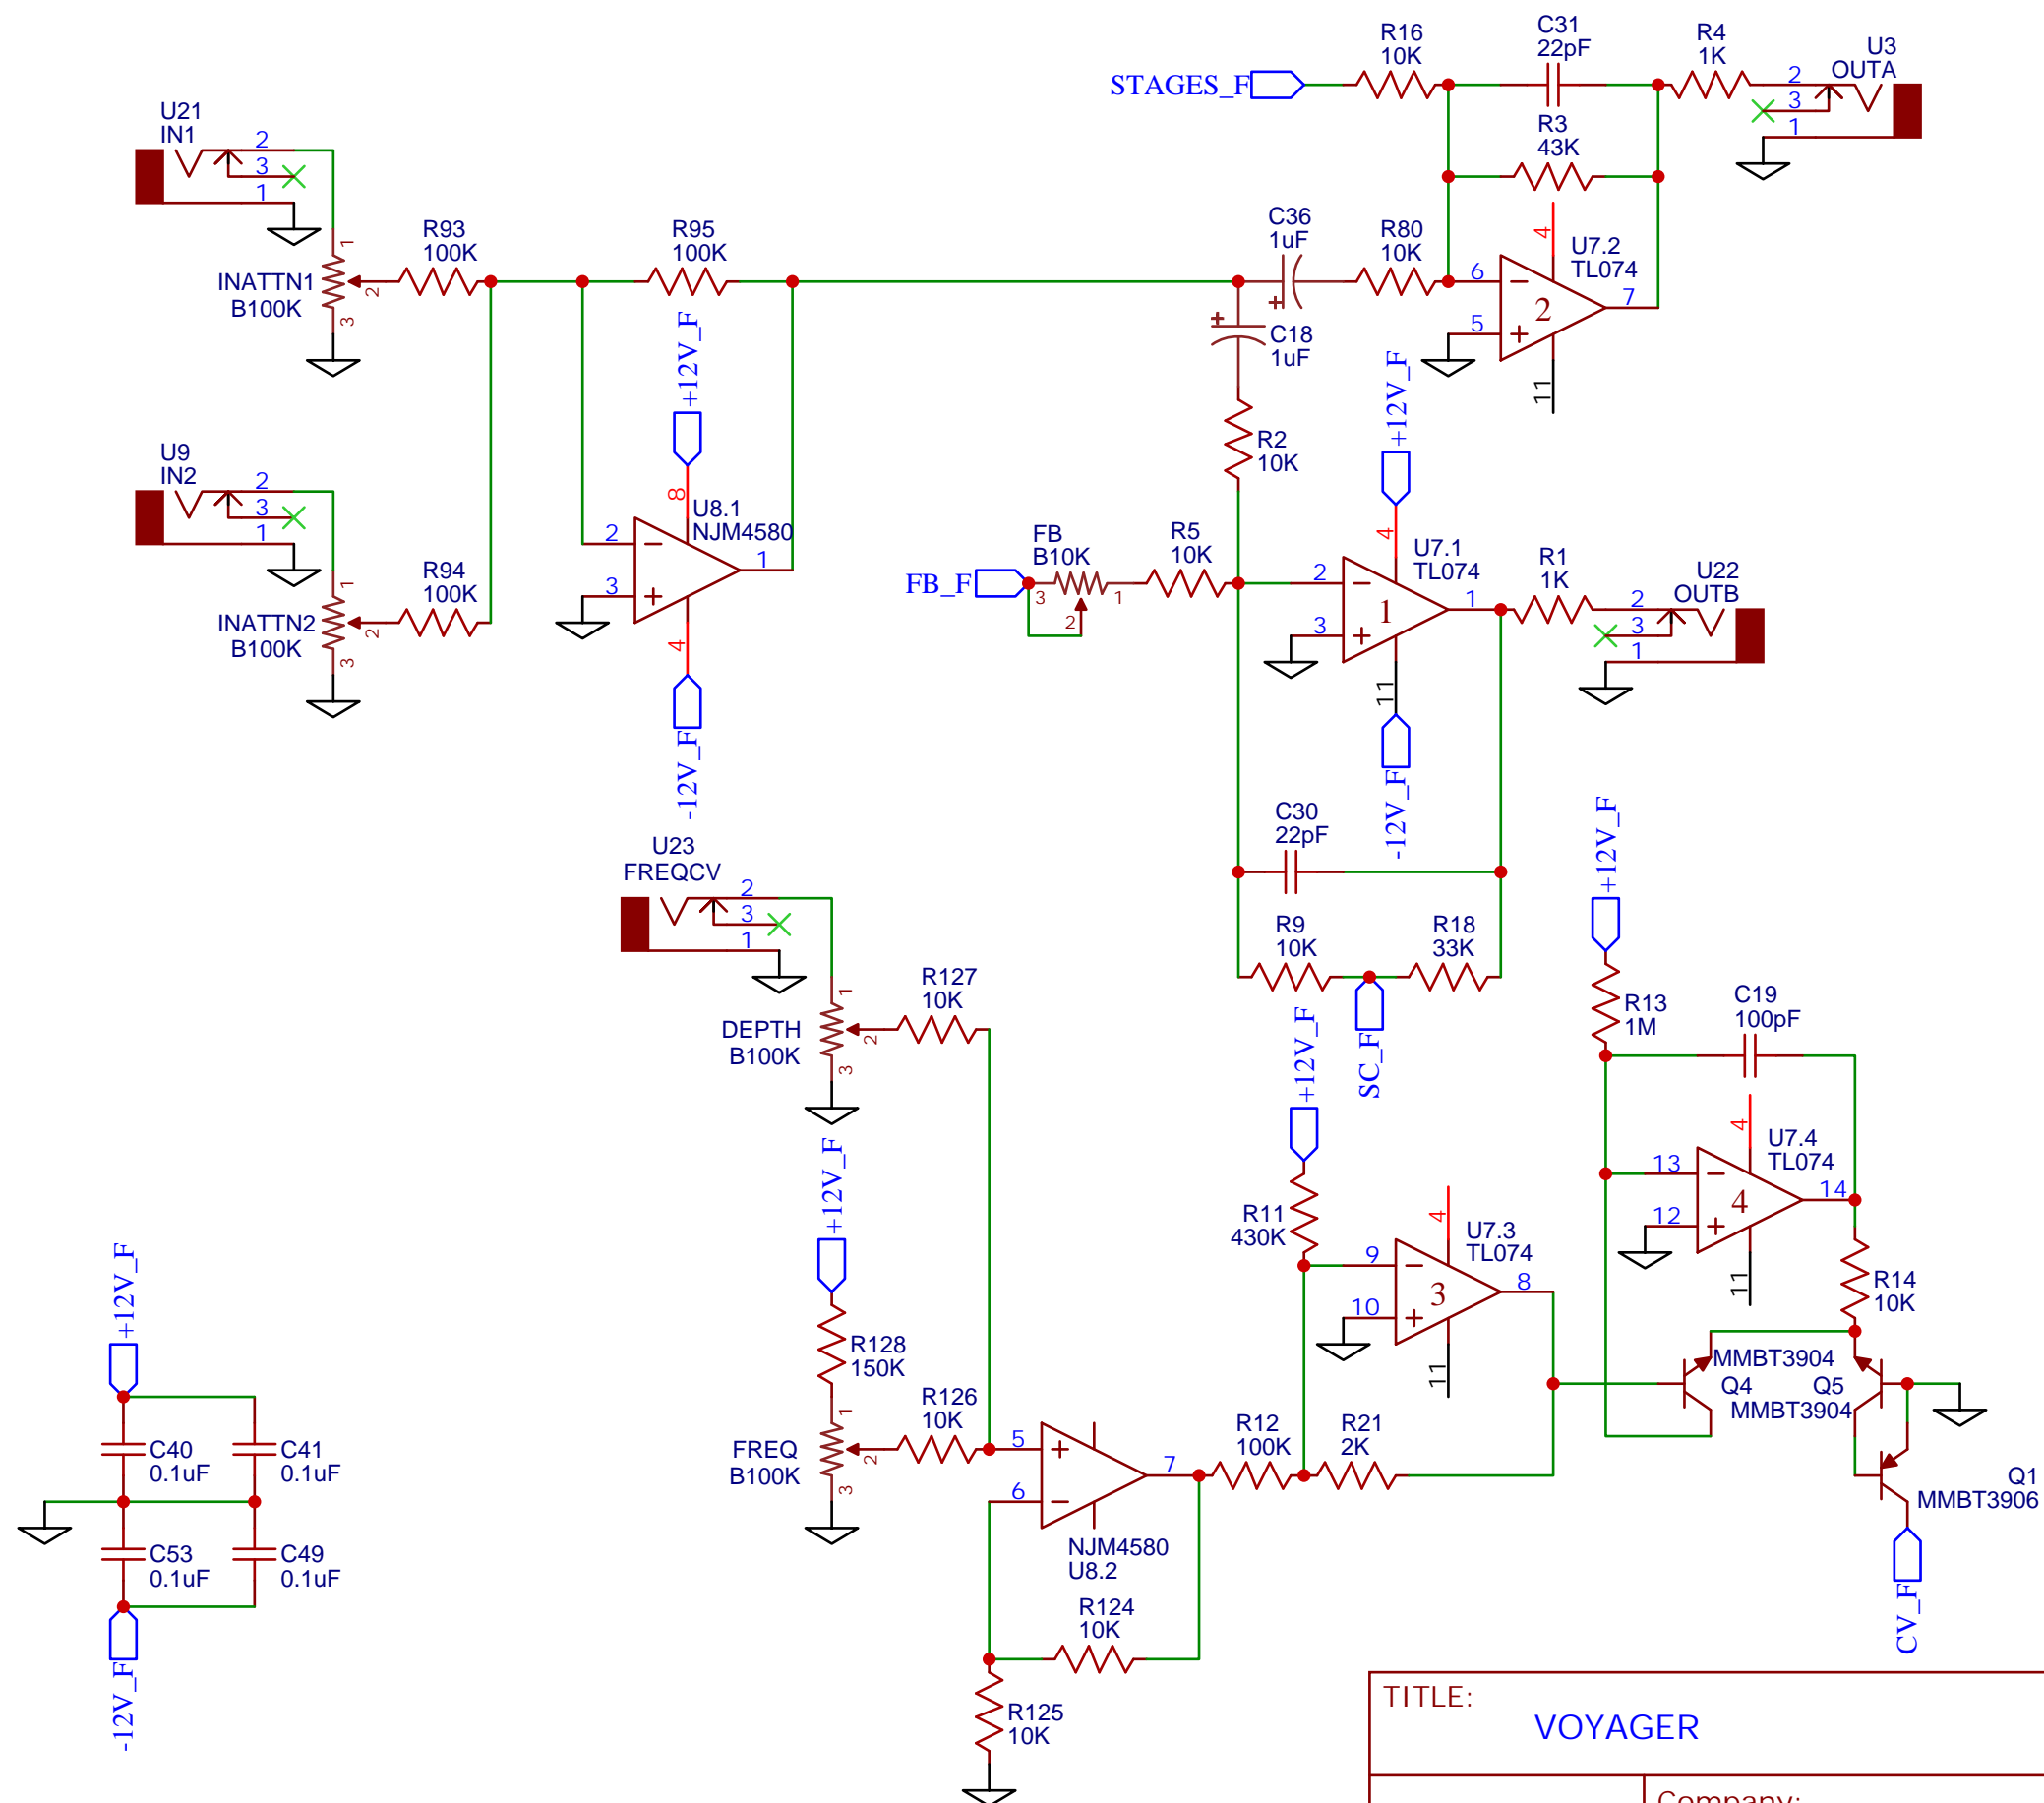


TITLE: VOYAGER		REV: 1.0
	Company:	Sheet: 1/6
	Date: 2025-07-17 Drawn By: TOILmodular	

STAGES

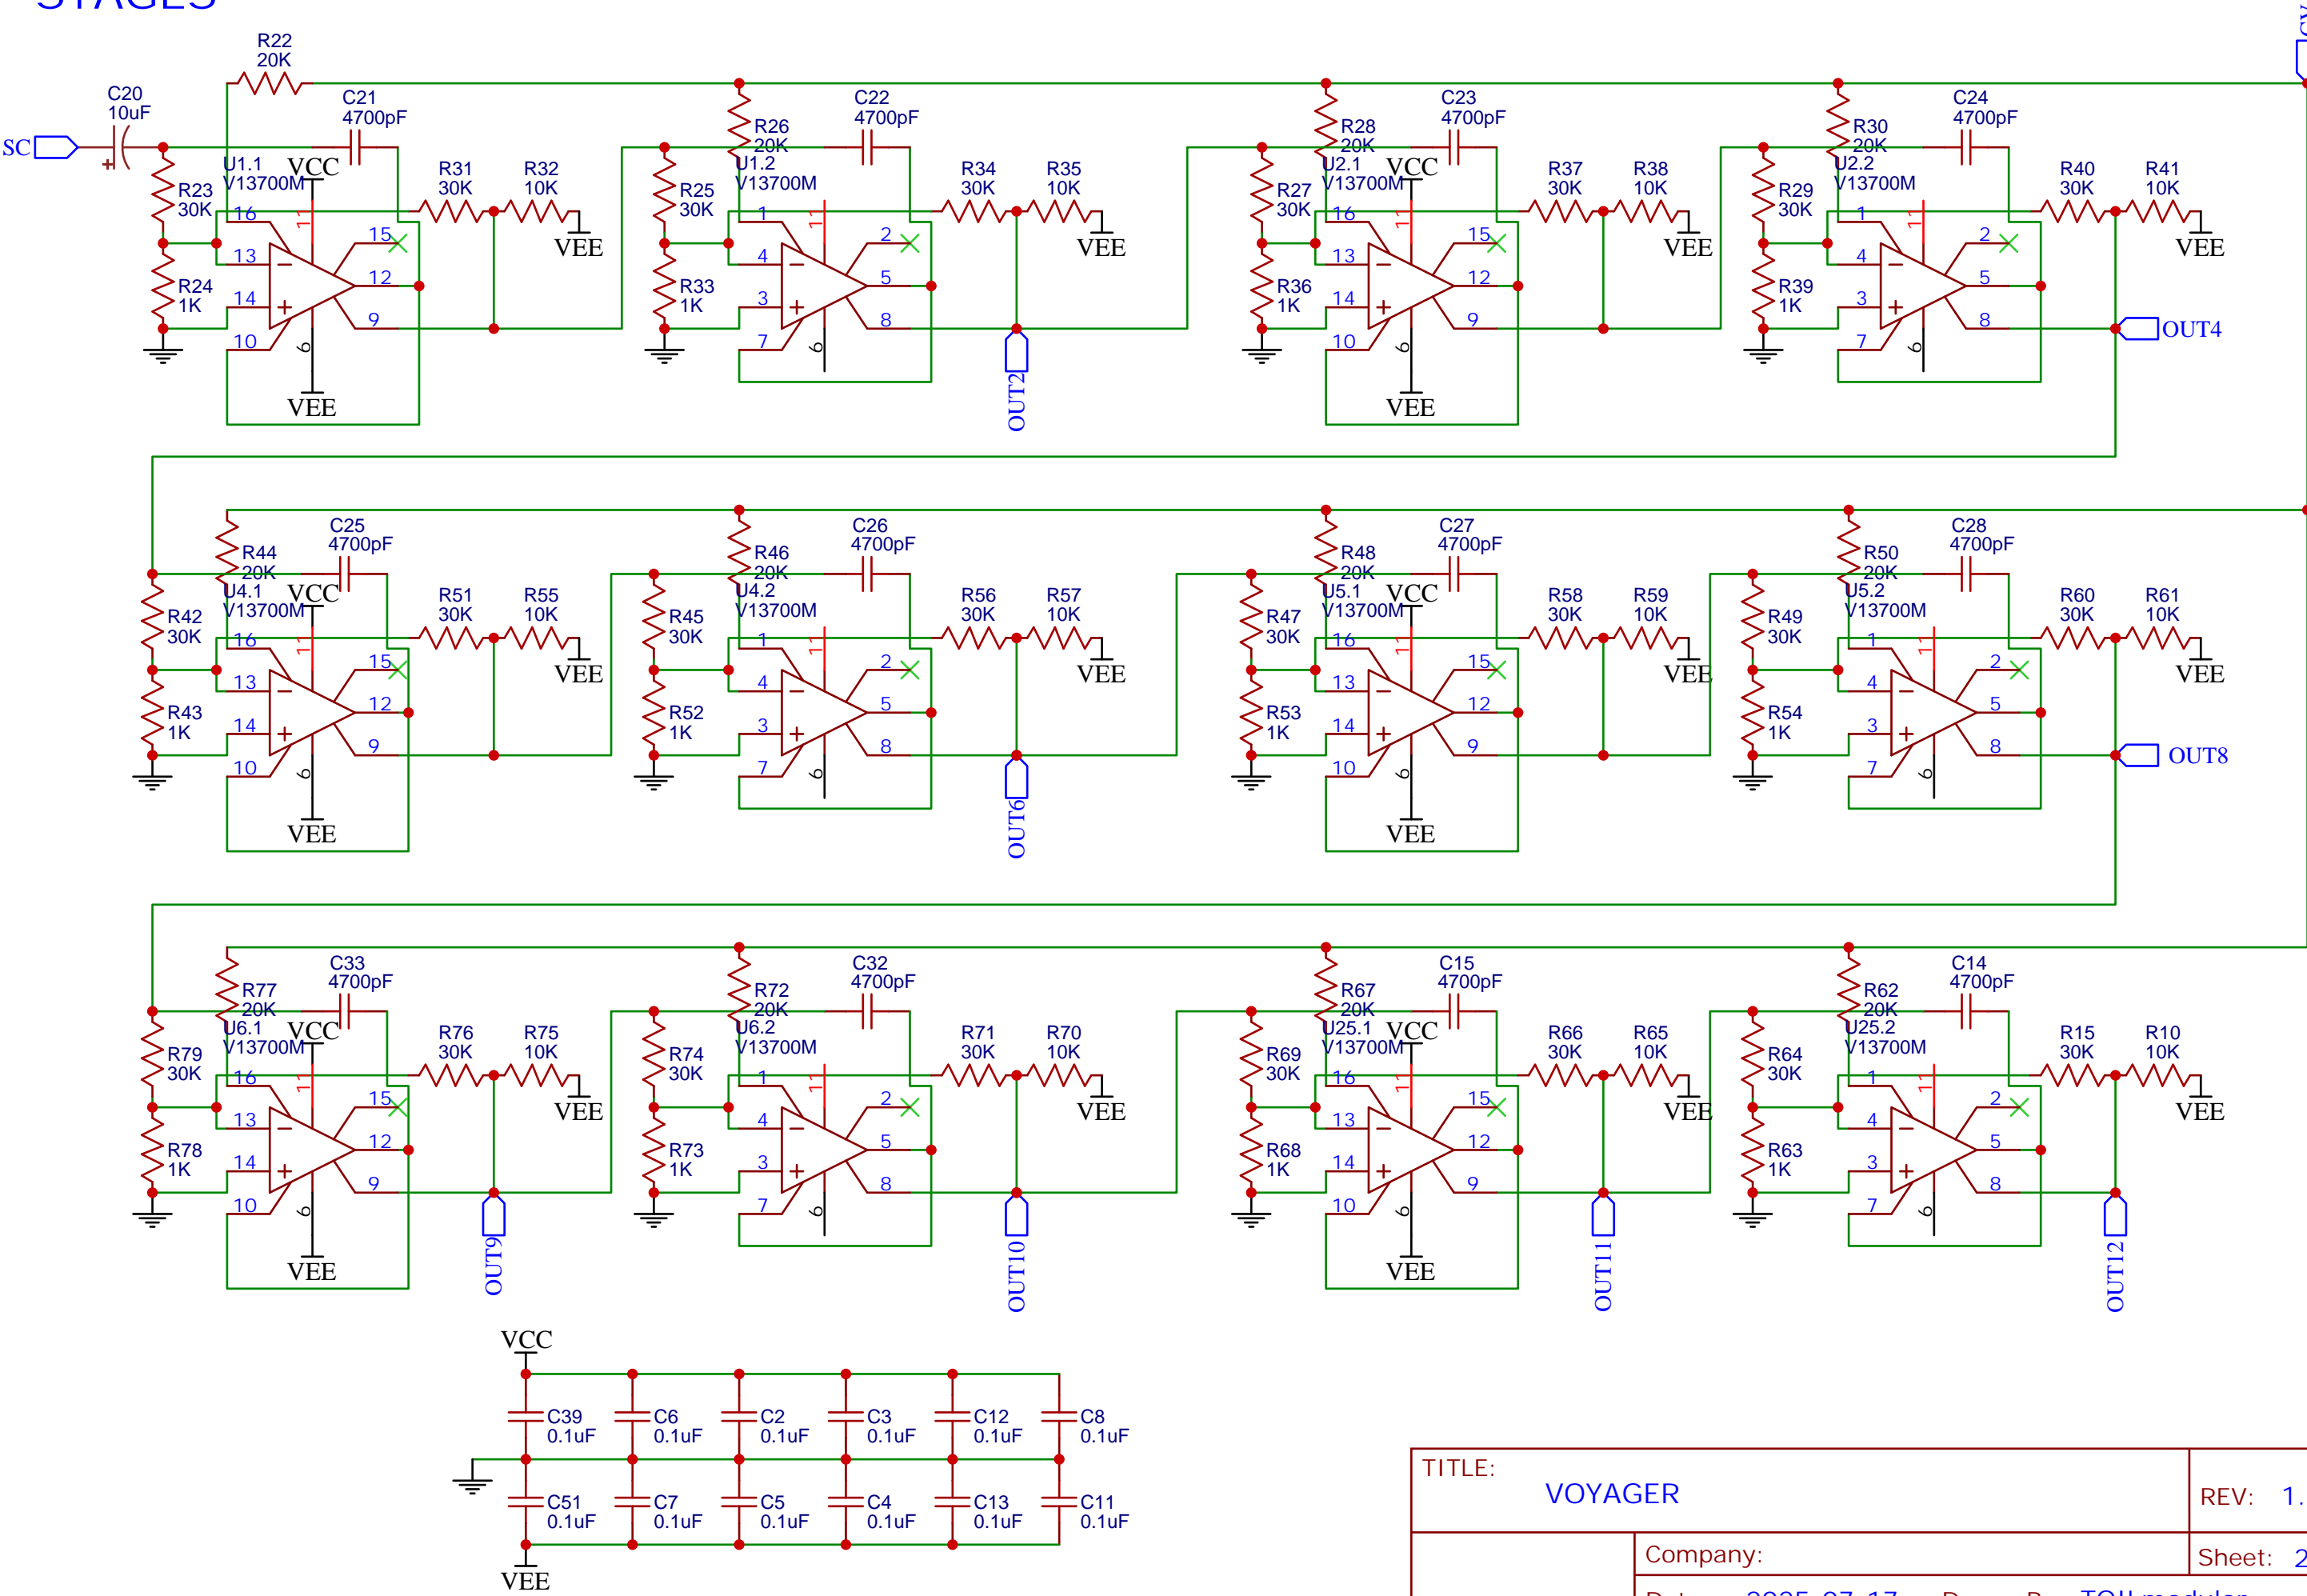


STAGES CV, FEEDBACK LOOP CV

* Resistors R7 and R91:
The values might have to be adjusted.
Turn the selection knobs STAGES and
FB STAGES fully clockwise.
If the last LEDs (stage 12) do not light up,
increase the resistor values from 100K to 120K.



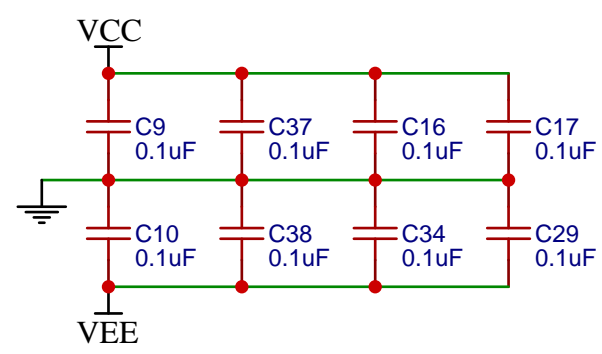


TITLE: VOYAGER		REV: 1.0
	Company:	Sheet: 3/8
Date: 2025-07-17		Drawn By: TOILmodular

STAGES AND FEEDBACK LOOP CONTROL LOGIC, LED CONTROL

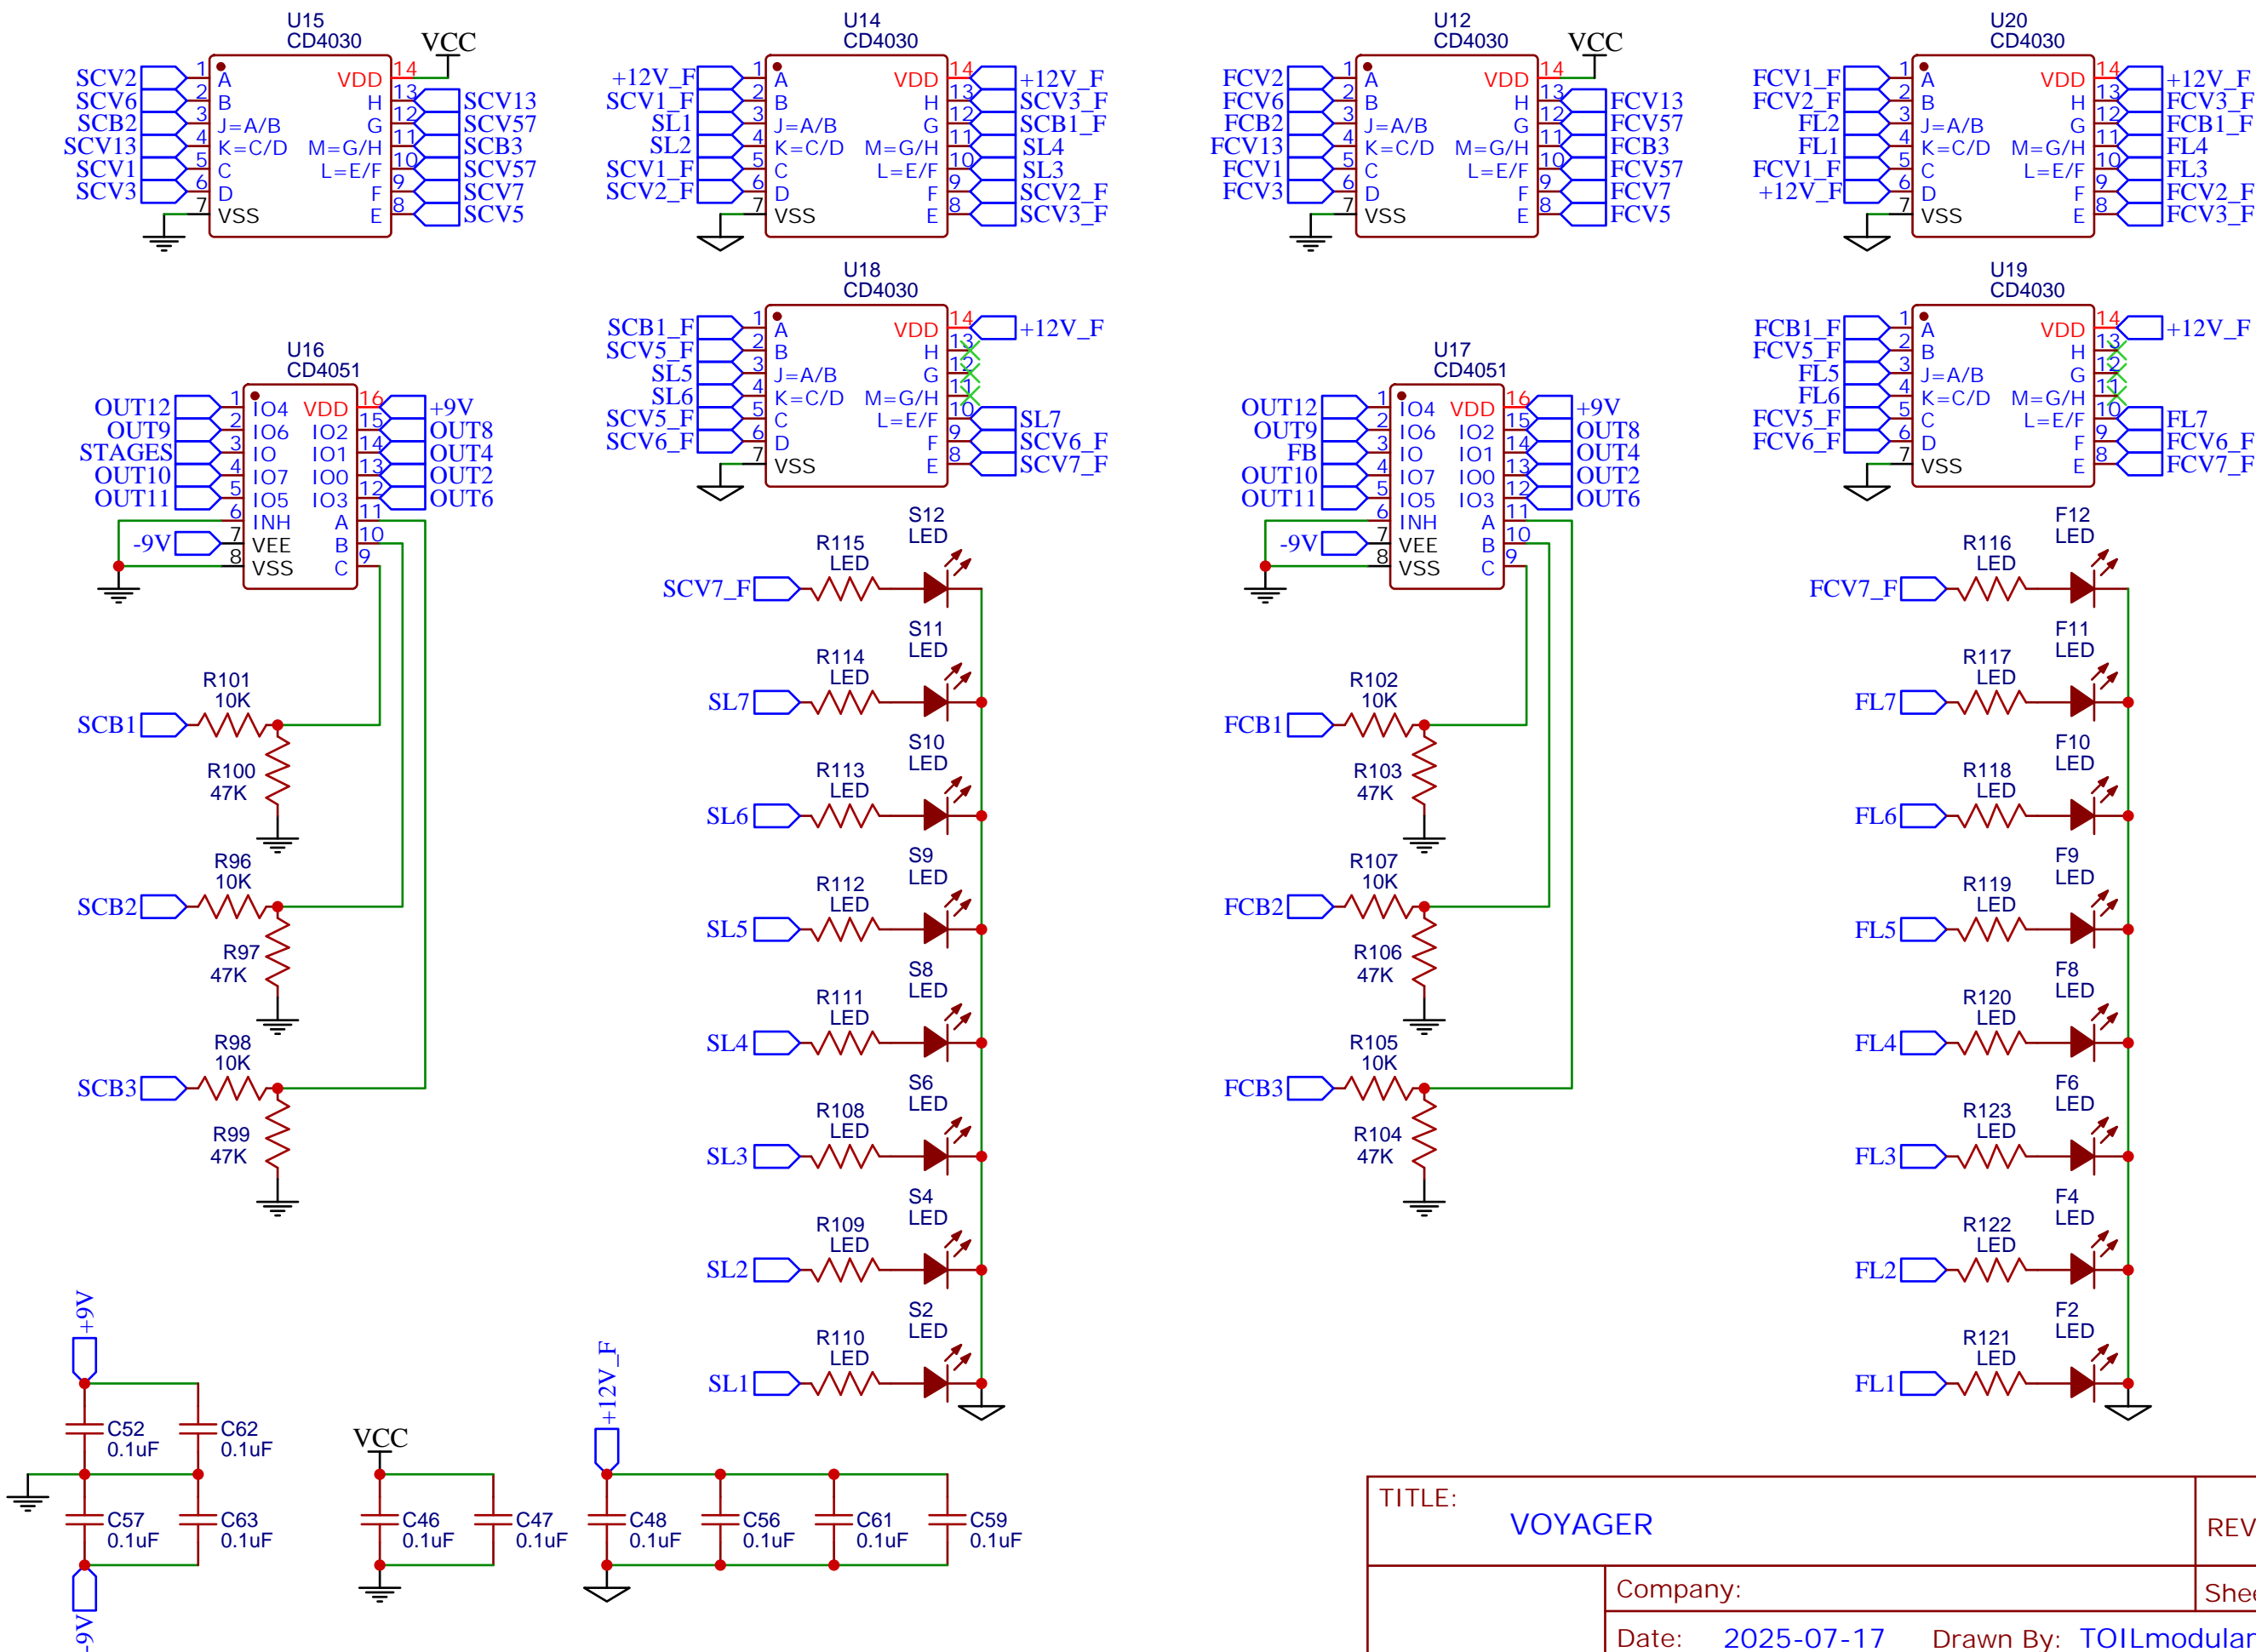






POWER SUPPLY

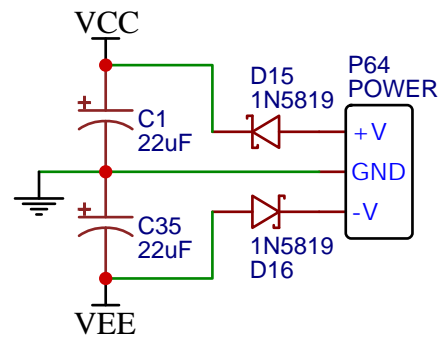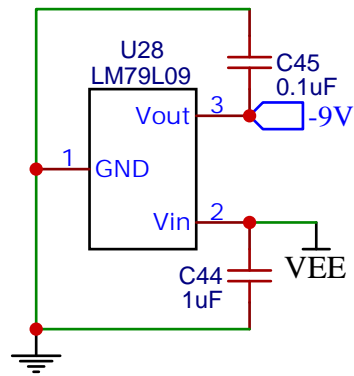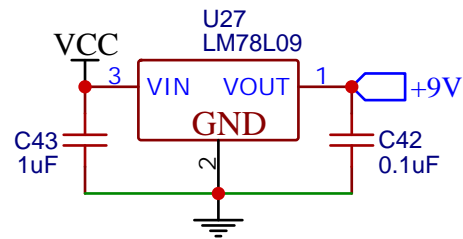






TITLE: VOYAGER		REV: 1.0
	Company:	Sheet: 1/1
	Date: 2025-07-17 Drawn By: TOILmodular	

CONNECTIONS BETWEEN MAIN AND CONTROL BOARD

 CONNECTORS MAIN BOARD

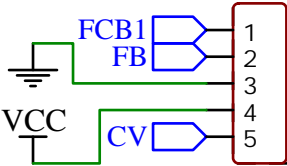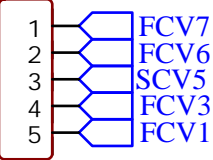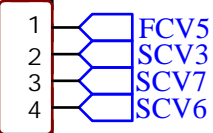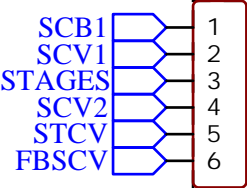

CONNECTORS CONTROL BOARD

 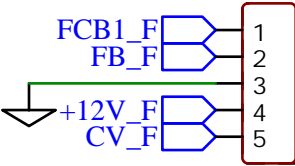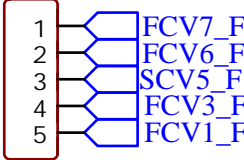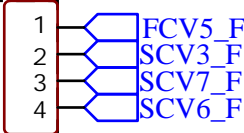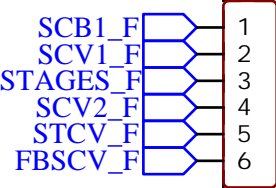

TITLE: VOYAGER		REV: 1.0
	Company:	Sheet: 6/6
	Date: 2025-07-17 Drawn By: TOILmodular	