


Root Tutorial

1. The firmware needs to be upgraded to version V1.1.0.12 or higher version. After the upgrade is completed, it will automatically reboot.

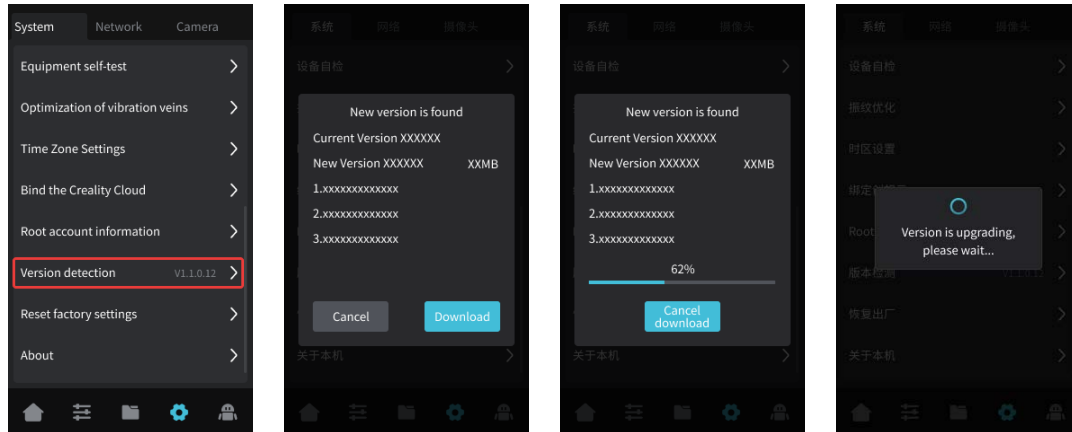

2. Enable Root

Note: If root access is required, you must agree to the disclaimer, otherwise the machine will not initiate the SSH service.

Note: Rooting may cause malfunction of certain features in the machine. Please use it with caution.

