


# RFThings NewUCA Board Ver 3.8

## Arduino Core Installation Guide


Document's Rev 1.0


### **Step 1.** Download & Install the latest Arduino IDE ([Arduino IDE 1.8.15](#))

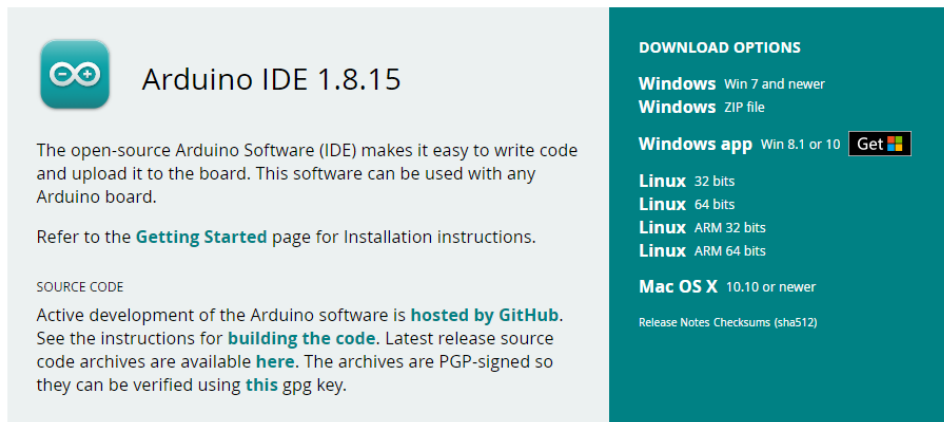

### **Step 2. Add Board Manager URL:**

In Arduino IDE, go to **File** ➔ **Preferences** (*Ctrl + ,*) and click the **Modify** button

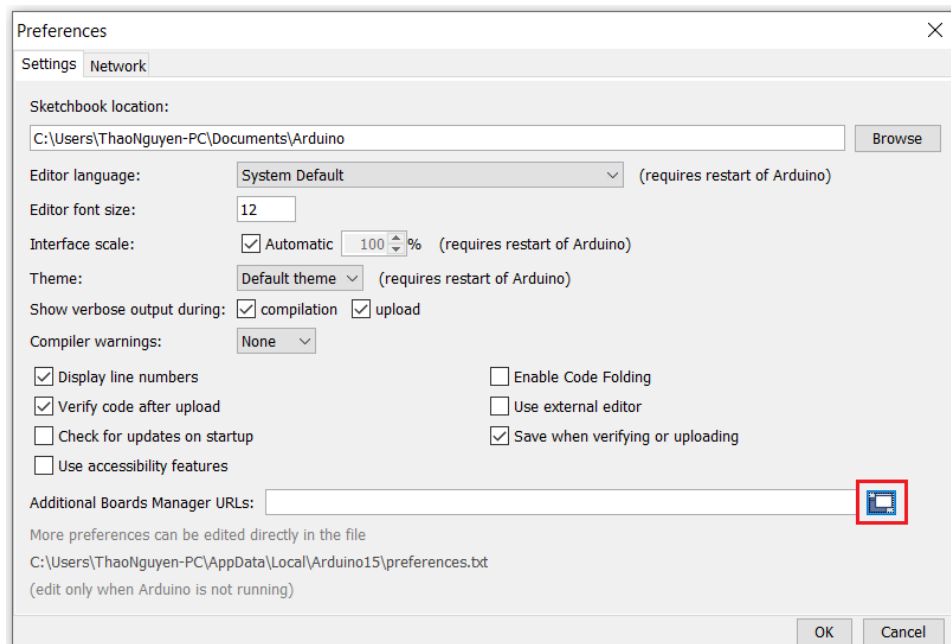

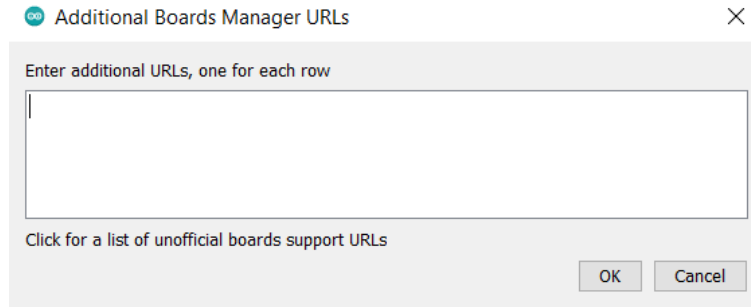


Paste the follow url into the URLs textbox: [https://rfthings.com.vn/wp-content/uploads/2021/07/package\\_rfthings-avr\\_index.json](https://rfthings.com.vn/wp-content/uploads/2021/07/package_rfthings-avr_index.json). Then select **OK**.

### **Step 3. Install RFThings AVR Boards from Board Manager**


Go to **Tools ➔ Board ➔ Board Manager ...**

Search for “**RFThings**” and install the **RFThings AVR Boards** platform

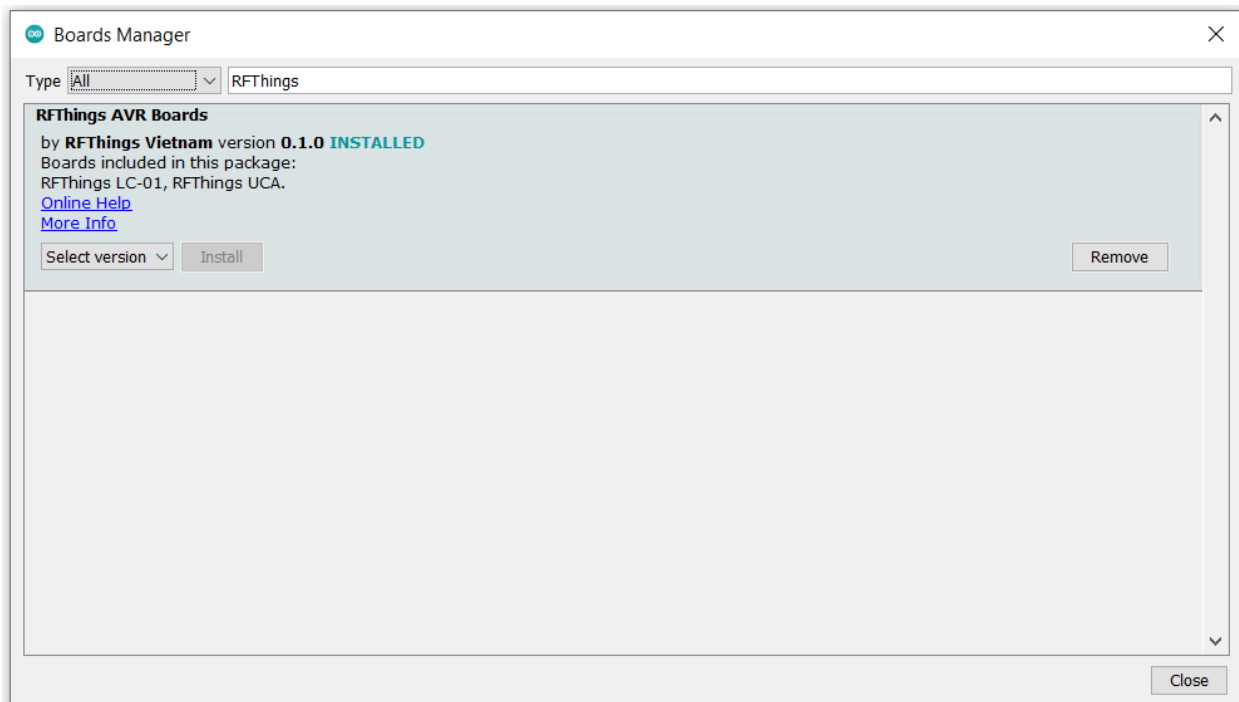

## Step 4. Configurations before uploading code

Set the Board Configurations as the following figure and start upload your code

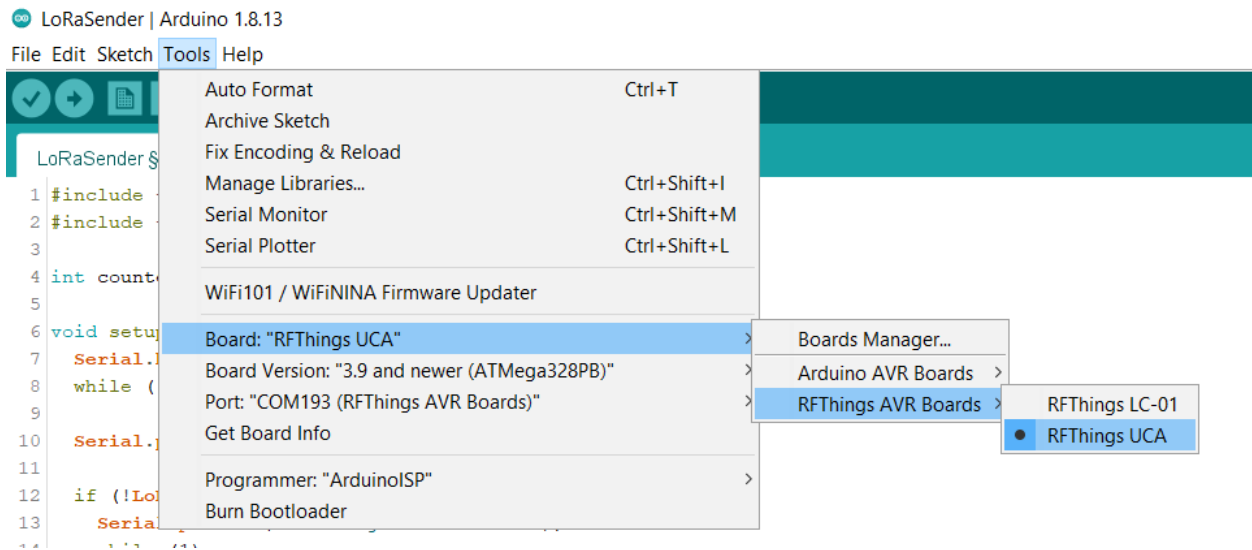

<===== END =====>