


Pocket Checklist

AH-64D AIRCRAFT

REV: 20220316

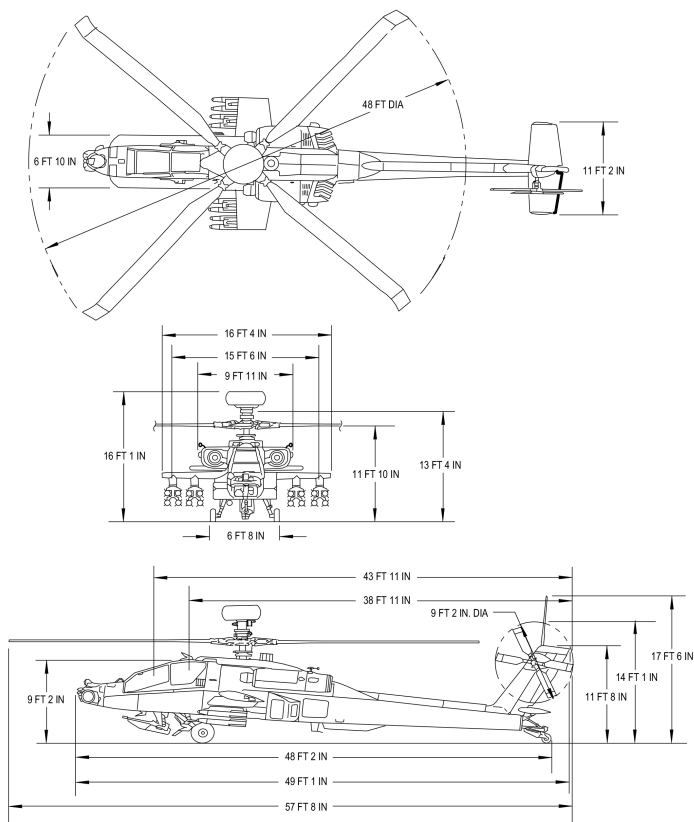

Procedures

Aircraft
Systems

Navigation
TSD

Comms
D/L

Defensive
Systems
ASE

Sensors

Weapons

Appendix



DISCLAIMER

This document represents a personal project and is intended for entertainment purposes only. Do not use for training purposes or in real life scenarios.

Contents

1	PROCEDURES	1-1
1.1	START-UP	1-3
1.1.1	INTERIOR CHECKS	1-3
1.1.2	APU-START	1-5
1.1.3	DMS SWEEP	1-6
1.1.4	ENGINE-START	1-8
1.1.5	PRE-TAXI	1-9
2	SYSTEMS	2-1
3	NAVIGATION	3-1
4	COMMUNICATION	4-1
5	ASE	5-1
5.1	RADAR SIGNAL DETECTOR	5-3
5.2	LASER SIGNAL DETECTOR	5-4
5.3	CMWS	5-5
5.4	FLARE / CHAFF	5-6
5.5	RADAR JAMMER	5-7
6	SENSORS	6-1
6.1	HMD	6-3
6.2	PNVS	6-4
6.3	TADS	6-5
6.4	FCR	6-6
6.5	RFI	6-7
7	WEAPONS	7-1
7.1	AWS – AREA WEAPON SYSTEM	7-3
7.1.1	OVERVIEW	7-3
7.1.2	GUN – TADS	7-3
7.1.3	GUN – HMD	7-3
7.1.4	GUN – FIXED	7-3
7.2	ARS – AERIAL ROCKET SUB-SYSTEM	7-4

7.2.1	OVERVIEW	7-4
7.2.2	ROCKET – COOP – DIRECT	7-4
7.2.3	ROCKET – COOP – INDIRECT	7-4
7.2.4	ROCKET – HMD	7-4
7.3	HELLFIRE MODULAR MISSILE SYSTEM	7-5
7.3.1	OVERVIEW	7-5
7.3.2	HELLFIRE – LOBL	7-5
7.3.3	HELLFIRE – LOAL – DIR	7-5
7.3.4	HELLFIRE – LOAL – LO / HI	7-5
7.3.5	HELLFIRE – RAPID	7-5
7.3.6	HELLFIRE – RIPPLE	7-5
7.3.7	HELLFIRE – REMOTE	7-5

8 APPENDIX

8-1

Chapter 1

PROCEDURES

Contents

1.1	START-UP	1-3
1.1.1	INTERIOR CHECKS	1-3
1.1.2	APU-START	1-5
1.1.3	DMS SWEEP	1-6
1.1.4	ENGINE-START	1-8
1.1.5	PRE-TAXI	1-9

1.1 START-UP

1.1.1 INTERIOR CHECKS

- | | |
|-----------------------------------|------------|
| • Canopy Door
(PLT/CPG) | As Desired |
|-----------------------------------|------------|

LEFT SIDE – BACK TO FRONT

- | | |
|------------------------------------|---|
| • Lights Panel
(PLT/CPG) | • EXT LT/INTR LT Panel As Required
(PLT)
• INTR LT Panel As Required
(CPG) |
|------------------------------------|---|

- | | |
|------------------------------------|-----|
| • Power Levers
(PLT/CPG) | OFF |
|------------------------------------|-----|

- | | |
|---|-----|
| • ENG START
Switches (PLT) | OFF |
|---|-----|

- | | |
|----------------------------------|-----|
| • RTR BRK Switch
(PLT) | OFF |
|----------------------------------|-----|

- | | |
|---|-----|
| • NVS MODE
Switch
(PLT/CPG) | OFF |
|---|-----|

FRONT PANEL – LEFT TO RIGHT

- | | |
|---|------------|
| • KU Brightness
Knob (PLT/CPG) | As Desired |
|---|------------|

- | | |
|-------------------------------|---------------------|
| • VIDEO Panel
(PLT) | Knobs at 12 o'clock |
|-------------------------------|---------------------|

- | | |
|--|------------|
| • MPD/EUFD
Brightness Knob
(PLT/CPG) | As Desired |
|--|------------|

- | | |
|---------------------|--|
| • CMWS (PLT) | • CMWS Control Indicator PWR OFF
• CMWS/NAV Switch CMWS
• BYPASS/AUTO Switch AUTO
• JETTISON Switch OFF |
|---------------------|--|

- | | |
|-----------------------------------|-----|
| • TEDAC R Grip LT
(CPG) | OFF |
|-----------------------------------|-----|

- | | |
|------------------------------|-----------------|
| • PARK BRAKE
(PLT) | SET, Handle out |
|------------------------------|-----------------|

- | | |
|--|--------------|
| • Standby Instru-
ments (PLT) | Check, caged |
|--|--------------|

RIGHT SIDE – FRONT TO BACK

• COMM Panel (PLT/CPG)	As Desired
• HDU (PLT/CPG)	As Desired

1.1.2 APU-START

PRE APU START

1. MSTR IGN Switch (PLT)	BATT
2. Searchlight (PLT)	As Required
3. TAIL WHEEL Button (PLT)	Locked, UNLOCKED Light is off
4. EMERG HYD Button (PLT/CPG)	Verify ON Light not illuminated
5. Cautions (PLT/CPG)	Check MSTR WARN, MSTR CAUT, EUFD
6. Fire Test (PLT/CPG)	<p>(a) FIRE DET/EXTG TEST Position 1 (PLT) (b) FIRE DET/EXTG TEST Position 2 (CPG)</p> <p><i>In each position, both crewmembers should check the following</i></p> <ul style="list-style-type: none"> • MSTR WARN illuminated • ENG 1 FIRE illuminated • APU FIRE illuminated • ENG 2 FIRE illuminated • AFT DECK FIRE EUFD Warning • Voice Warning System activates

APU START

7. APU (PLT)	<p>(a) APU Button Press & Release (b) EUFD Observe Advisories</p> <ul style="list-style-type: none"> • APU START • APU POWER ON • ACCUM OIL PRESS LO
---------------------	---

POST APU START

8. Canopy (PLT/CPG)	As Desired
9. DTU Page (PLT/CPG)	Select Load
10. Menu Page (PLT/CPG)	Perform DMS Sweep

1.1.3 DMS SWEEP

NOTE

- **Recommended Technique:** Clockwise from top right of any page
- Exact sweep may vary based on mission requirements

<ul style="list-style-type: none"> • 'M' Page (PLT/CPG) 	<ul style="list-style-type: none"> • ASE-UTIL <ul style="list-style-type: none"> – RLWR VOICE As Desired – Chaff Settings As Desired – CHAFF Mode As Desired • AUTOPAGE As Desired
<ul style="list-style-type: none"> • TSD Page (PLT/CPG) 	<ul style="list-style-type: none"> • SHOW <ul style="list-style-type: none"> – PHASE Select ATK – THRT SHOW As Desired – COORD SHOW As Desired – PHASE Select NAV – COORD SHOW As Desired • UTIL <ul style="list-style-type: none"> – TIME As Desired – SYSTEM TIME As Desired • SCALE As Desired • CTR As Desired • RTE <ul style="list-style-type: none"> – DIR Set Desired Point • MAP <ul style="list-style-type: none"> – GRID As Desired – ORIENT As Desired – COLOR BAND As Desired – TYPE As Desired • INST <ul style="list-style-type: none"> – UTIL Select – ADF ON <p style="text-align: right;">configure as necessary</p>

- **WPN Page**
(PLT/CPG)

- GRAYSCALE Select & Optimize
- BORESIGHT Select & Perform
(Both Crewmembers)
- GUN
 - BURST LIMIT As Desired
 - MODE As Desired
- MSL
 - CODE Select
 - SET Select
 - LRFD As Desired
 - LST As Desired
- PRI/ALT As Required
- RKT
 - INVENTORY As Desired
 - QTY As Desired
- ACQ As Desired
- MANRNG As Desired
(‘A’ for Auto-Range)

- **A/C Page**
(PLT/CPG)

- FLT-SET
 - HI / LO As Desired
 - UNIT As Desired
 - ALT or PRES As Desired
 - UNIT As Desired
- FUEL-CHECK
 - Timer As Desired
- PERF-WT
 - AC BASIC Verify/Update
 - LEFT AFT BAY Verify/Update
 - SURVIVAL KIT BAY Verify/Update
 - PILOT Verify/Update
 - CPG Verify/Update
- UTIL
 - SYSTEM As Desired

- **COMM Page**
(PLT/CPG)

- MAN
 - VHF FREQ Set
 - UHF FREQ Set
 - FM1 FREQ Set
 - FM2 FREQ Set

NOTE

- **Recommended MPD Setup:** Right MPD set to TSD, Left MPD used as “Working MPD”

1.1.4 ENGINE-START

PRE ENGINE START

1. NVS Mode Switch (PLT/CPG)	As Desired
2. Standby ADI (PLT)	Uncage

ENGINE START

3. RTR BRK Switch (PLT)	OFF or LOCK for rotor lock start
4. EXT LT ANTI COL (PLT)	WHT for day, RED for night
5. ENG 1 Start (PLT)	(a) ENG 1 START Switch START (b) EUFD ENG 1 START (c) ENG TGT < 80 deg C (d) Power Lever IDLE (e) Monitor <ul style="list-style-type: none"> • TGT • NG • MSTR WARN/CAUT • EUFD
6. ENG 2 Start (PLT)	(a) ENG 2 START Switch START (b) EUFD ENG 2 START (c) ENG TGT < 80 deg C (d) Power Lever IDLE (e) Monitor <ul style="list-style-type: none"> • TGT • NG • MSTR WARN/CAUT • EUFD
7. RTR BRK Switch (PLT)	OFF

8. Stabilized Parameters (PLT)	<ul style="list-style-type: none">• ENG 1 & 2 OIL PRES – < 70 PSI• NGB TEMP – > 20 deg C
9. Power Levers (PLT)	Advance smoothly to FLY
10. NP & NR (PLT)	Verify 101%
11. APU (PLT)	OFF

1.1.5 PRE-TAXI

1. EXT LT Panel (PLT)	Verify NAV lights set to BRT , ANTI-COL Set as required
2. Searchlight (PLT/CPG)	As Required
3. PARKING BRAKE (PLT)	Released , Handle in
4. TAIL WHEEL Button (PLT)	UNLOCK as desired

Chapter 2

SYSTEMS

Systems



Chapter 3

NAVIGATION



Chapter 4

COMMUNICATION

Comms



Chapter 5

ASE

Contents

5.1	RADAR SIGNAL DETECTOR	5-3
5.2	LASER SIGNAL DETECTOR	5-4
5.3	CMWS	5-5
5.4	FLARE / CHAFF	5-6
5.5	RADAR JAMMER	5-7

5.1 RADAR SIGNAL DETECTOR

5.2 LASER SIGNAL DETECTOR

5.3 CMWS

5.4 FLARE / CHAFF

5.5 RADAR JAMMER



Chapter 6

SENSORS

Contents

6.1	HMD	6-3
6.2	PNVS	6-4
6.3	TADS	6-5
6.4	FCR	6-6
6.5	RFI	6-7

6.1 HMD

6.2 PNVS

6.3 TADS

6.4 FCR

6.5 RFI

Chapter 7

WEAPONS

Contents

7.1	AWS – AREA WEAPON SYSTEM	7-3
7.1.1	OVERVIEW	7-3
7.1.2	GUN – TADS	7-3
7.1.3	GUN – HMD	7-3
7.1.4	GUN – FIXED	7-3
7.2	ARS – AERIAL ROCKET SUB-SYSTEM	7-4
7.2.1	OVERVIEW	7-4
7.2.2	ROCKET – COOP – DIRECT	7-4
7.2.3	ROCKET – COOP – INDIRECT	7-4
7.2.4	ROCKET – HMD	7-4
7.3	HELLFIRE MODULAR MISSILE SYSTEM	7-5
7.3.1	OVERVIEW	7-5
7.3.2	HELLFIRE – LOBL	7-5
7.3.3	HELLFIRE – LOAL – DIR	7-5
7.3.4	HELLFIRE – LOAL – LO / HI	7-5
7.3.5	HELLFIRE – RAPID	7-5
7.3.6	HELLFIRE – RIPPLE	7-5
7.3.7	HELLFIRE – REMOTE	7-5

7.1 AWS – AREA WEAPON SYSTEM

7.1.1 OVERVIEW

7.1.2 GUN – TADS

7.1.3 GUN – HMD

7.1.4 GUN – FIXED

7.2 ARS – AERIAL ROCKET SUB-SYSTEM

7.2.1 OVERVIEW

7.2.2 ROCKET – COOP – DIRECT

7.2.3 ROCKET – COOP – INDIRECT

7.2.4 ROCKET – HMD

7.3 HELLFIRE MODULAR MISSILE SYSTEM

7.3.1 OVERVIEW

7.3.2 HELLFIRE – LOBL

7.3.3 HELLFIRE – LOAL – DIR

7.3.4 HELLFIRE – LOAL – LO / HI

7.3.5 HELLFIRE – RAPID

7.3.6 HELLFIRE – RIPPLE

7.3.7 HELLFIRE – REMOTE



Chapter 8

APPENDIX

