 
 


Install Slic3r and Import TheLab's Slic3r Configuration File Bundle for Windows


1. Download [Slic3r](#)
2. Unzip the Slic3r zip file on your computer (Suggestion: *C:\Program Files\Slic3r*)
3. Open up the folder you unzipped the file into and double-click the Slic3r executable (*slic3r.exe*)

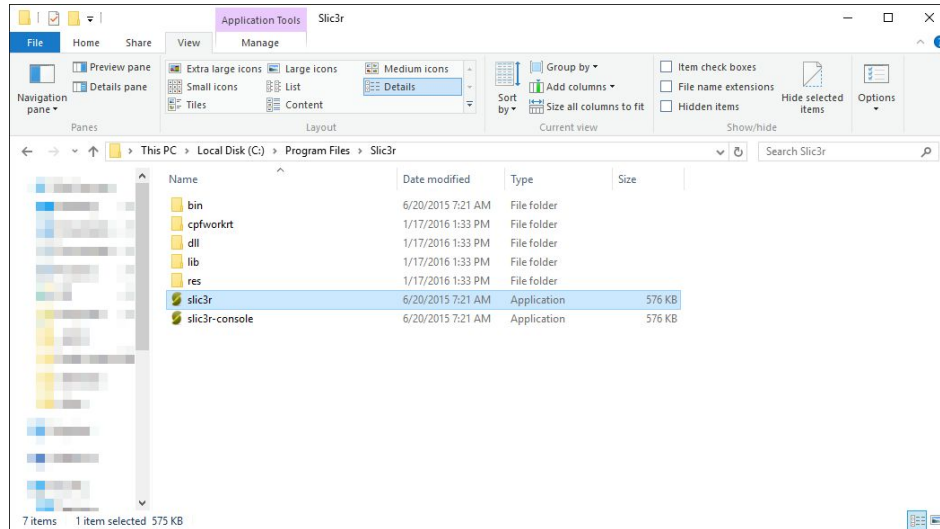

4. Once Slic3r opens, cancel out of the **Configuration Wizard**

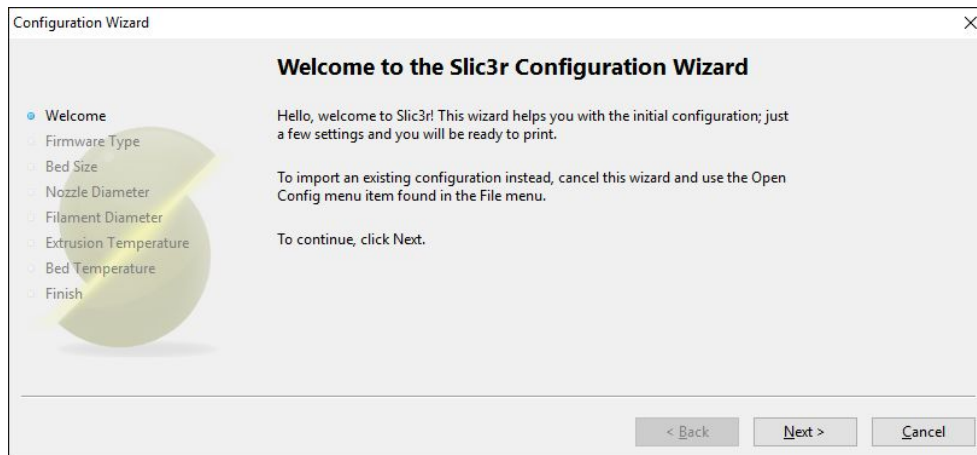

5. Select **File->Load Config Bundle...**
6. In the Open File Dialog, paste the GitHub URL for the raw configuration file bundle:
https://raw.githubusercontent.com/TheLab-ms/3d-printing/master/Slic3r_config_bundle.in

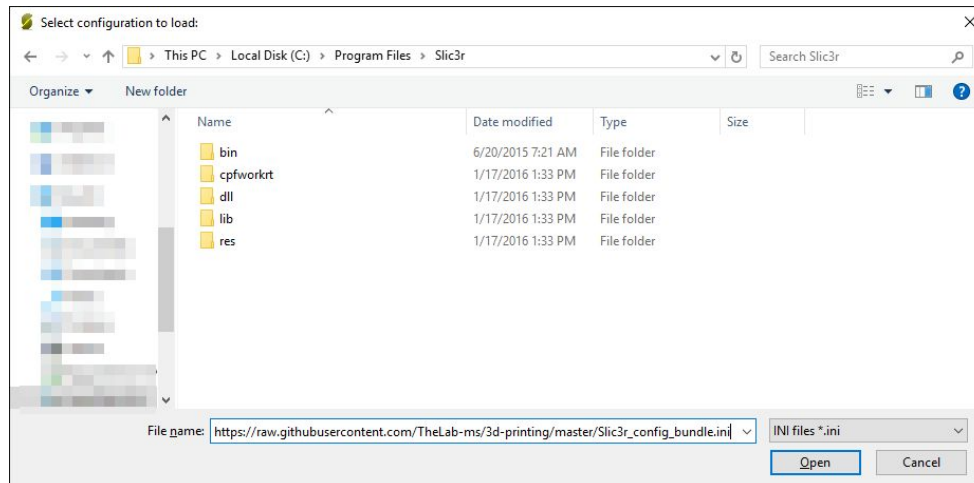

7. Click **OK** and be a bit patient. Slic3r will pull the latest configuration file bundle from GitHub and import its settings.

