

## AN53: TMC4671 PI Tuning

Document Revision V1.2 • 2019-June-24

This appnote describes how to tune the **TMC4671** using the **USB-2-RTMI** (RTMI) step by step. The interface converter is based on the FTDI FT4222H USB High-Speed to SPI bridge. It is USB bus powered and offers the same tiny 10pin connector with same pin assignment for the RTMI interface as can be found on the TMC4671 evaluation board. The TMCL-IDE provides the software tools to tune the different control loops. Thus the RTMI is an easy way to debug, monitor, and tune the motor drive in system.

### Contents

<b>1 Items used</b>	<b>2</b>
<b>2 USB-2-RTMI Driver Installation</b>	<b>3</b>
<b>3 Basic Configuration</b>	<b>3</b>
<b>4 Tuning</b>	<b>3</b>
4.1 Overview . . . . .	3
4.2 Limits . . . . .	5
<b>5 Tuning of the current loop</b>	<b>5</b>
5.1 Torque/Flux Tuning Tool (Open Loop) . . . . .	5
5.2 Step Response Toolbox (Closed Loop) . . . . .	13
5.3 Bode Plot . . . . .	15
<b>6 Tuning of the velocity loop</b>	<b>18</b>
<b>7 Tuning of the position loop</b>	<b>22</b>
7.1 Step Response Tool . . . . .	22
7.2 Motion Controller . . . . .	25
<b>8 Summary</b>	<b>27</b>
<b>9 Revision History</b>	<b>28</b>



## 1 Items used

- BLDC motor (e.g. [QBL4208-61-04-013-1024-AT](#))
- [TMC4671-EVAL-Kit](#)
- [USB-2-RTMI](#)
- [TMCL-IDE \(3.0.24\)](#)
- Power Supply (24V)
- Micro-USB Cable
- Mini-USB-Cable

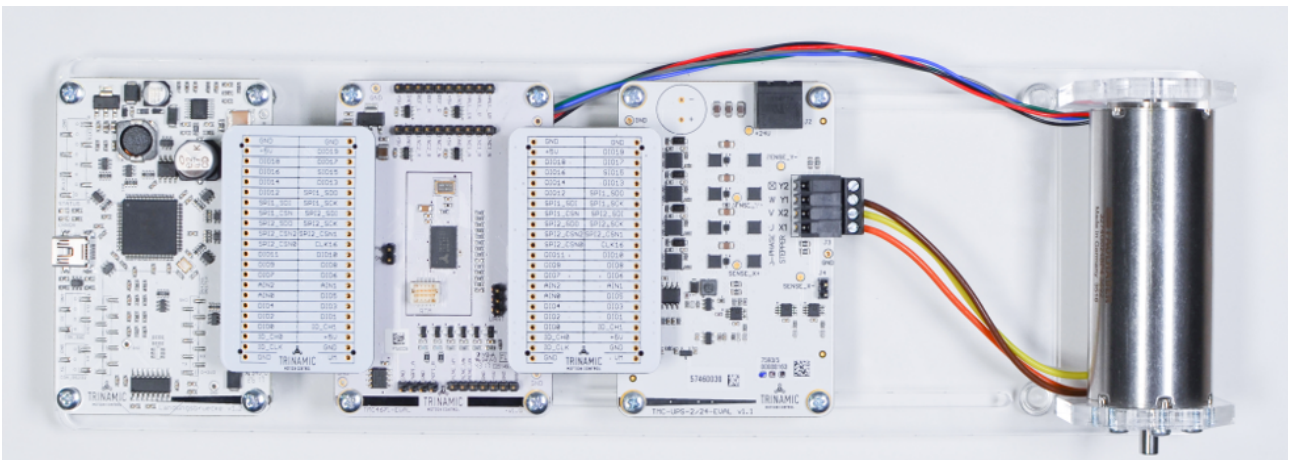


Figure 1: TMC4671-EVAL Kit and BLDC motor

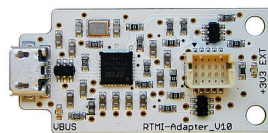


Figure 2: USB-2-RTMI



## 2 USB-2-RTMI Driver Installation

Refer to [USB-2-RTMI guide](#) for driver installation.

## 3 Basic Configuration

Before using the Tuning tool, the TMC4671 must be configured (e.g. with the TMC4671 Wizard).

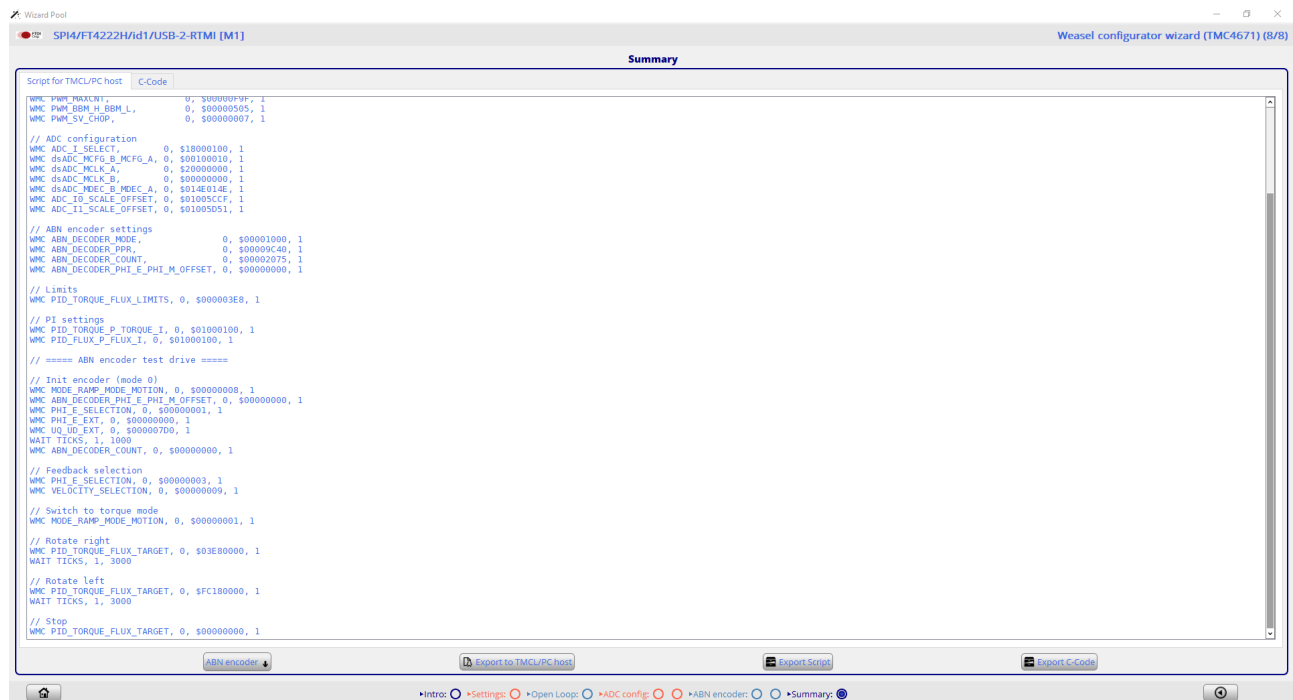


Figure 3: TMCL-IDE: TMC4671 Wizard - configuration code

After the basic configuration the parameters can be saved as C-Code or .tpc script

- In the summary choose ABN encoder
- Export the Script with *Export Script*

## 4 Tuning

### 4.1 Overview

The TMC4671 supports three main modes of operation, which requires PI Tuning:

- current mode
- velocity mode
- position mode



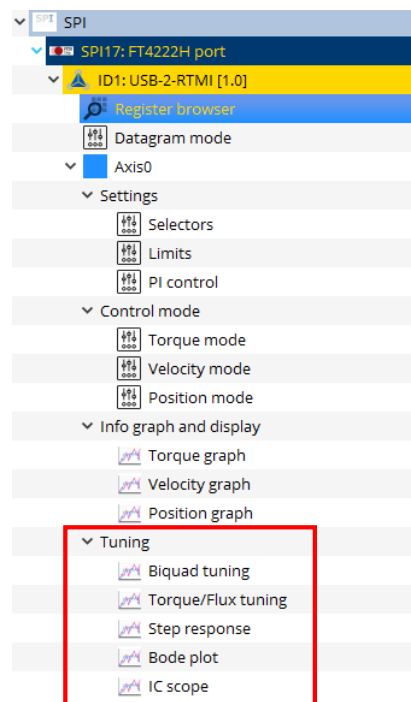


Figure 5: PI tuning tools

Each mode can be tuned by the PI controller for every loop. Below picture gives an overview:

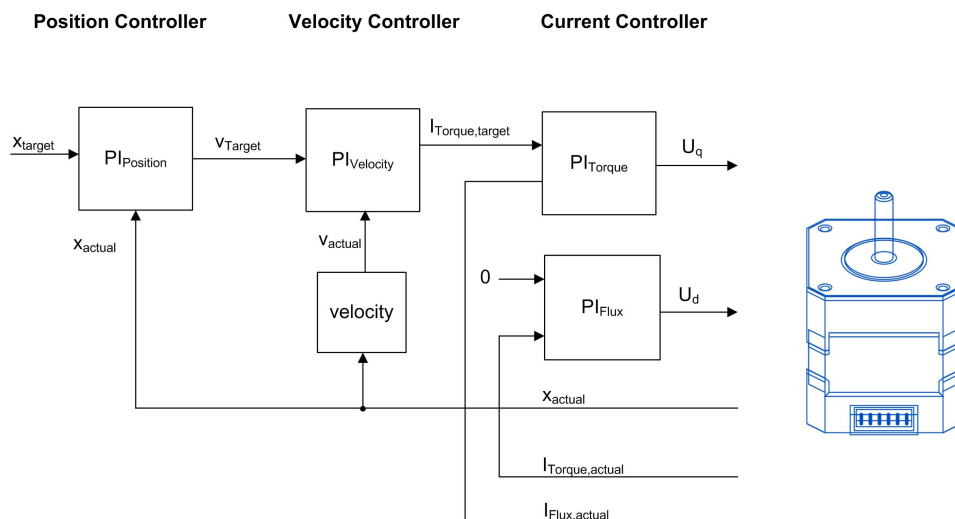


Figure 4: TMC4671 control loops

The loops are cascaded, thus the outer loops depends on the tuning of the inner loop. For example the current loop must be tuned before using the velocity loop. For the tuning of every PI controller tuning tools are provided. In the TMCL-IDE they can be accessed through the Tuning group

The Tuning tools are:

- Biquad tuning: Allows to filter the target values of each loop
- Torque/Flux tuning: Identifies the PI parameters by open loop step response



- Step response: Closed Loop step responses for all control loops
- Bode plot: Bode plot of all loops
- IC scope: Monitoring, Read out of register values with PWM frequency

## 4.2 Limits

- Before using the Tuning tools it is recommended to set the output of the control voltage to maximum (set the PIDOUT\_UQ\_UD\_LIMITS = 32767). For stepper the default value is sufficient.
- Set on the PID\_TORQUE\_FLUX\_LIMITS to limit the maximum current of the application.
- Set PID\_POSITION\_LIMIT\_HIGH = 2 147 400 000 (don't exceed maximum register value)
- Set PID\_POSITION\_LIMIT\_LOW = -2 147 400 000

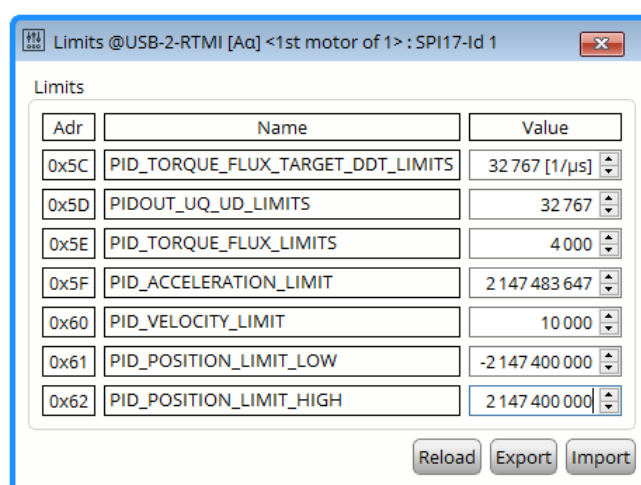


Figure 6: TMCL-IDE: TMC4671 Limits

## 5 Tuning of the current loop

The current loop consists of two control loops: One for torque (current) and one for flux (current). Both loops can be tuned with the RTMI tools *Torque Flux/Tuning* tool and *Step response* tool. The Torque/Flux tool determines the PI parameters in an open loop mode. While the Step response tool is used to analyze the closed loop behaviour.

### 5.1 Torque/Flux Tuning Tool (Open Loop)

The Torque Flux/Tuning tool will automatically determine start values for the PI parameters by identifying the motor parameters. With this procedure, voltage steps are set and the current step response is evaluated. Only the flux current is stimulated for minimal/no motor movement in this tuning phase. It is recommended to use a PWM frequency of 25kHz for best identification results.

1. Connect the RTMI to the TMC4671-EVAL and the PC.
2. Open the Torque/Flux Tuning Tool.
3. Start the identification by using the Start button.



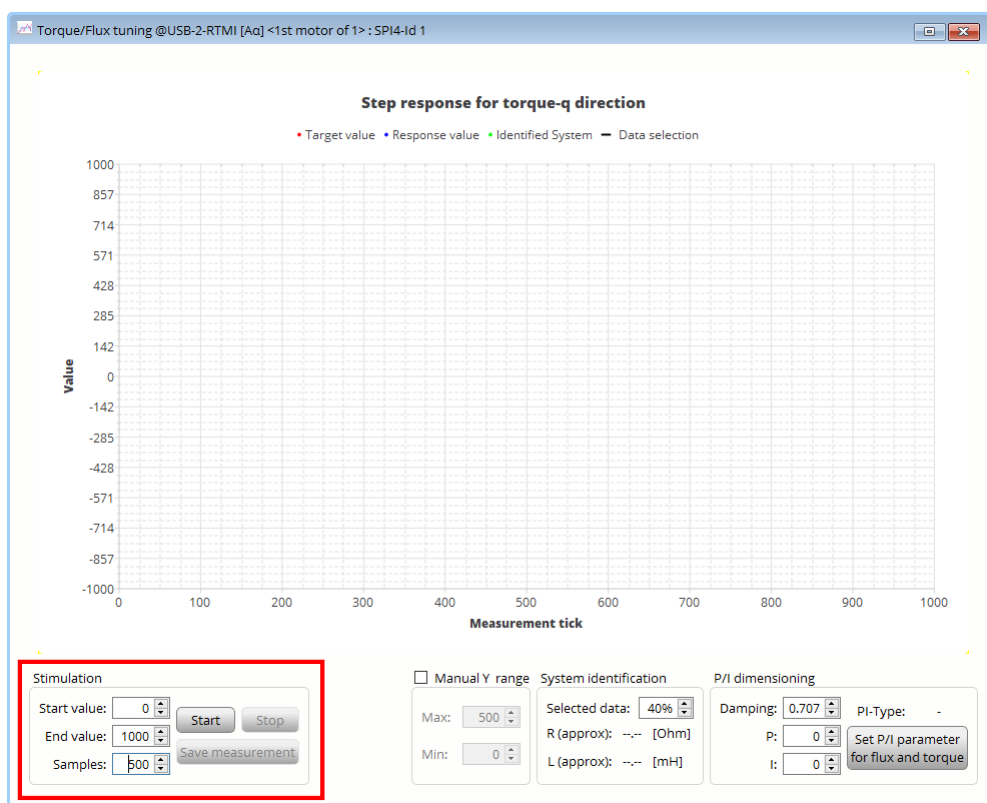


Figure 7: Configuration and start of the step response



4. The response of the current on the voltage step is shown as well as the identified system

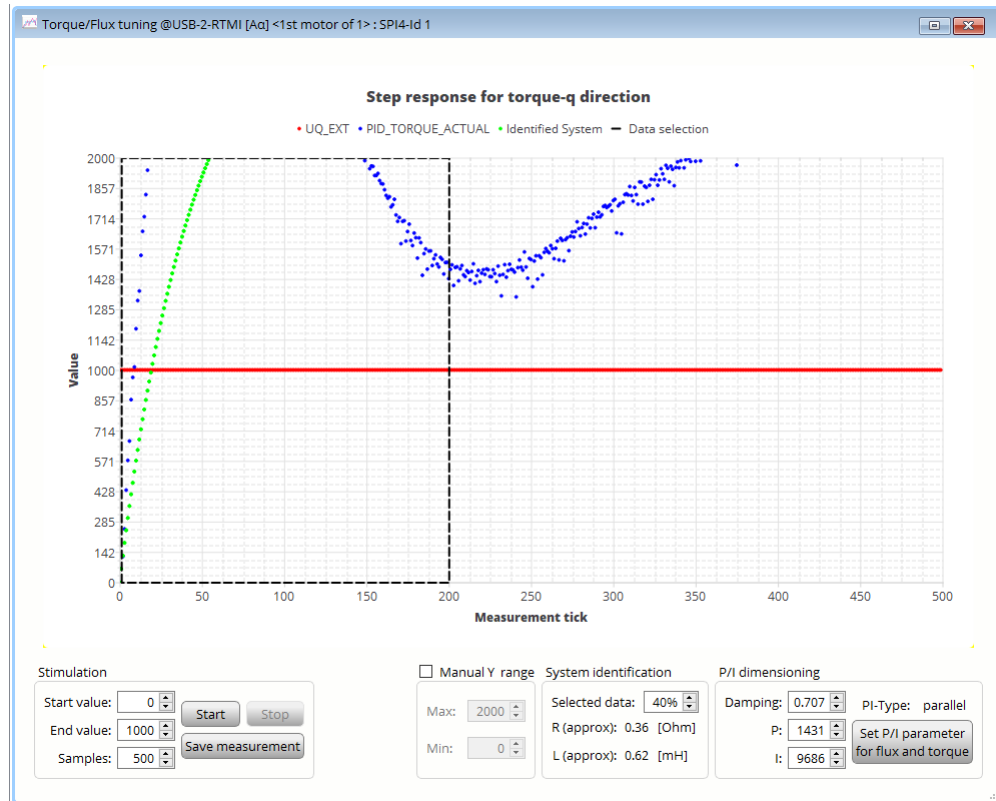


Figure 8: first step response

5. Check and adapt the Manual Y range for a better view
6. Re-Identify the system using the Start Button. After the motor has been aligned it will give better identification results.
7. Adapt the window of the Selected Data if needed. In most cases the default settings will give good results.
  - The dynamic step response should be covered in the identification area (dashed frame).



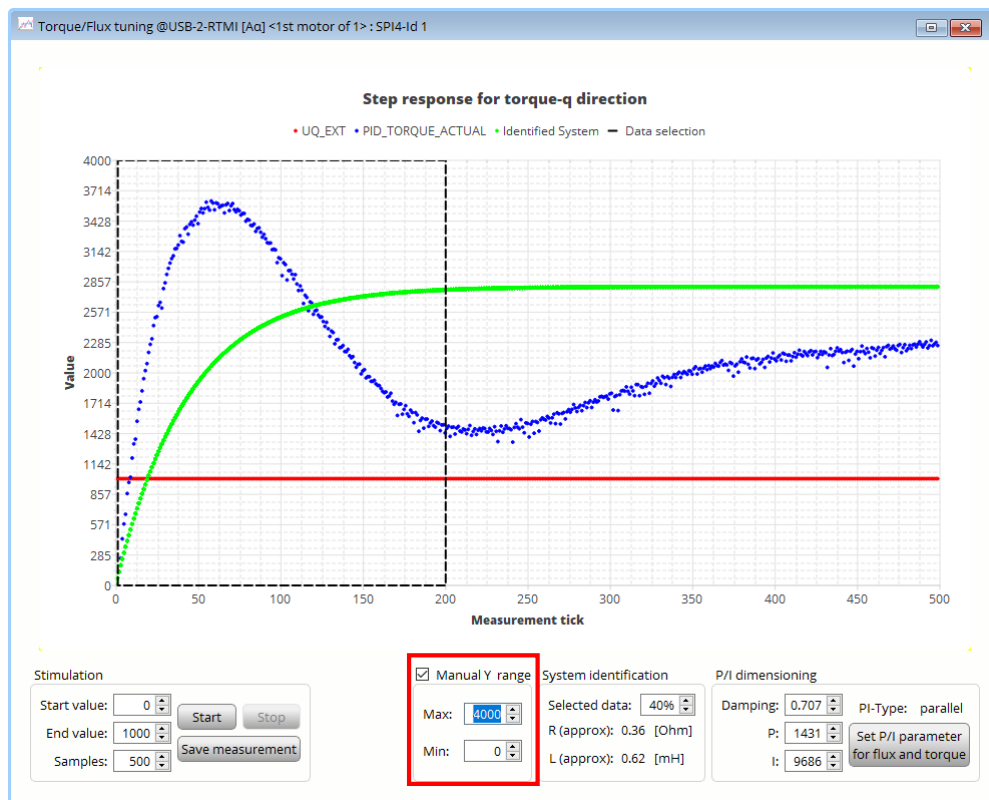


Figure 9: adapted Y range





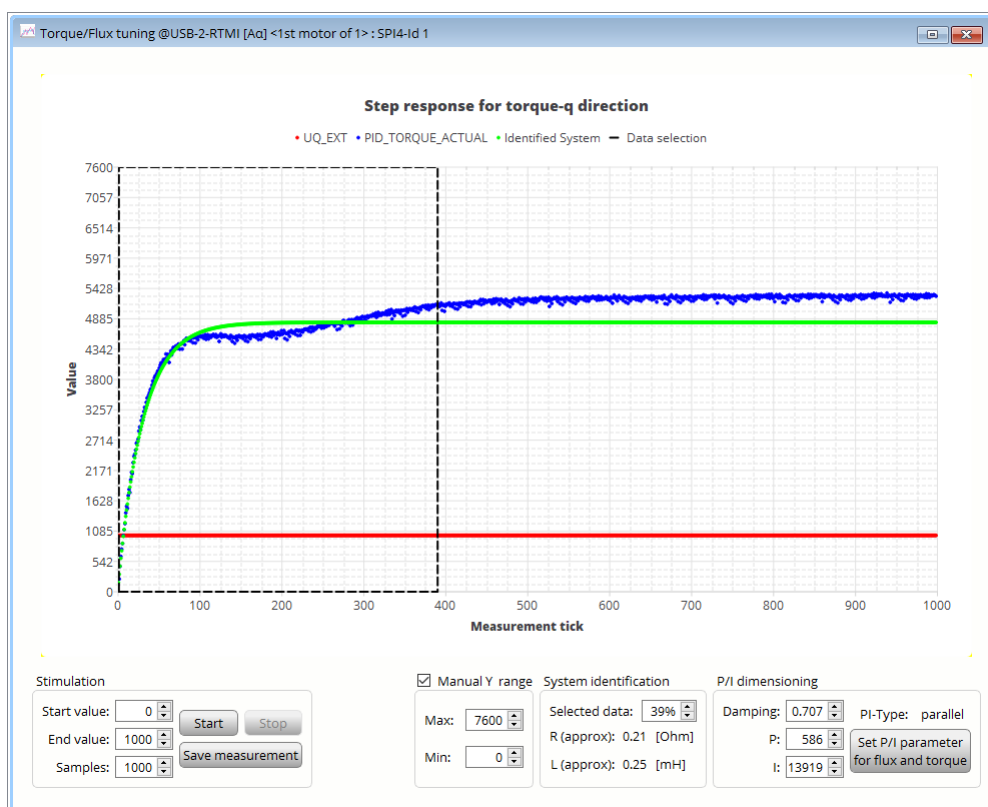


Figure 10: Step response: identification area good

- In figure 11 the step response is not fully covered. Identification area is too small.



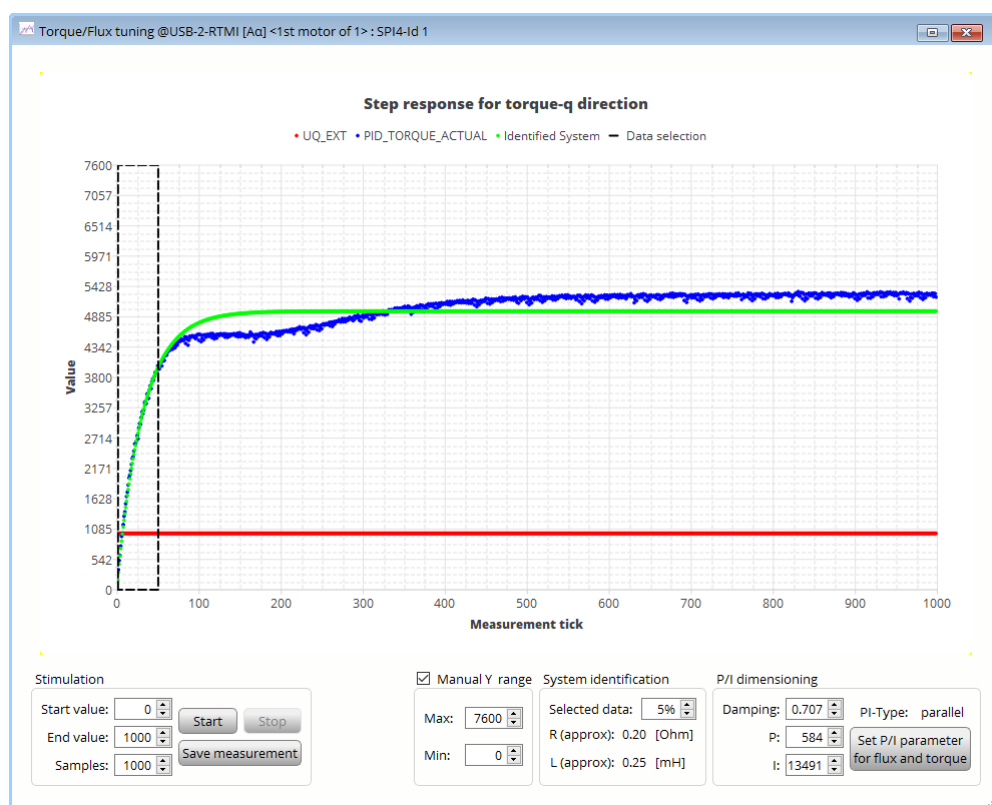


Figure 11: Step response: identification area too small

- In figure 12 the Identification area is too large




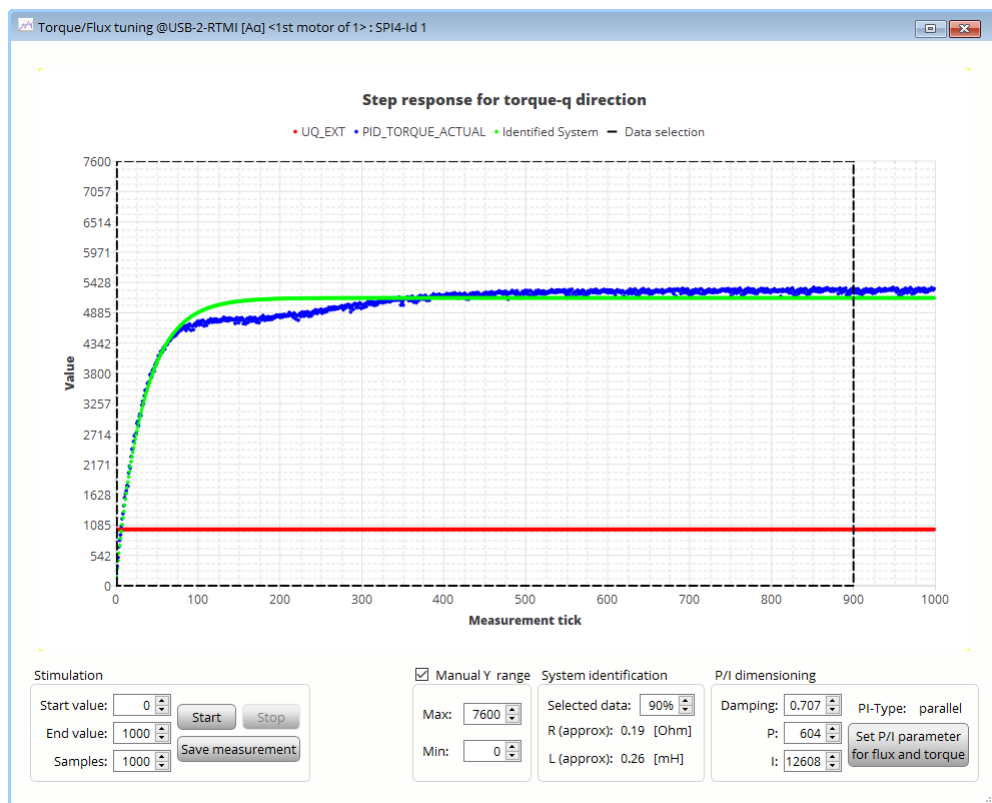


Figure 12: Step response: identification area too big


## 8. Write the identified PI values to the current controller

- Use the following button to update the PI values to the current controller

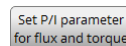

- Note: For very high values identified I-parameter 0 is displayed. In this case the I parameter needs to be set manually (e.g. to 18000).
- Confirm the new PI values with the PI control box. The Reload button may have to be used to update the values.



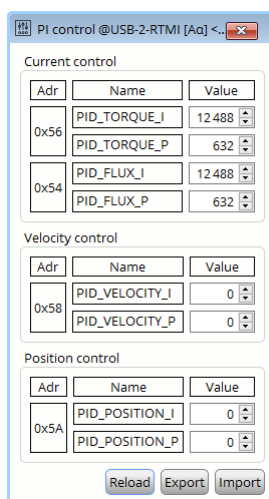

The screenshot shows a software window titled "PI control @USB-2-RTMI [Aq]". It contains three sections for configuring PID parameters:

- Current control:** A table with 4 rows and 3 columns (Adr, Name, Value).

Adr	Name	Value
0x56	PID_TORQUE_I	12 488
	PID_TORQUE_P	632
0x54	PID_FLUX_I	12 488
	PID_FLUX_P	632
- Velocity control:** A table with 2 rows and 3 columns (Adr, Name, Value).

Adr	Name	Value
0x58	PID_VELOCITY_I	0
	PID_VELOCITY_P	0
- Position control:** A table with 2 rows and 3 columns (Adr, Name, Value).

Adr	Name	Value
0x5A	PID_POSITION_I	0
	PID_POSITION_P	0

At the bottom of the window are three buttons: "Reload", "Export", and "Import".

*Figure 13: PI-Parameters*

## 5.2 Step Response Toolbox (Closed Loop)

In previous step the PI parameters of the Torque/Flux current loop were determined in open loop mode. Now the Step response tool will be used to analyze the closed loop behaviour.

(a) Open the Step response toolbox

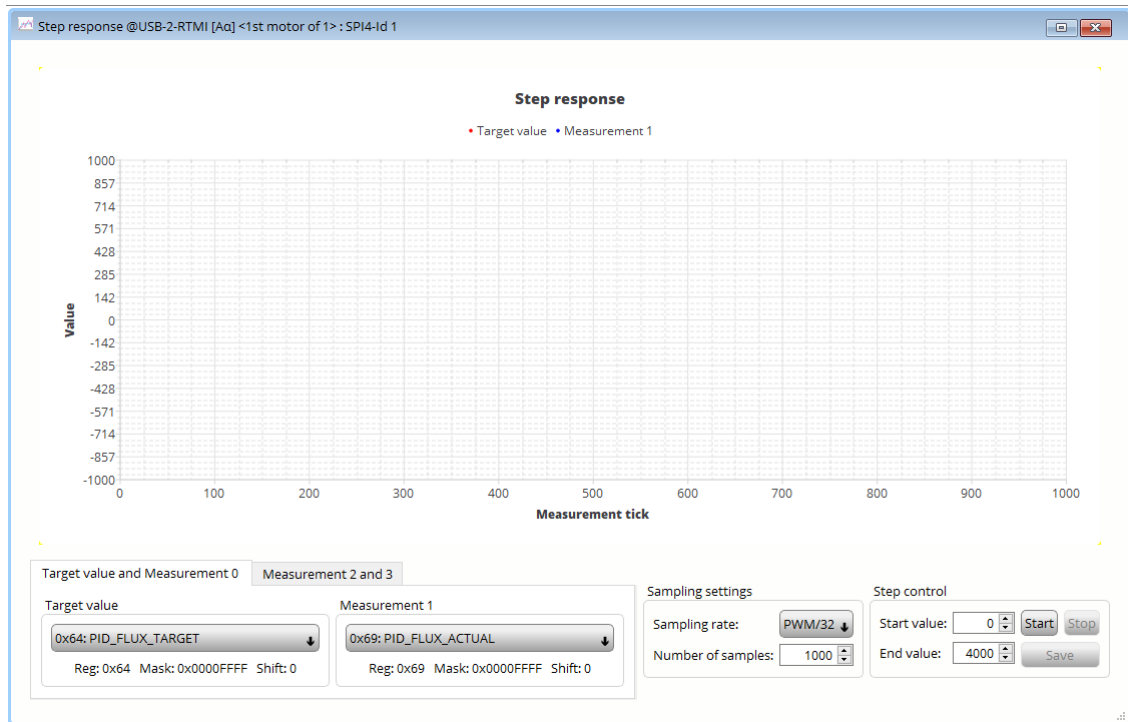



Figure 14: step response toolbox

(b) Configure the settings for flux current controller


- Target value: 0x64 PID\_FLUX\_TARGET
- Measurement 1: 0x69 PID\_FLUX\_ACTUAL
- Sampling rate: PWM
- Under Step Control
  - Set Start value = 0
  - Define end value for the flux target current (here 4000)
- Start the step response with the start button

(c) The actual current and the target current is shown.



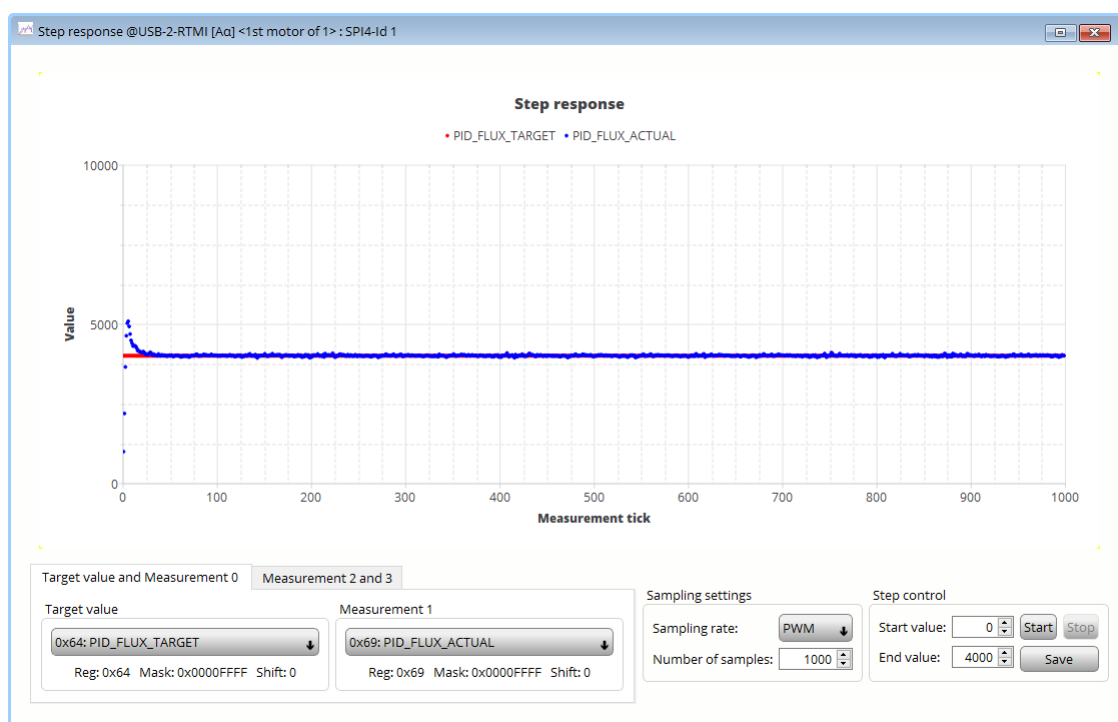

(d) Reduce the sample rate for better view

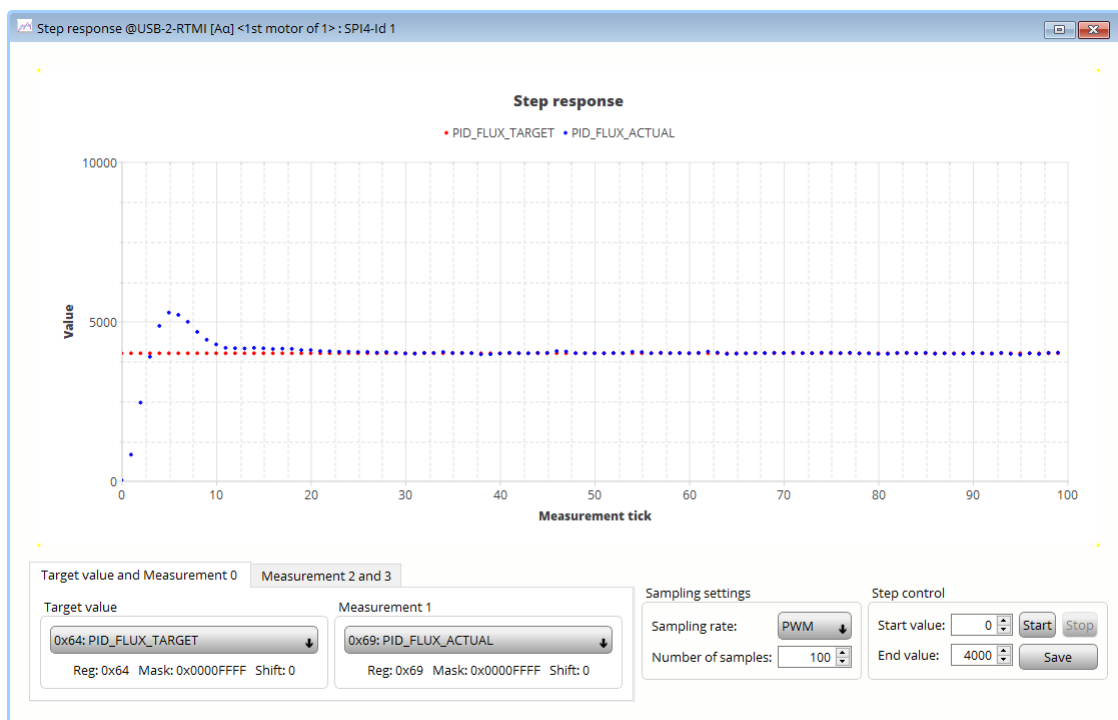

(e) Optimise the behaviour by varying P and I


(f) Repeat from step 2. With PID\_TORQUE\_TARGET and PID\_TORQUE\_ACTUAL



## 5.3 Bode Plot

The Bode Plot tool is used to check the current loop dynamics.

- (a) Open the Bode Plot tool
- (b) Select 1: torque control loop
- (c) Start the measurement with the Start button (leave other settings at default)
- (d) Comparison example: Two below measurement show the bode plots with tuned and untuned/default PI parameter.
- (e) Default PI parameter

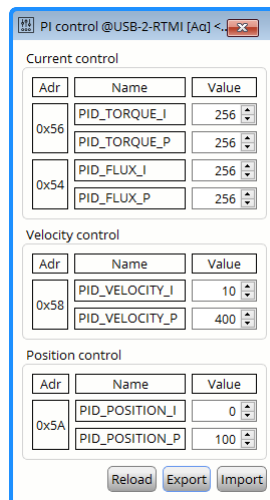

The screenshot shows a software window titled "PI control @USB-2-RTMI [Aa]". It contains three sections for configuring PID parameters: "Current control", "Velocity control", and "Position control". Each section has a table with columns for "Adr", "Name", and "Value".

Current control		
Adr	Name	Value
0x56	PID_TORQUE_I	256
	PID_TORQUE_P	256
0x54	PID_FLUX_I	256
	PID_FLUX_P	256

Velocity control		
Adr	Name	Value
0x58	PID_VELOCITY_I	10
	PID_VELOCITY_P	400

Position control		
Adr	Name	Value
0x5A	PID_POSITION_I	0
	PID_POSITION_P	100

At the bottom of the window are three buttons: "Reload", "Export", and "Import".

Figure 15: PI parameter



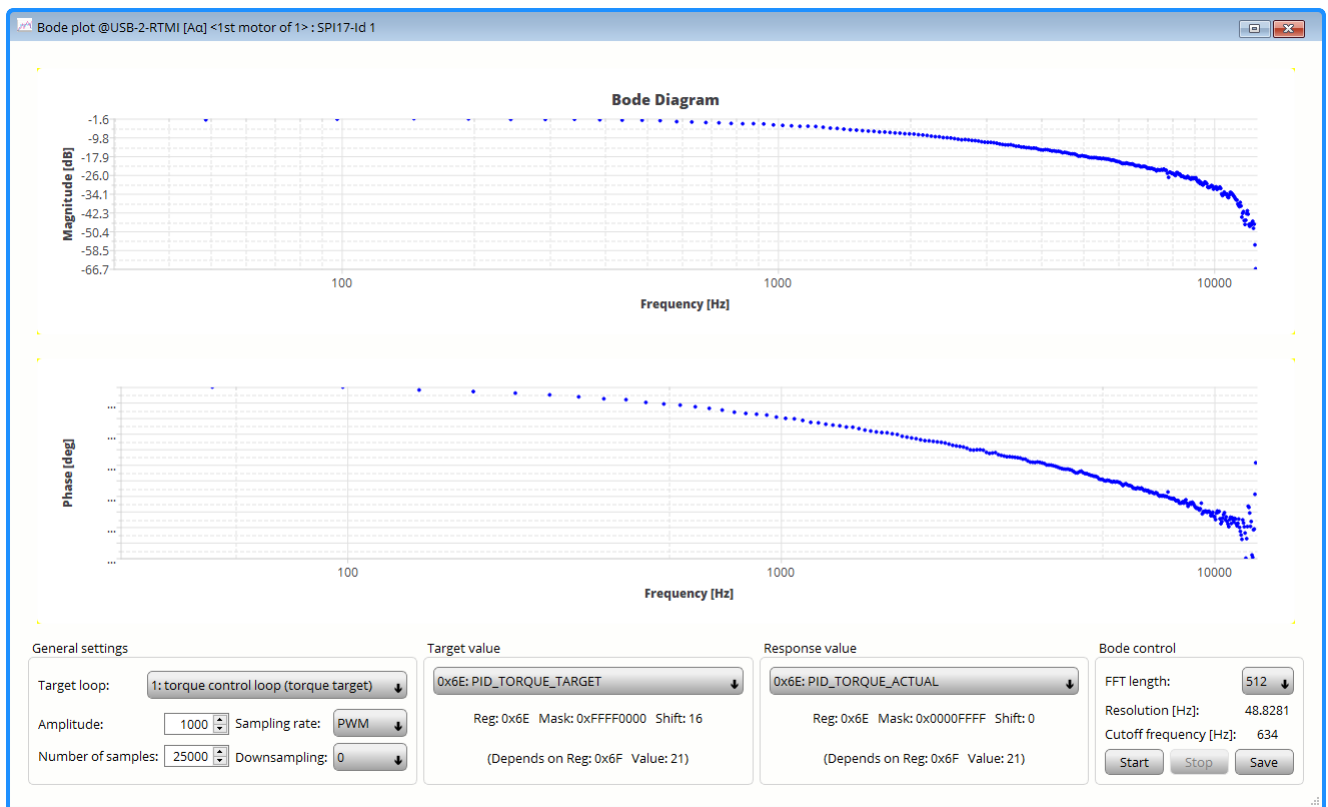


Figure 16: Bode diagram with default PI

## (f) Tuned PI Parameter

PI control @USB-2-RTMI [Aa] <- X

Current control

Adr	Name	Value
0x56	PID_TORQUE_I	12 858
	PID_TORQUE_P	596
0x54	PID_FLUX_I	12 858
	PID_FLUX_P	596

Velocity control

Adr	Name	Value
0x58	PID_VELOCITY_I	10
	PID_VELOCITY_P	400

Position control

Adr	Name	Value
0x5A	PID_POSITION_I	0
	PID_POSITION_P	100

Reload Export Import

Figure 17: PI parameter





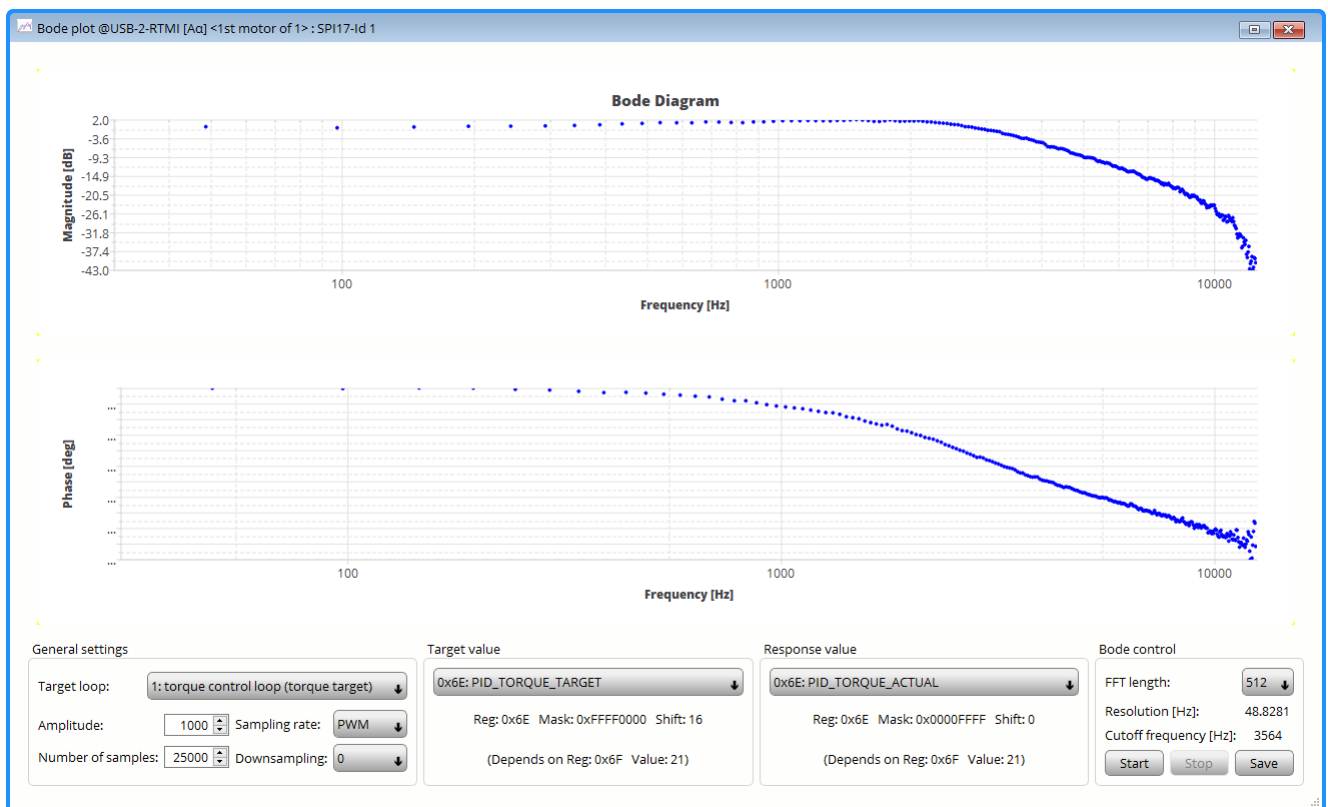


Figure 18: Bode diagram with tuned PI

(g) The tuned PI control system has a higher cutoff frequency and thus higher dynamics.



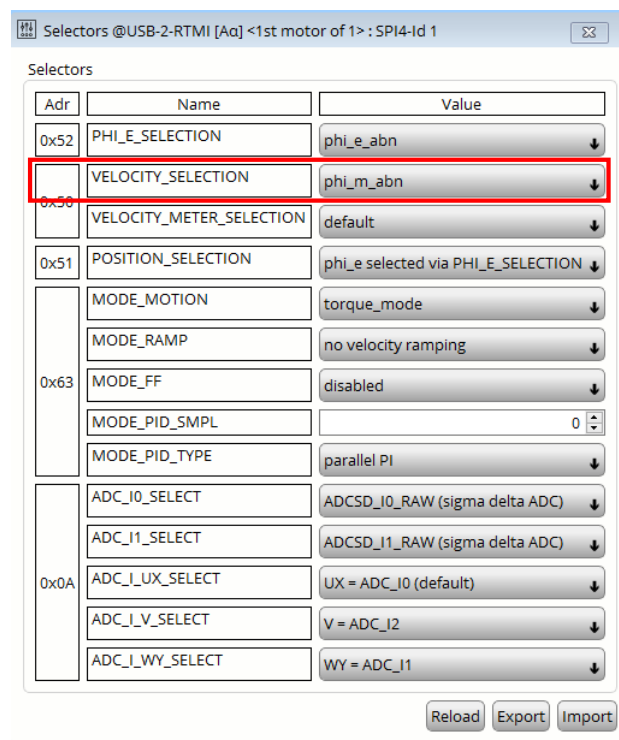


Figure 19: Selectors: Velocity Unit

## 6 Tuning of the velocity loop

In this section the velocity loop will be tuned. Precondition is the previous tuning of the current controller. To tune the velocity PI parameter the step response tool (closed loop) will be used.

- (a) For ease of use the velocity unit will be altered. In the selectors toolbox VELOCITY\_SELECTION (0x52) is changed from phi\_e\_selection to phi\_m\_abn.

- phi\_m: mechanical velocity is displayed and calculated in rpm
- phi\_e: electrical velocity is displayed and calculated in electrical periods

- (b) Setting of the PI value for the velocity loop

Start with a low P value; set I = 0

- 0x58: PID\_VELOCITY\_I = 0
- 0x58: PID\_VELOCITY\_P = 100



The screenshot shows a software window titled "PI control @USB-2-RTMI [Aq]". It contains three sections for configuring PID values:

- Current control:**

Adr	Name	Value
0x56	PID_TORQUE_I	12 858
	PID_TORQUE_P	596
0x54	PID_FLUX_I	12 858
	PID_FLUX_P	596
- Velocity control:**

Adr	Name	Value
0x58	PID_VELOCITY_I	0
	PID_VELOCITY_P	100
- Position control:**

Adr	Name	Value
0x5A	PID_POSITION_I	0
	PID_POSITION_P	0

At the bottom, there are buttons for "Reload", "Export", and "Import".

Figure 20: PI Values

- (c) Open *Step Response* tool box
- (d) Use the example configuration Step Response
- (e) Start the Step response with the Start Button

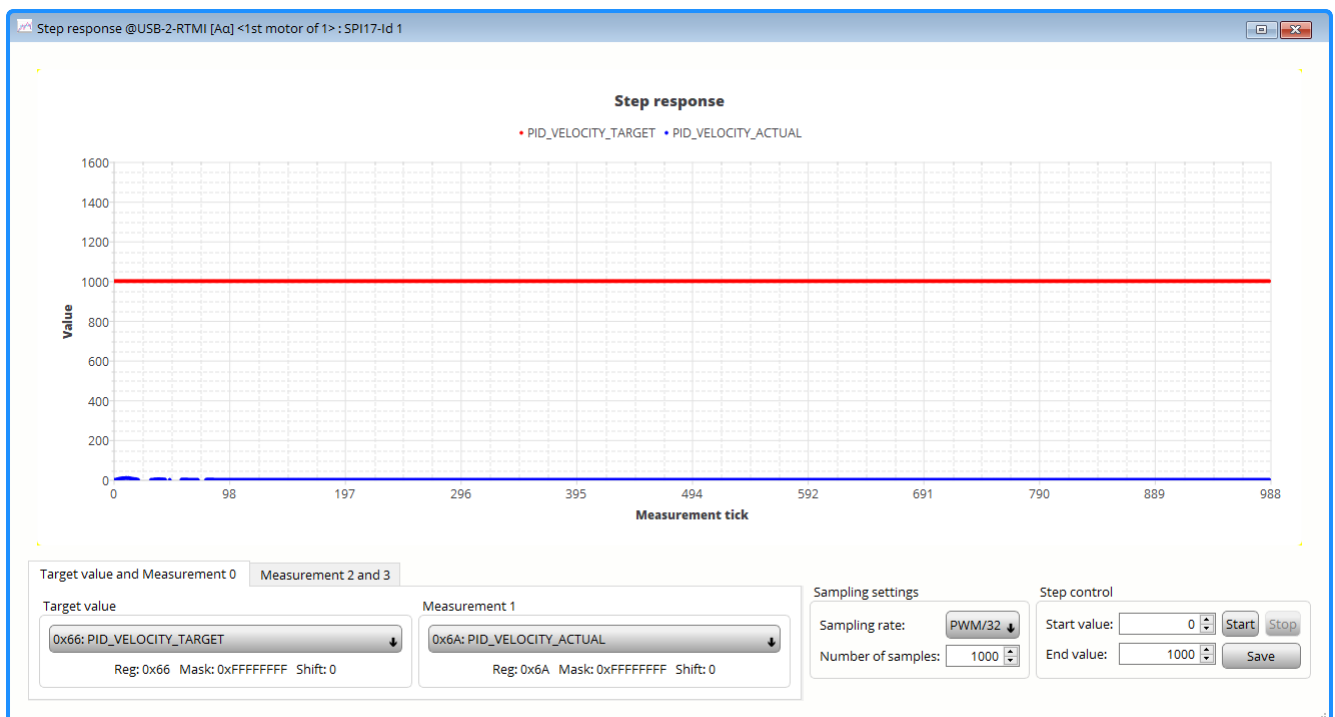


Figure 21: PID\_VELOCITY\_P = 100



- (f) Gradually increase the PID\_VELOCITY\_P until the actual velocity (PID\_VELOCITY\_ACTUAL) reaches 50-75% of the target velocity (PID\_VELOCITY\_TARGET)

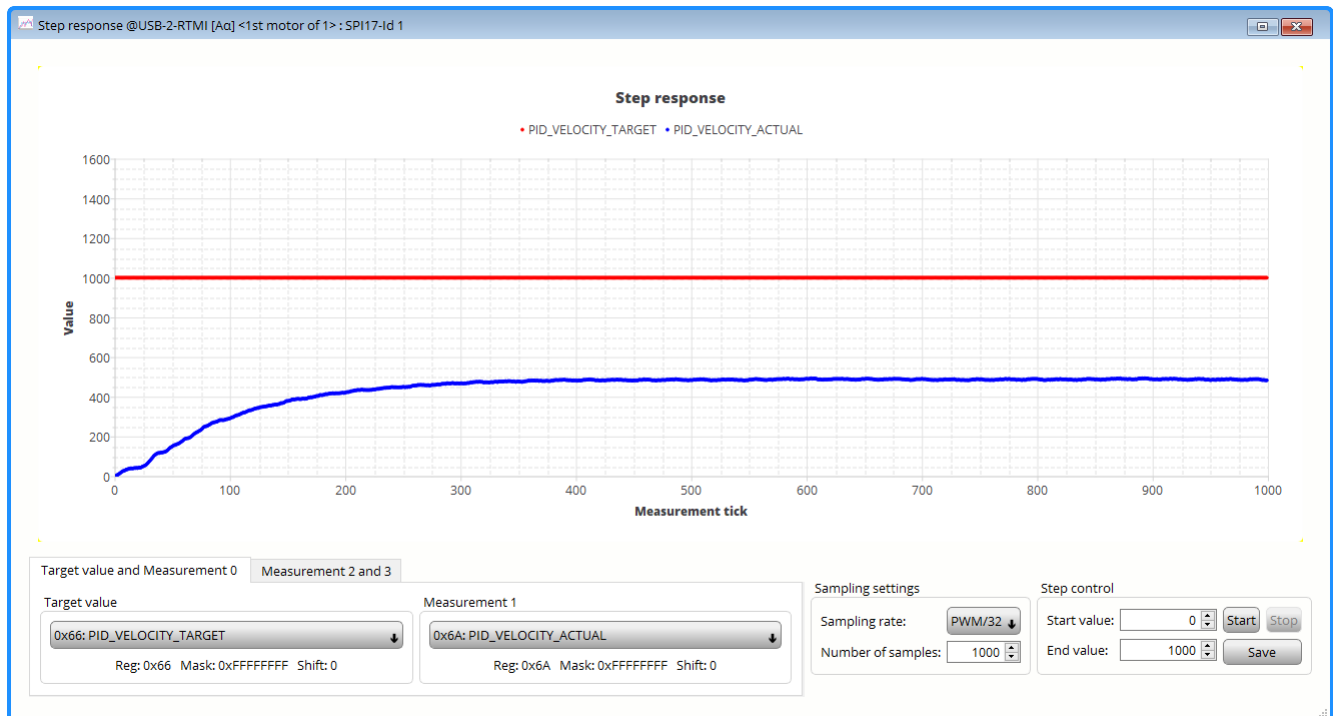
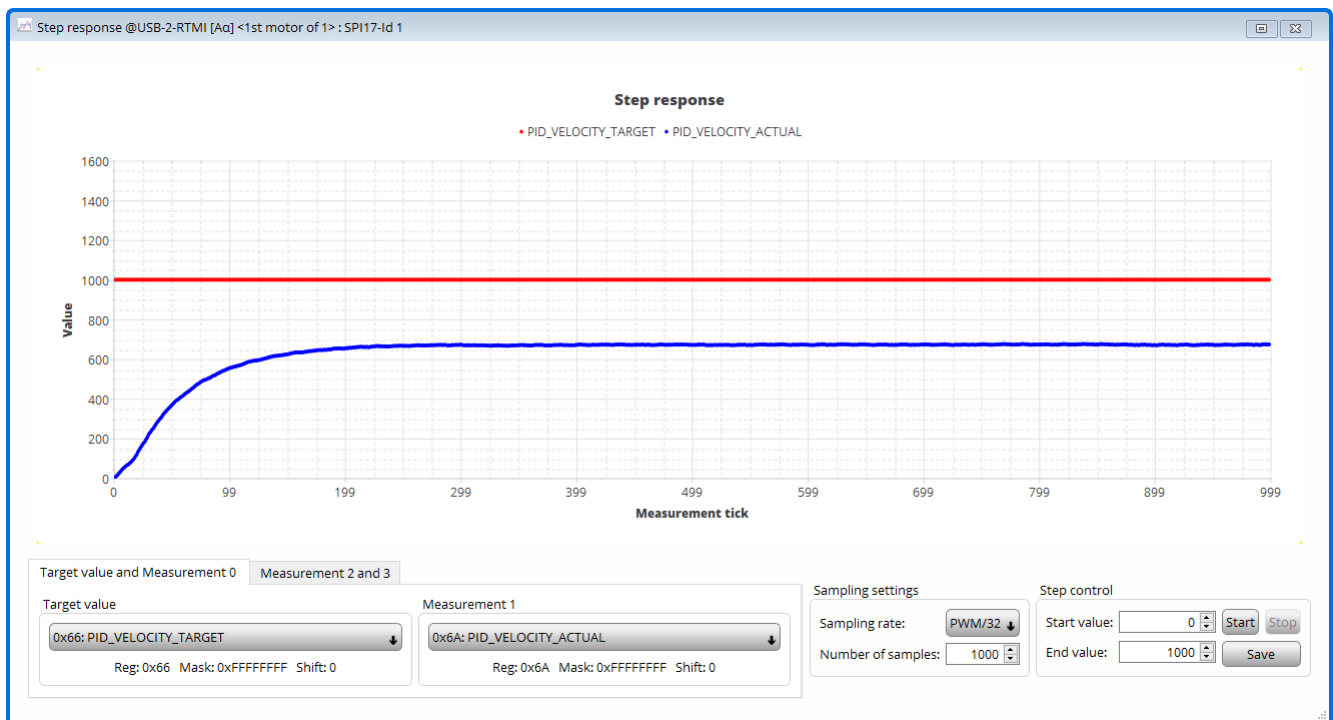
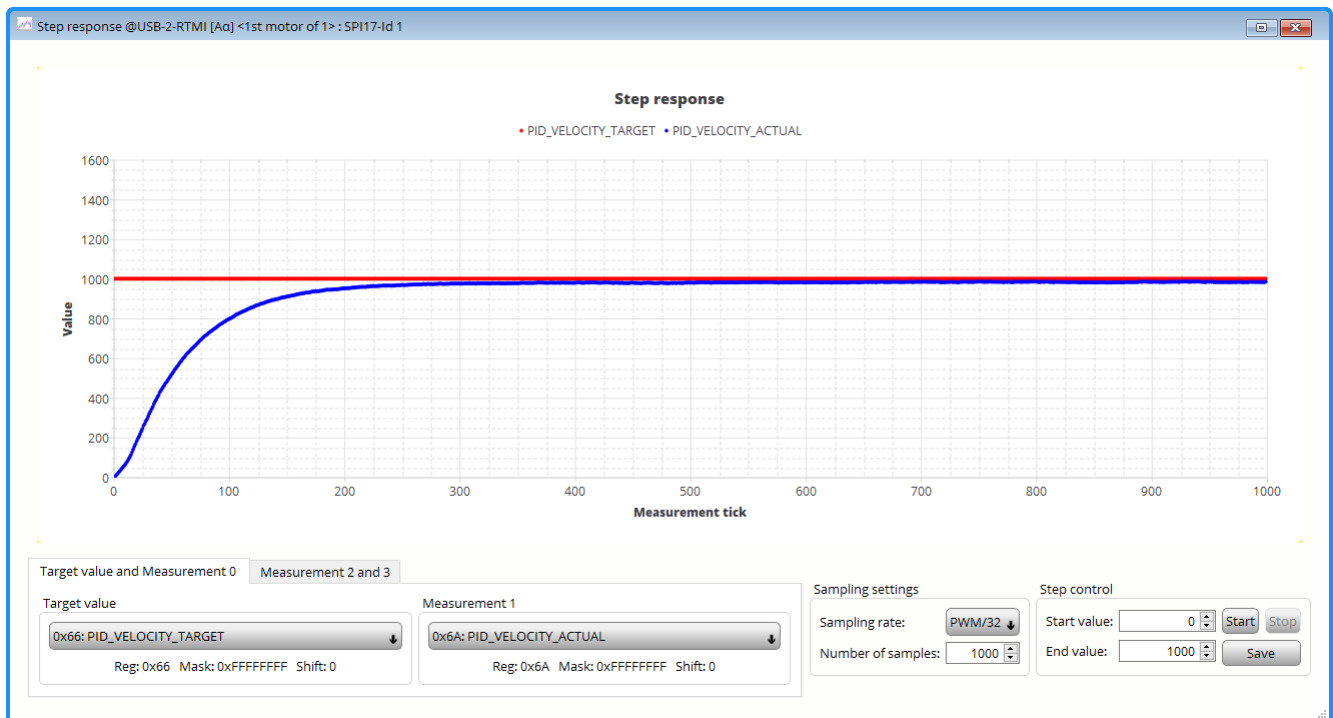


Figure 22: PID\_VELOCITY\_P = 300



Figure 23:  $PID\_VELOCITY\_P = 500$ 

(g) Increase  $PID\_VELOCITY\_I$  until the actual velocity reaches the target velocity

Figure 24:  $PID\_VELOCITY\_I = 10$ 

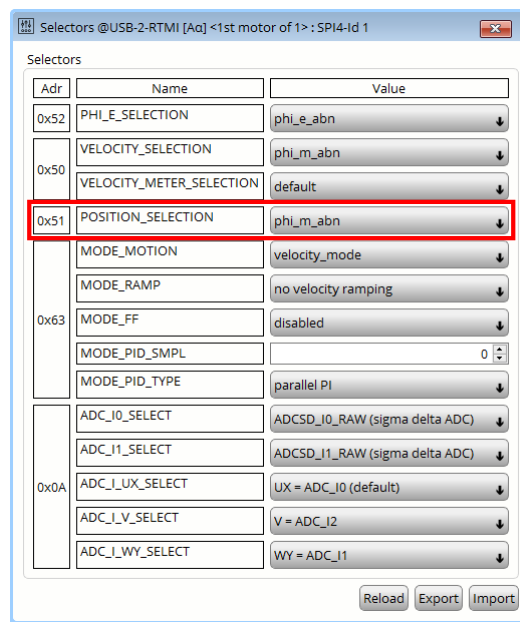


Figure 25: Selectors: Position unit

## 7 Tuning of the position loop

In this section the position loop will be tuned. Before the position loop can be used, the current loop and the velocity loop needs to be tuned. For the tuning the step response tool is used. After that the motion controller of the Landungsbruecke evaluationboard is used to increase dynamics and accuracy.

### 7.1 Step Response Tool

- Set POSITION\_SELECTION to phi\_m\_abn  
Thus one mechanical revolution equals 65535 counts
- Set starting value for PI Position controller
  - PID\_POSITION\_I = 0 (for most setups it is recommended to set to this to 0)
  - PID\_POSITION\_P = 10



Current control		
Adr	Name	Value
0x56	PID_TORQUE_I	12 858
	PID_TORQUE_P	596
0x54	PID_FLUX_I	12 858
	PID_FLUX_P	596

Velocity control		
Adr	Name	Value
0x58	PID_VELOCITY_I	10
	PID_VELOCITY_P	500

Position control		
Adr	Name	Value
0x5A	PID_POSITION_I	0
	PID_POSITION_P	10

Reload Export Import

Figure 26: PI parameter

- (c) Open the step response tool
- (d) Start the step response with Start button. The Motor will move back and forth the end value. In this case 1 revolution.
- (e) No motor movement with PID\_POSITION\_P = 10

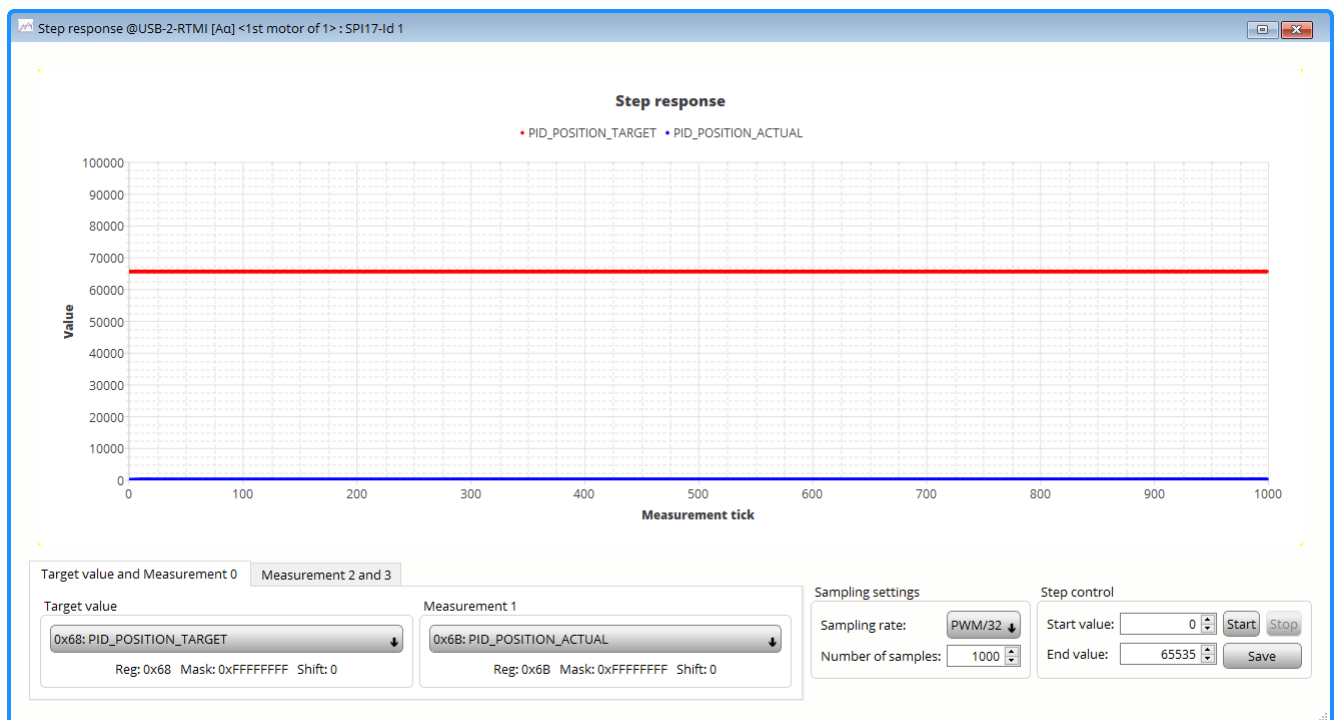


Figure 27: PID\_POSITION\_P = 10

- (f) Increase P parameter: PID\_POSITION\_P = 50



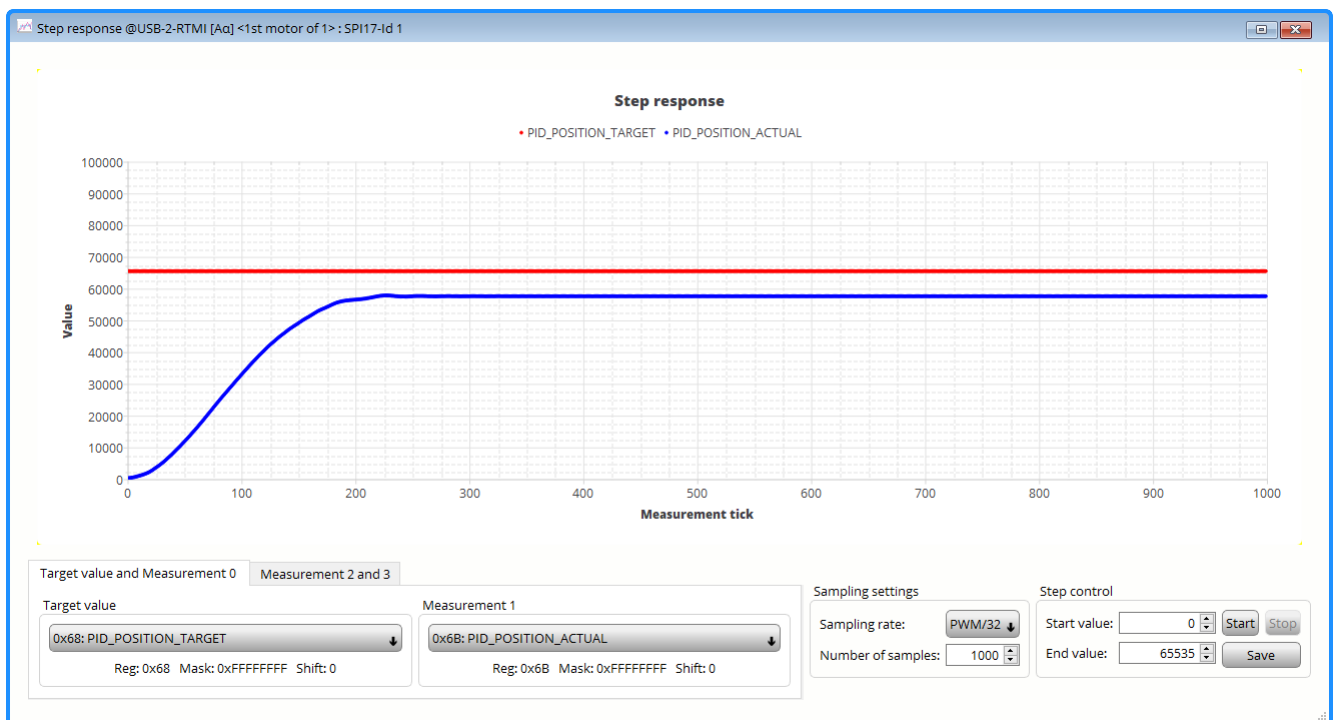


Figure 28: PID\_POSITION\_P = 50

(g) Increase P parameter: PID\_POSITION\_P = 100

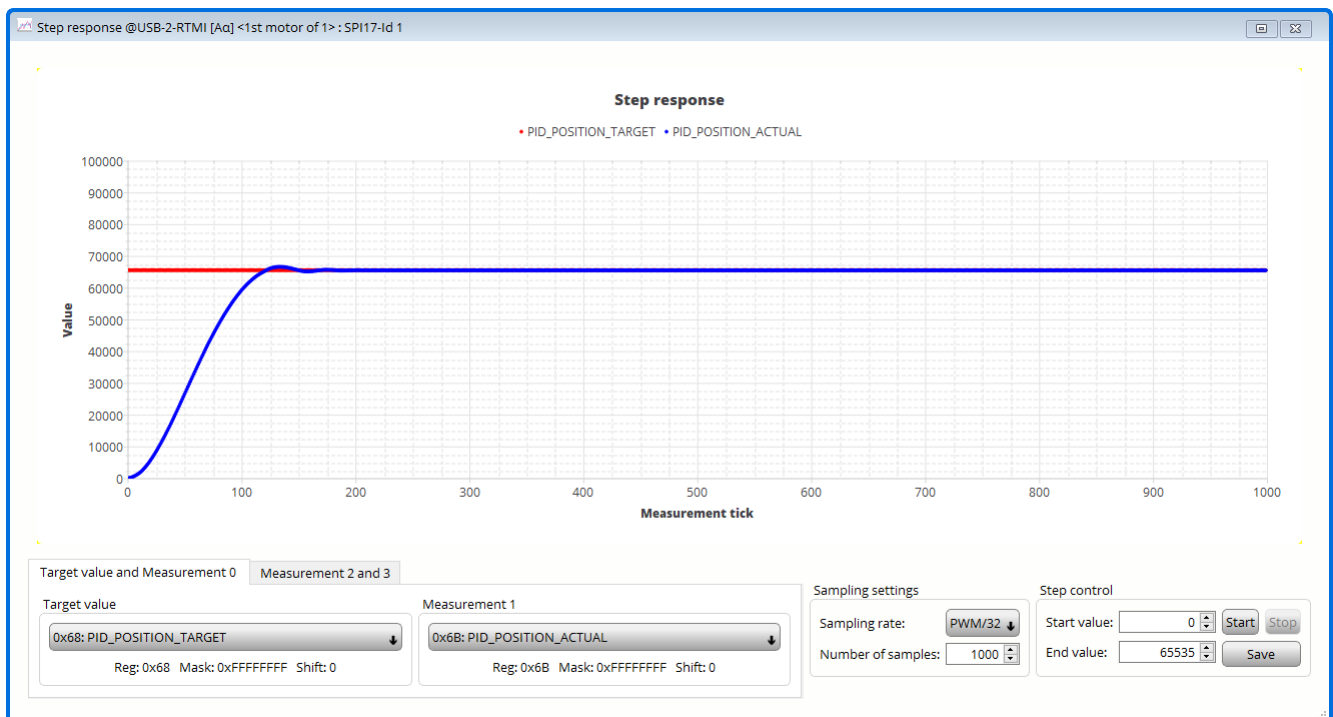


Figure 29: PID\_POSITION\_P = 100

(h) PI configuration after tuning.





Adr	Name	Value
0x56	PID_TORQUE_I	12 858
	PID_TORQUE_P	596
0x54	PID_FLUX_I	12 858
	PID_FLUX_P	596

Adr	Name	Value
0x58	PID_VELOCITY_I	10
	PID_VELOCITY_P	500

Adr	Name	Value
0x5A	PID_POSITION_I	0
	PID_POSITION_P	100

Reload Export Import

Figure 30: PI parameter

## 7.2 Motion Controller

The Landungsbrücke features trapezoidal ramps which can be used with the TMC4671-EVAL. The TMC4671 does not integrate a motion controller.

- Connect the Landungsbrücke to the PC with a Mini USB cable
- In the Landungsbrücke dialog (not available USB-2-RTMI) open Position Mode toolbox
- Enable Velocity Ramp and limit acceleration

Position control

Actual pos. 658000

Clear Clear on NULL

Target pos. 655350

Relative to actual position

absolute relative stop

Ramp settings

Max velocity [rpm] 4000

☒ Enable velocity ramp

Accel.[rpm/s] 2000

- The motor is turned 10 revolution with the position mode toolbox
  - Clear the position
  - Set Target pos. = 655350
  - Start the movement with the Absolute button



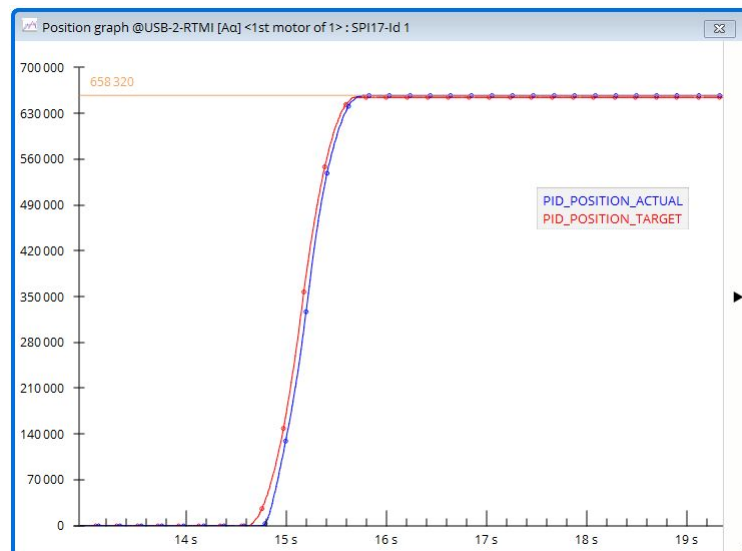


Figure 31: Movement with ramp

(f) Increase the acceleration


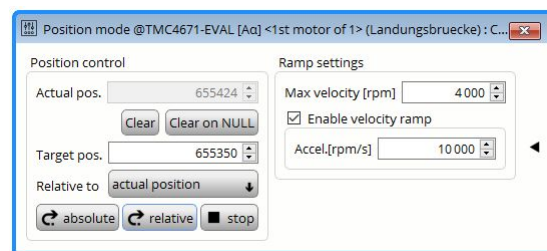


Figure 32: Movement with ramp

(g) Repeat the motion of 10 revolution with MC and increased accelerations settings, the PI values can be adapted as well:



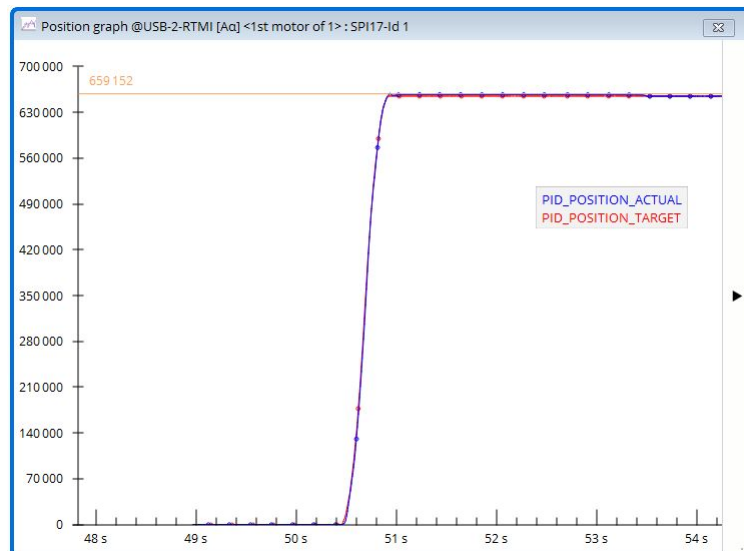

(h) PI configuration after adding motion controller:

The figure shows a software window titled "PI control @TMC4671-EVAL [A...]" with three sections for configuring control loops. Each section contains a table with columns for Address (Adr), Name, and Value.

Current control		
Adr	Name	Value
0x56	PID_TORQUE_I	12 858
	PID_TORQUE_P	596
0x54	PID_FLUX_I	12 858
	PID_FLUX_P	596

Velocity control		
Adr	Name	Value
0x58	PID_VELOCITY_I	10
	PID_VELOCITY_P	500

Position control		
Adr	Name	Value
0x5A	PID_POSITION_I	0
	PID_POSITION_P	1 000

At the bottom of the window are three buttons: "Reload", "Export", and "Import".

Figure 33: PI parameter

(i) Save PI configuration with the Export option

## 8 Summary

The RTMI interface of the TMC4671 provides a powerful option to tune the IC. Fast realtime access to the IC, allows tuning of the control loops and monitoring. The TMCL-IDE provides ready to use software tools for in system development. For more details on the TMC4671 and how to use, please look into the [TMC4671 datasheet](#).



## 9 Revision History

Version	Date	Author	Description
V1.0	25.04.2019	JPX	Initial version
v1.1	03.05.2019	ED, JPX	refinement
v1.2	24.06.2019	JPX	changed header, changed PID_POSITION_LIMIT_X values

*Table 1: Document Revision*

