

Standard usage of the Projector!

-Turn on the projector by pressing the big blue power button once



-plug your computer into the HDMI plug (it will come from the back of the projector, usually found at the right-hand-side foot of the front couch).

-Make sure the audio receiver (on the shelf below the screen) is turned off (nothing displaying on the receiver's screen).



-Plug the aux cord coming from the same receiver into your computer's headphone port


-Turn the receiver on (upper left hand side) by pressing the rectangular button.



-Make sure the receiver is set to Video 1 (using the smaller knob labeled INPUT SELECTOR on the right-hand side)



-On the receiver, press the bottom left button (on the left-hand side, it should be labeled A.F.D) until the display reads: “PLII M5”

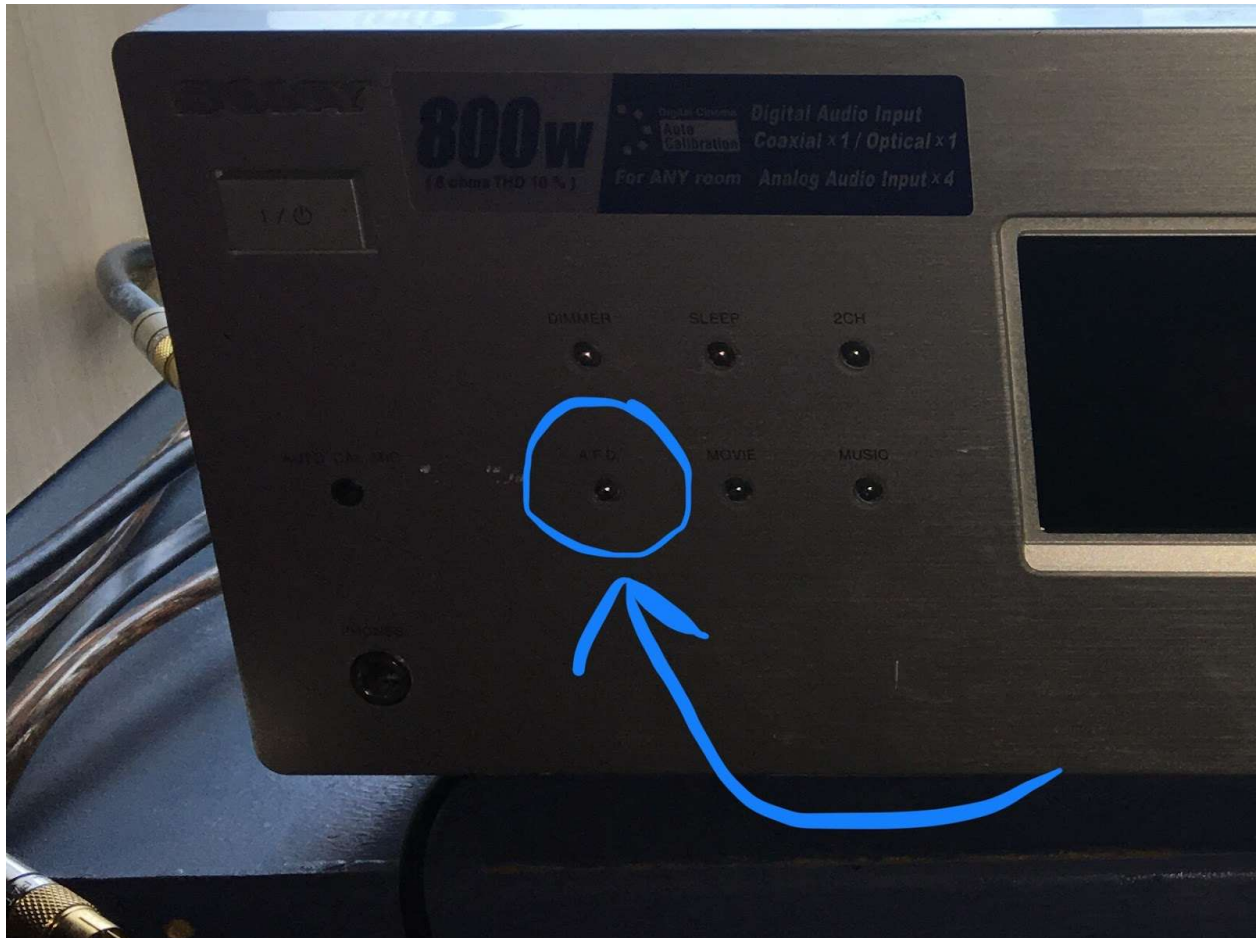

- Turn the receiver volume to max (larger, right-most knob)
- Adjust your laptop's volume. Start way too low and increase slowly to a volume that you're comfortable with

Remember to turn off the projector and receiver when you're done. To turn off the projector, hit the blue power button twice. To turn off the receiver, hit the rectangular button in the upper-left-hand corner once.

Problems


Turn the light on while adjusting the menus, it helps

How to open and close the lid to gain access to the projectors buttons

-Open the panel to the projector by grabbing the right top front bit of metal on the lid of the box, and pushing it to the right. Hold it as it descends so it doesn't hit someone



-Close the box by pulling the right hand bit of metal open a little and then moving the lid into a closed-position where it can slot in, and then letting the pressure off. It should feel secure when back in place

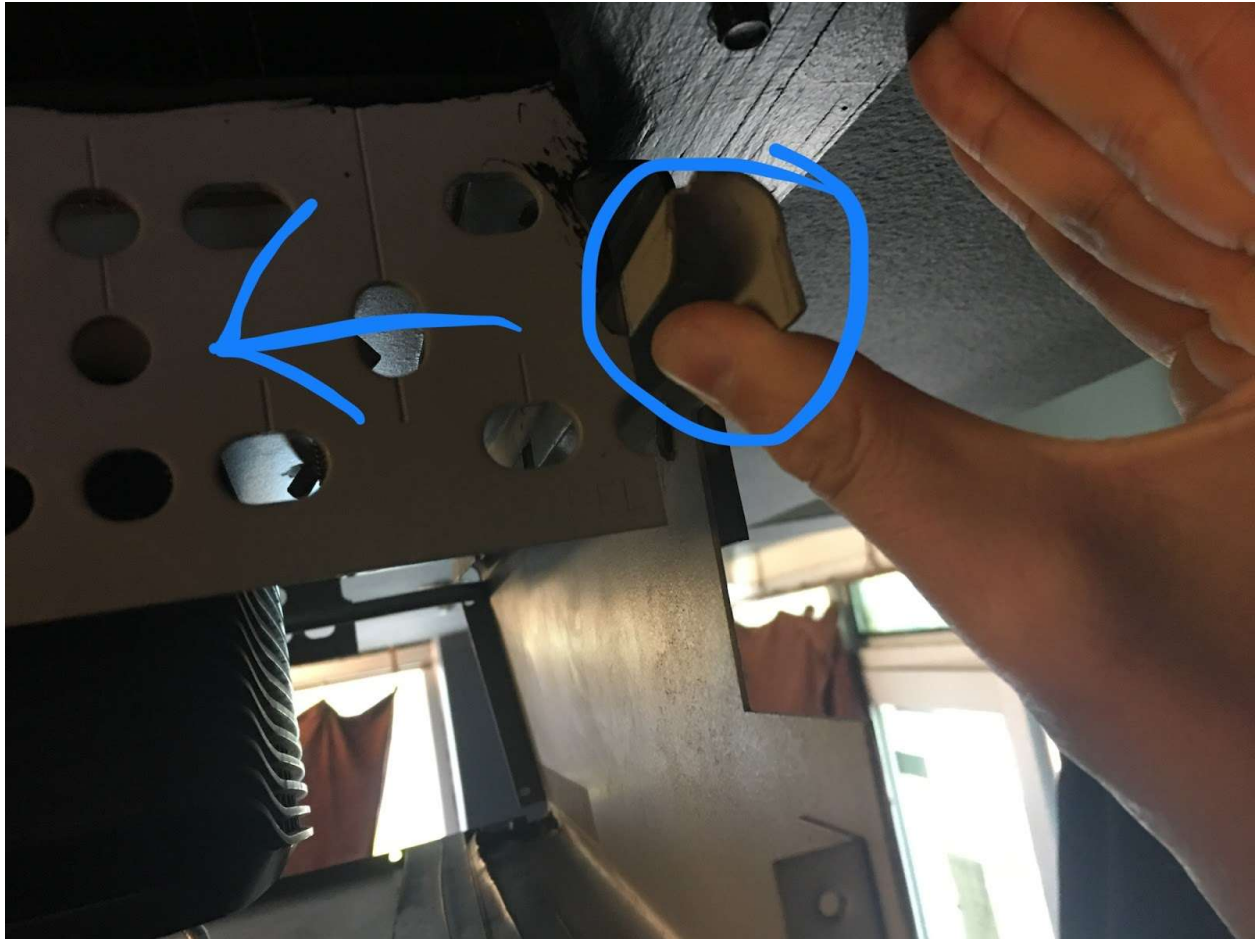


Screen is upside down

-Open the lid

-press the center button (labeled MENU/EXIT) once to pull up the projector's menu.



-You will use the directional pad to navigate this menu, for reference, the arrow pointing towards the screen is up, the one pointing away from the screen is down, towards the door is left, and away from the door is right

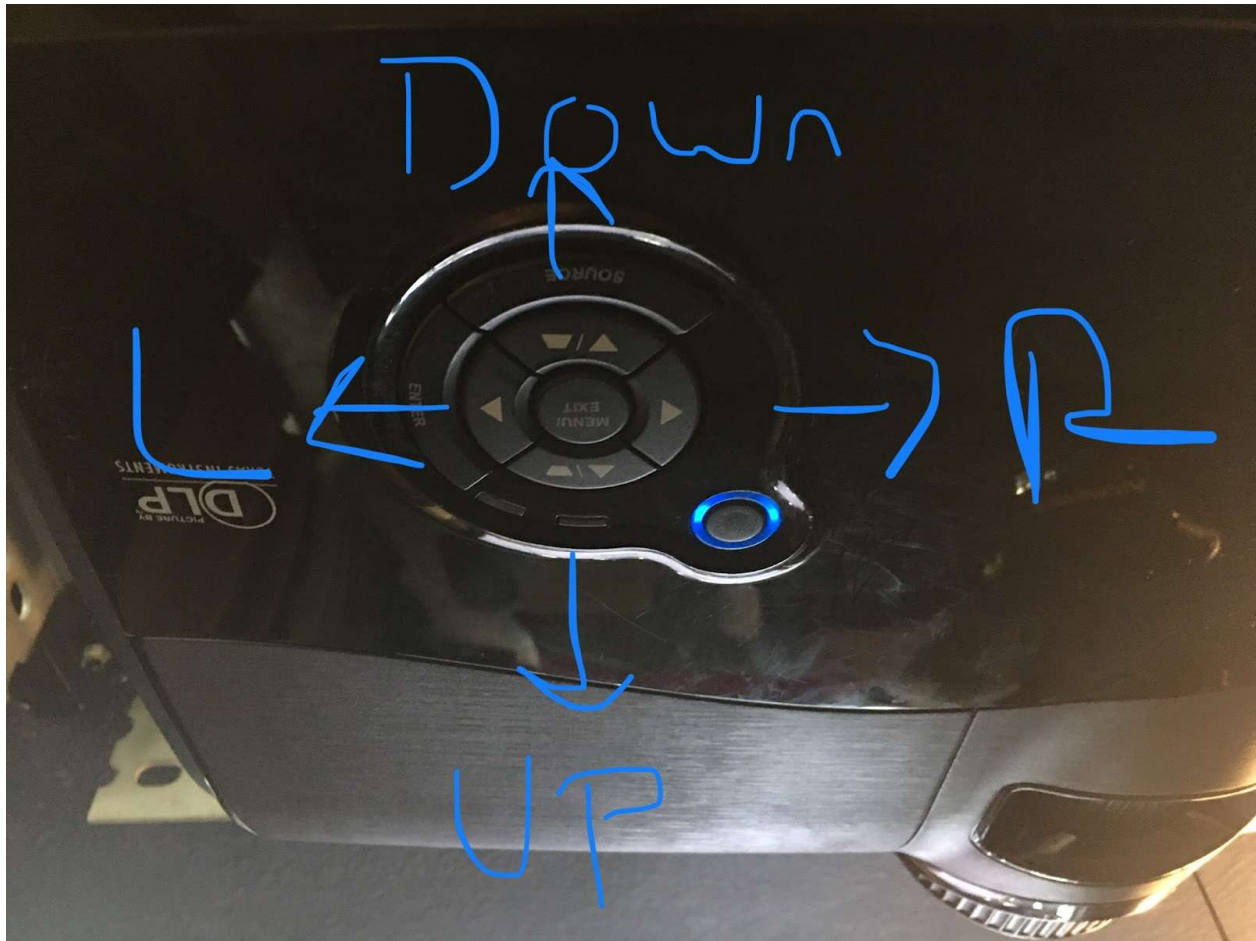

- Press left 2 times to get to the Gear labeled Settings
- Press down 4 times to get to the option labeled Projection
- Press right until the screen's orientation is as you desire
- You're all set! The menu will disappear on its own (or press the menu button twice for expedient departure)
- Close the lid

Out of focus

-By the projector's lens, on what is the bottom of the projector (because it is inverted) there is a wheel. Use this wheel to adjust the focus to something you're happy with.



Screen too big/Small

- Open the lid
- There is a wheel by the lens but a little further back.



- Spin this wheel until you are satisfied with the screen size
- Close the lid

Audio coming from Projector instead of Speaker

- Check your computer's audio out settings
- Make sure it's going to "headphones"
- On newer windows computers you can click the audio icon on the dock and select where it sends the audio to
- On Apple go to system preferences and then Audio

Projection is trapezoidal and not square/rectangular


-Open the lid

-This is a problem with the keystone

-press the center button (labeled MENU/EXIT) once to pull up the projector's menu.




-You will use the directional pad to navigate this menu, for reference, the arrow pointing towards the screen is up, the one pointing away from the screen is down, towards the door is left, and away from the door is right

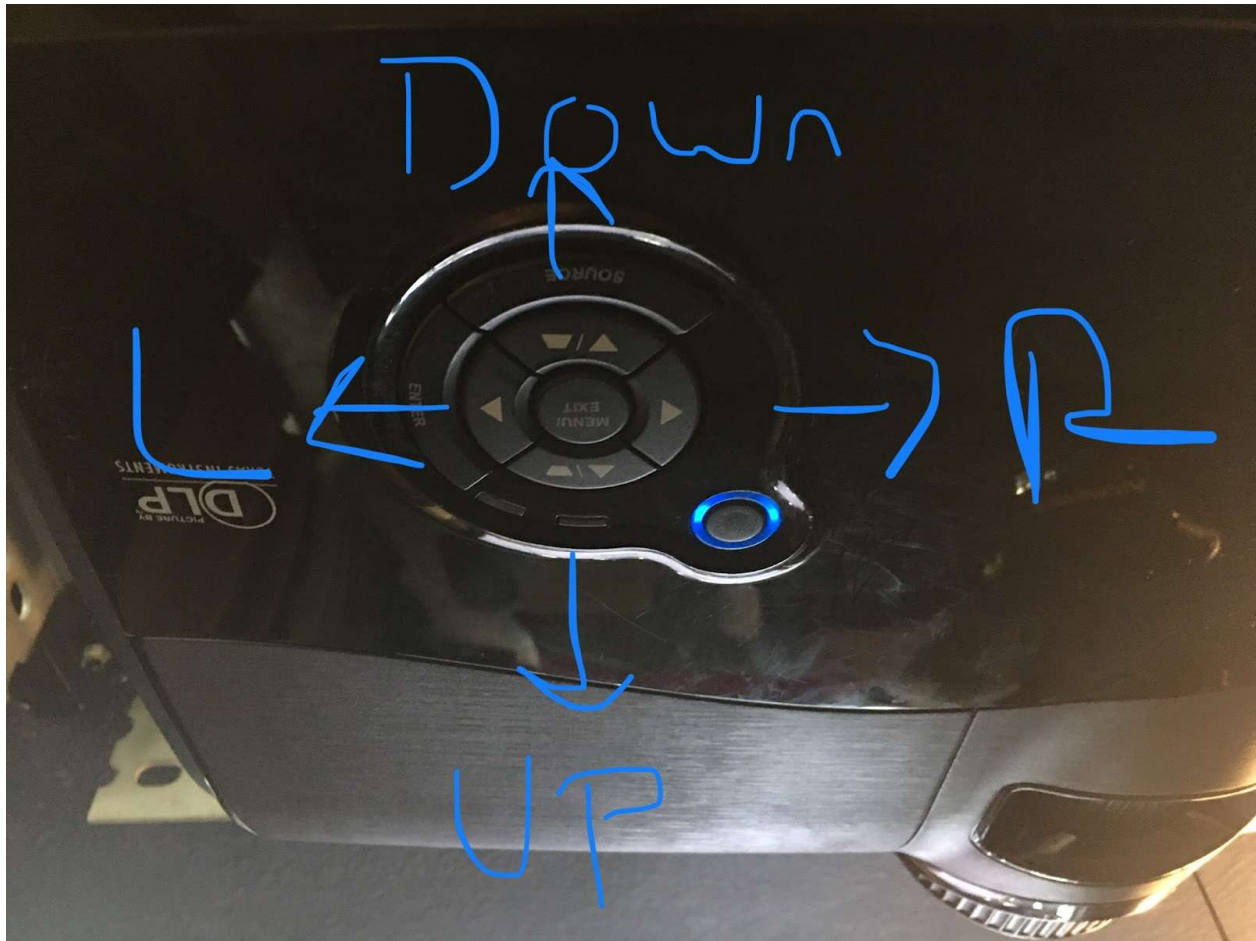


- Press left 2 times to get to the Gear labeled Settings
 - Press down 2 times to get to the option labeled Keystone
 - Press right and left until the screen's shape is as you want
 - You're all set! The menu will disappear on its own (or press the menu button twice for expedient departure)
- ~alternatively~
- Press up and down on the directional pad without opening the menu
 - Close the lid

Wrong Input to the Projector

- Open the lid
- Press the Button below the directional pad labeled SOURCE

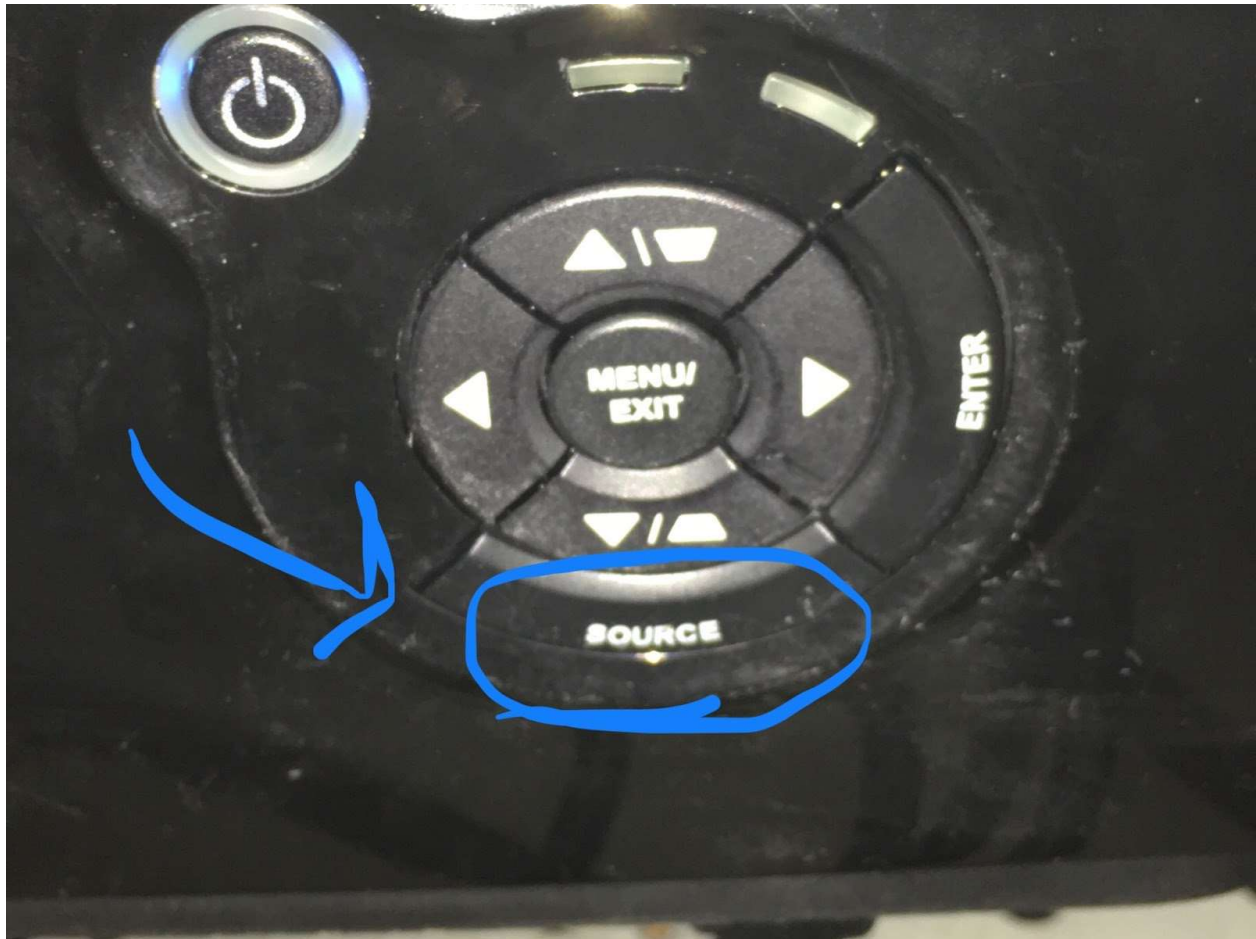

-You will use the directional pad to navigate this menu, for reference, the arrow pointing towards the screen is up, the one pointing away from the screen is down, towards the door is left, and away from the door is right

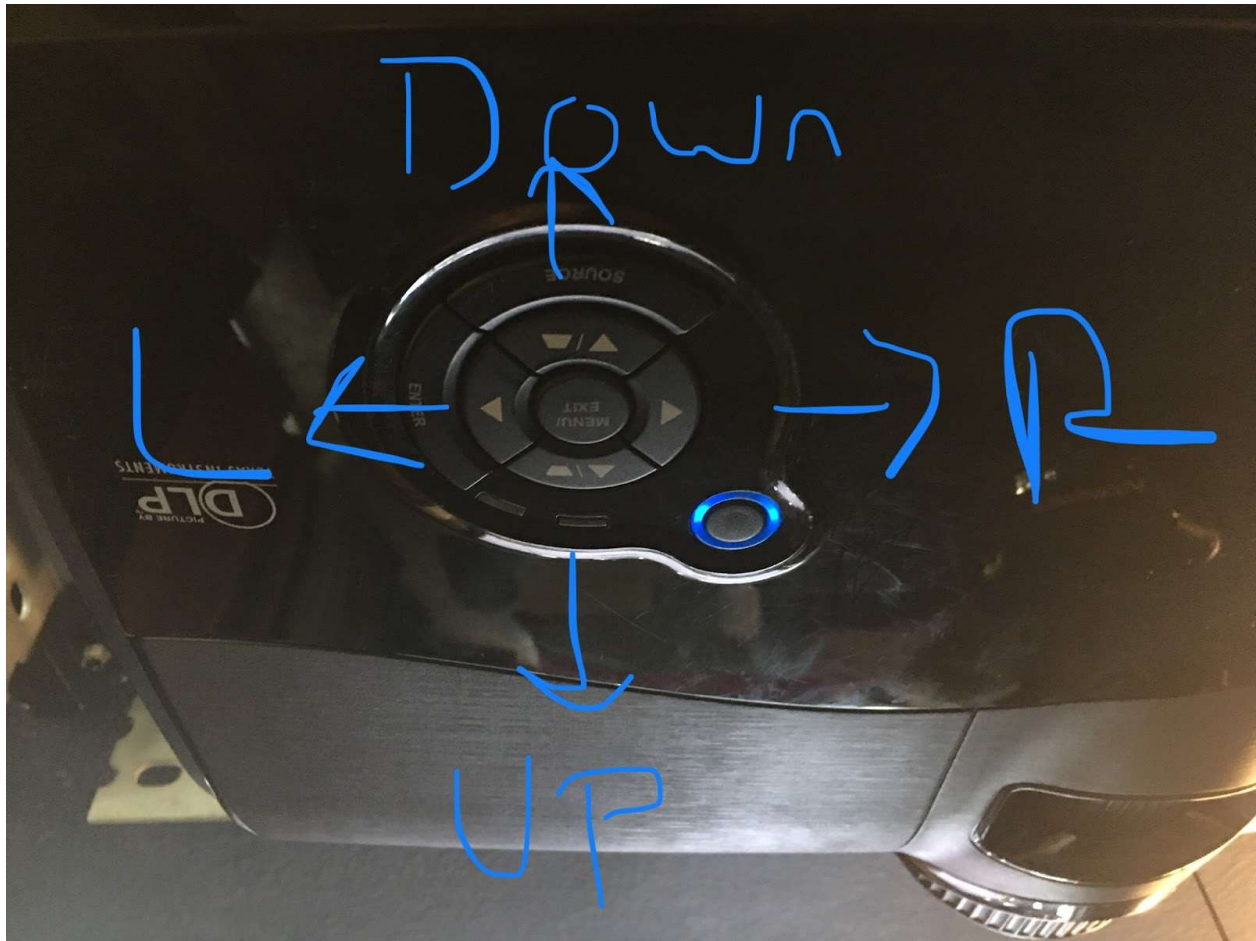

- Press Up or Down until the menu highlights HDMI 1
- Press the ENTER button next to the SOURCE button



-Should now display your content.

-IF NOT: check

- * are you plugged into the right hdmi cord (the one coming from the projector)

- * is your video source (computer/laptop/dvd player) turned on?

- * Did the hdmi cord to the projector become unplugged or damaged?

- * Is the hdmi port on your device damaged?

-Close the lid when you're done.