

D9-X

DRAWBARS CONTROLLER

VOLUME



DRIVE



REVERB



CLICK



BASS



TREBLE



MIDI OUT ↑

USB ↑

PEDAL ↑

SHIFT



UPPER



LOWER



PEDALS



SELECT



STOP



BYPASS

SPEED



ROTARY
SPEAKER

ON



V3 ●
C2 ●
V2 ●

TYPE



● C3
● V1
● C1

VIBRATO
CHORUS

PERCUSSION

 
ON



SOFT



FAST



THIRD

