

Flash image to Tinker Edge R thru recovery image

To support UMS mode for Tinker Edge R, it must flash image thru micro-SD card with recovery image. This method is applicable for upgrading from versions before 2021/8/1 to versions after 2021/8/1.

1. Preparation


- A micro-SD card
- A micro-SD card reader
- A USB Type-C cable
- Tinker Edge R
- Power Adaptor, 12~19 VDC

Download tool either one of below list: (This document demonstrates by using Etcher.)
Etcher, <https://www.balena.io/etcher/>
Win32DiskImager, <https://sourceforge.net/projects/win32diskimager/>


Download the Tinker Edge R image from the Tinker Board website ([Tinker Board \(asus.com\)](https://www.asus.com))

2. Flash recovery image to micro-SD card


- 2-1. Insert micro-SD card into the card reader.
- 2-2. Insert the card reader to the Laptop/PC.
- 2-3. Run Etcher utility.

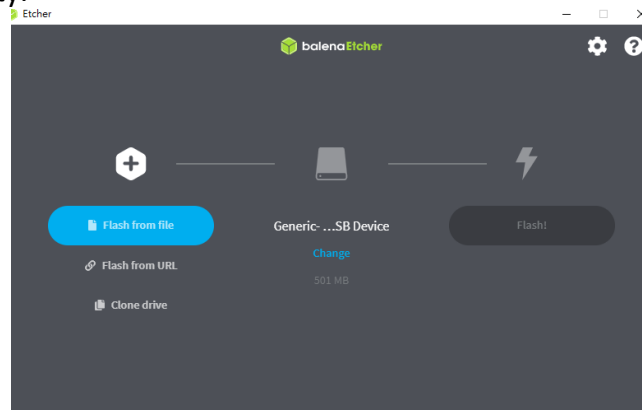


- 2-4. Click "Flash from file", then browse file name "Tinker_Edge_R-Debian-Stretch-vX.X.XX.X-YYYYMMDD-Recovery.img".

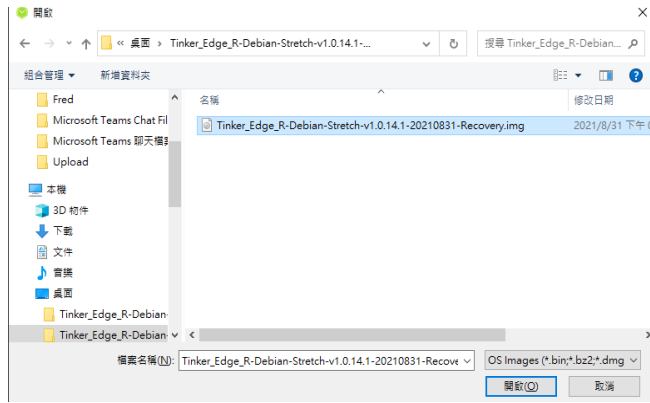


2-5. Click “Select target” to choose the micro-SD card.

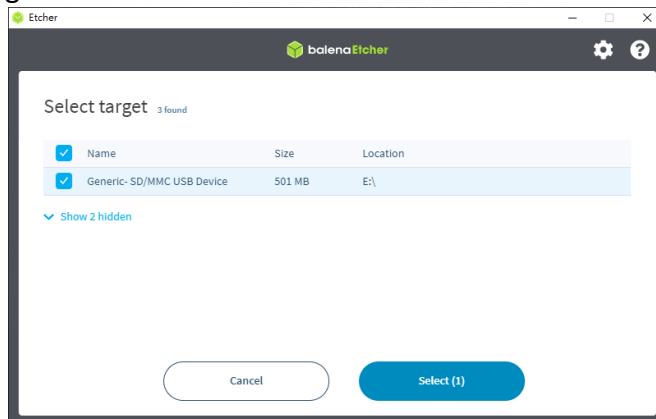


2-6. Then clicking “Flashing!” beginning to flash recovery image to SD card.

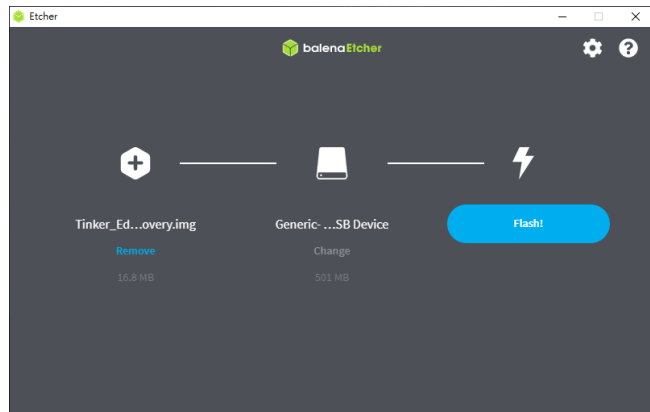


2-7. It will show the progress as below shown:

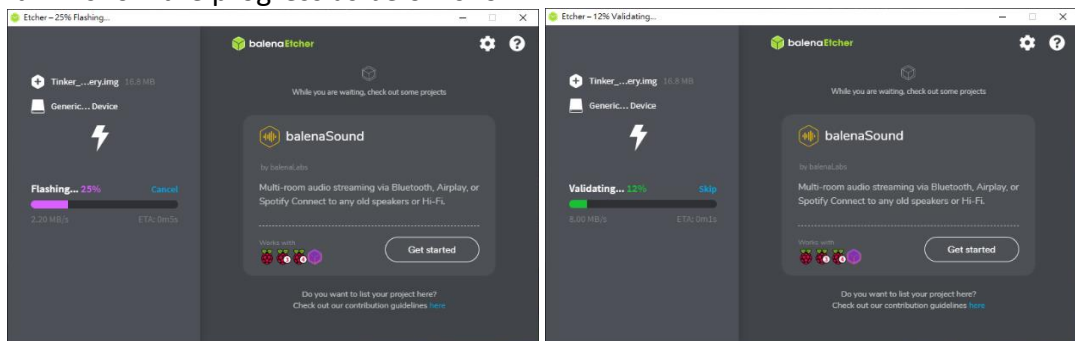

2-8. Then finished.

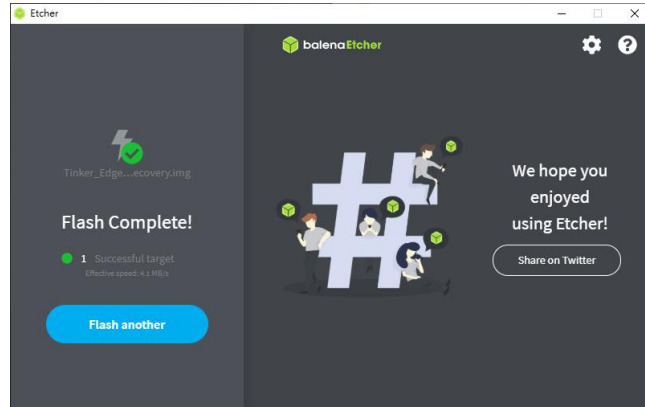

3. Flash image to the eMMC of Tinker Edge R

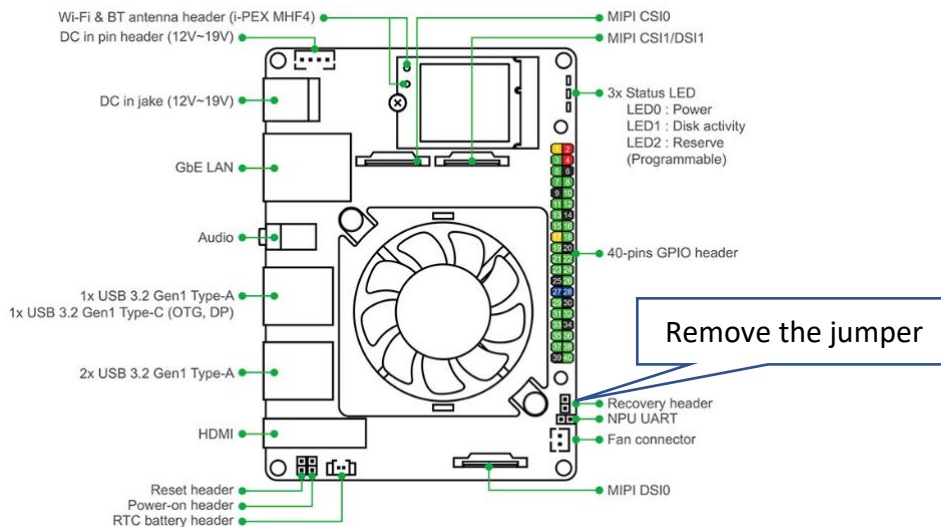

3-1. Remove the jumper from the Recovery header.

3-2. Remove the micro-SD from the card reader and insert it into SD slot of Tinker Edge R.


3-3. Connect USB Type-C cable between Tinker Edge R and Laptop/PC.

3-4. Connect power adaptor to Tinker Edge R.


3-5. The Laptop/PC should detect several USB disks which come from Tinker Edge R after Tinker Edge R power on. Please DO NOT format any of the detected disks when popping up the format warning.

3-6. Run Etcher utility. (The following steps are the same as above.)


3-7. Click "Flash from file" and browse the image file, such as "Tinker_Edge_R-Debian-Stretch-vX.X.XX.X-YYYYMMDD.img".

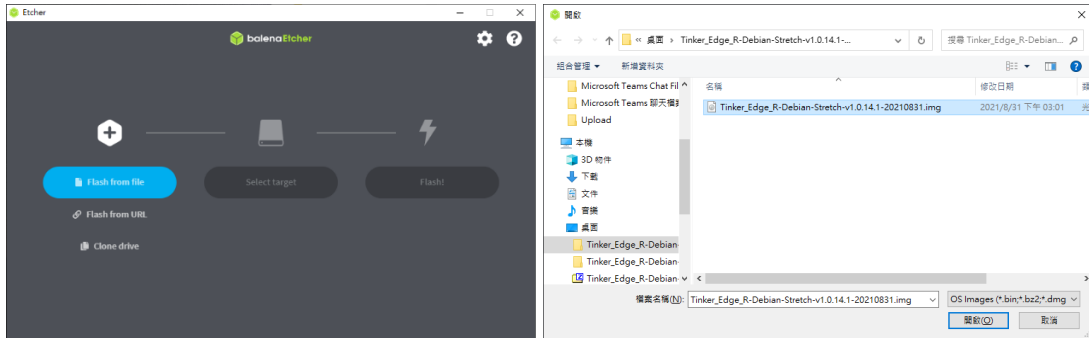

3-8. Click “Select target” and select “ASUS Tinker UMS USB Device”.

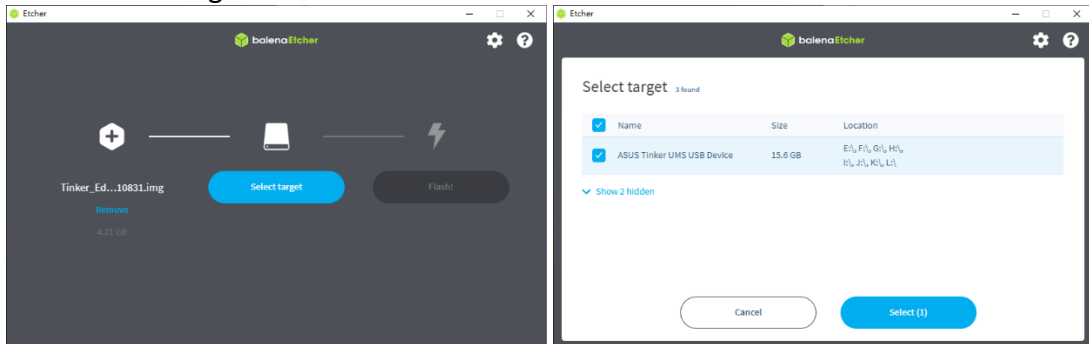

3-9. Click “Flash!” beginning to flash the image and waiting for it finishes.

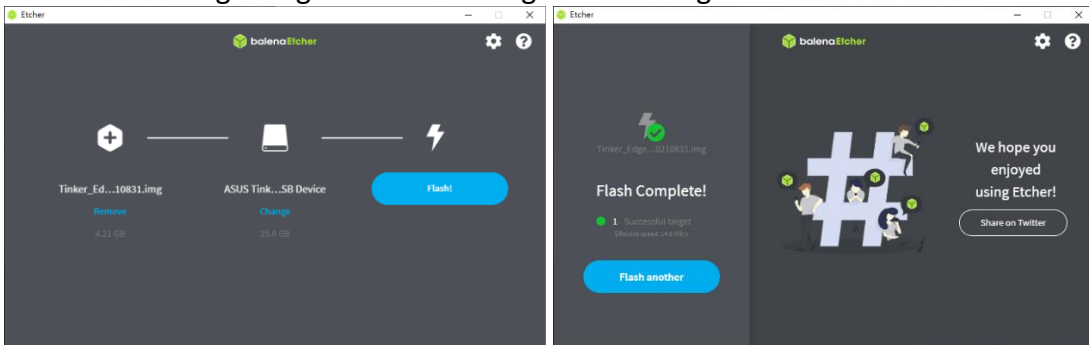

3-10. You could remove the micro-SD card, USB Type-C cable and power adaptor from Tinker Edge R once flashed completely.

NOTE: This procedure needs to execute once on each Tinker Edge R. If the image version is kept in the version released after 2021/8/1. Afterwards, you just flash an image following steps 3-5 to 3-9 with a USB Type-C connection.