


SPI Master
P0.6 : CH1-DX0 : MISO
P0.7 : CH1-DOUT0 : MOSI
P0.8 : CH1-SCLK_OUT : CLK
P0.9 : CH1-SEL0 : CS

SPI Slave
P0.13 : CH0-DX2 : SEL
P0.14 : CH0-DX1 : CLK
P0.15 : CH0-DX0 : MOSI

SPI Slave
P2.0 : CH0-DOUT0 : MISO

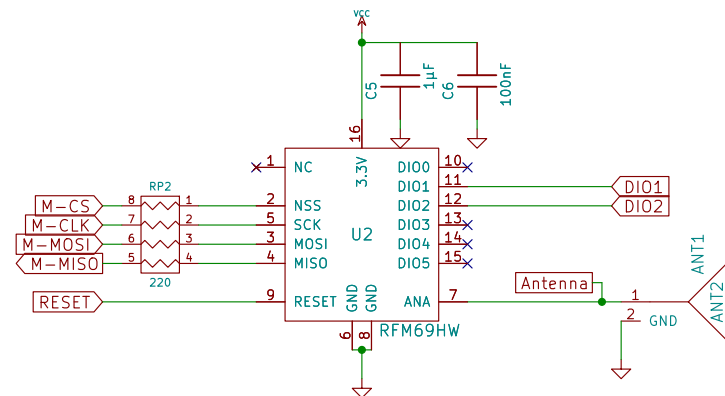

DRILL DRILL
DRILL DRILL

Copyright Tinkerforge GmbH 2023.
This documentation describes Open Hardware and is licensed under the CERN OHL v. 1.1.
You may redistribute and modify this documentation under the terms of the CERN OHL v.1.1. (<http://ohwr.org/cernohl>). This documentation is distributed WITHOUT ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING OF MERCHANTABILITY, SATISFACTORY QUALITY AND FITNESS FOR A PARTICULAR PURPOSE. Please see the CERN OHL v.1.1 for applicable conditions

Copyright (©) 2023, B.Nordmeyer <bastian@tinkerforge.com>
Licensed under CERN OHL v.1.1
Tinkerforge GmbH

Sheet: /
File: remote-switch-v2.kicad_sch

Title: Remote Bricklet

Size: A4 Date: 2023-01-27

KiCad E.D.A. kicad (6.0.7)

Rev: 2.0

Id: 1/1