
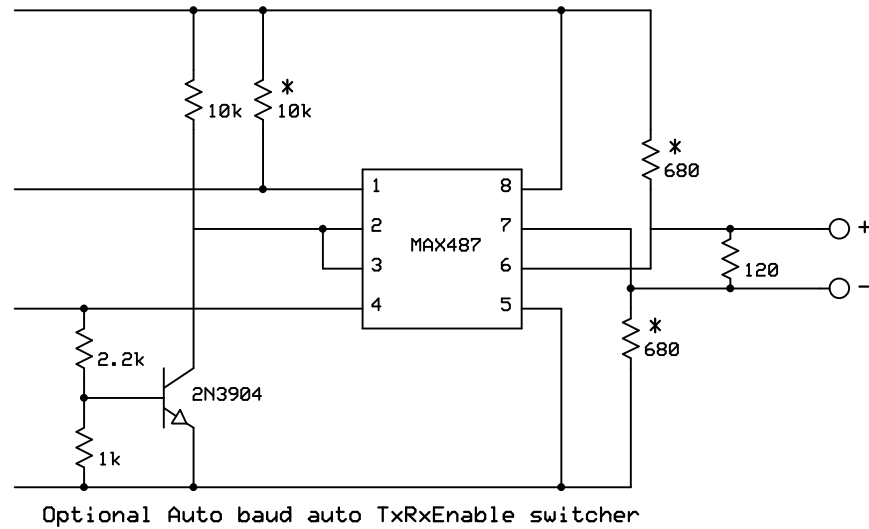


* Arbitrary switching due to noise on the Rx interrupt pin
may cause false reception on some drivers.
The MAX485/487 did not exhibit these symptoms.

** Pull up and pull down resistors are sometimes necessary to
reference the bus to a known state when the bus is not active.

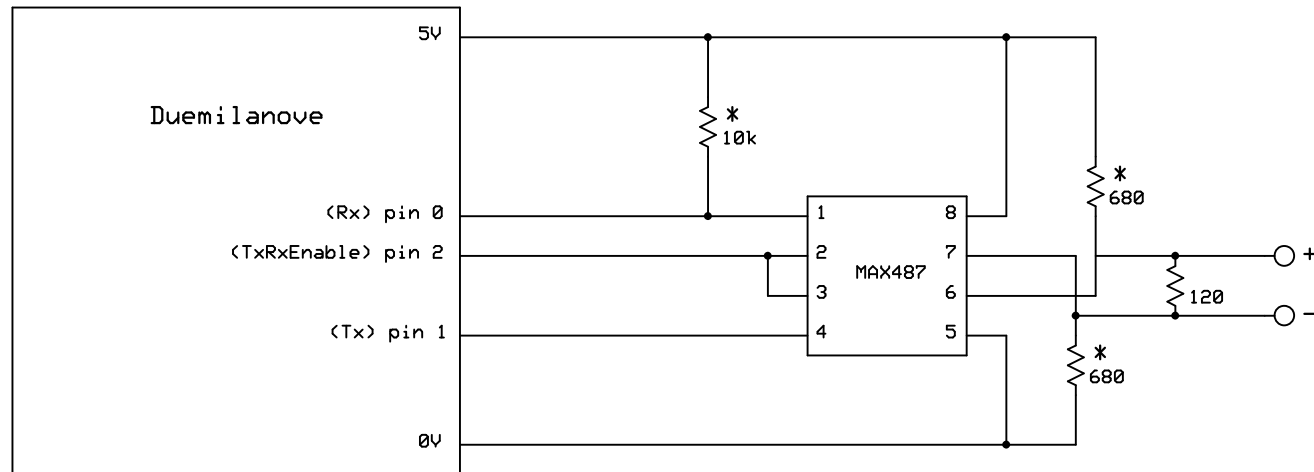

RS485 Connection

bester.juan@gmail.com

Juan Bester

Rev 1.0

2013/05/28

Page 1