


Serial link (via USB) to the PC

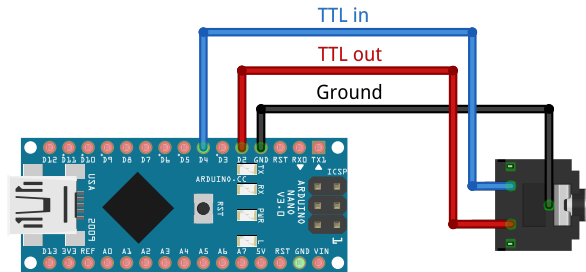

TTL link (via stereo jack) to the turntable

fritzing