

# X40Y configuration manual

## first step:

Connect the device to the DC 12V adapter;


## Step two:


Connect one end of the network cable to the AI camera X40Y , and the other end to the computer network port

## third step:

Configure network information;

The default IP address of the device is 192.168.2.100;

Open  Network configuration, right-click the mouse to open the network configuration; as shown in the figure below

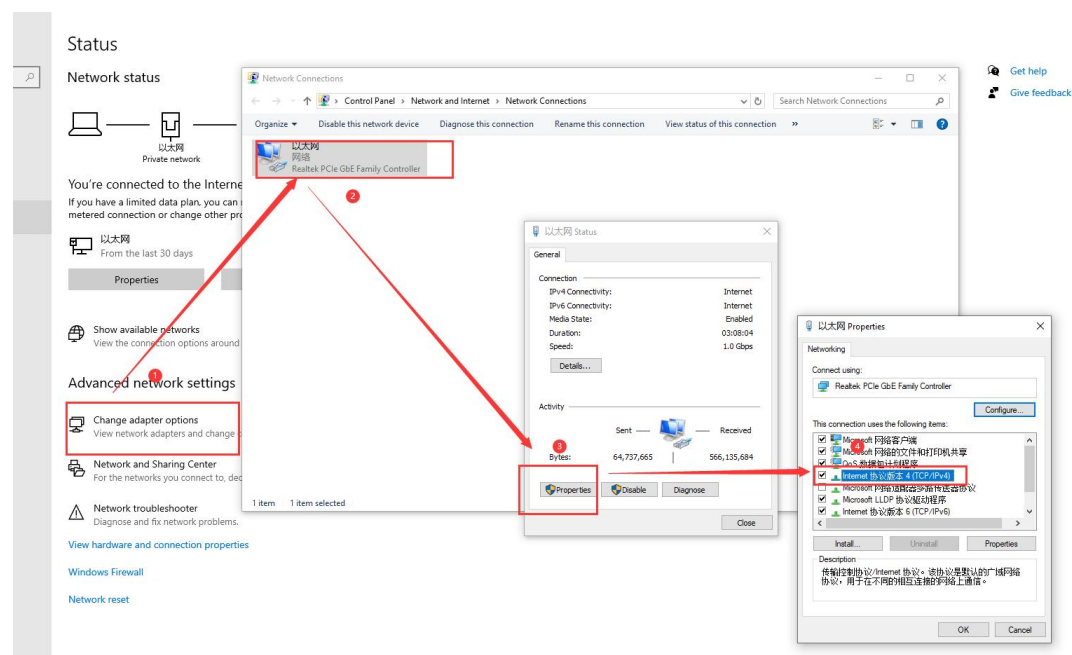

Choose to use the following IP address; you need to set the computer 's IP address to be consistent with the device

The IP address of the device is 192.168.2.100;


The computer configuration is 192.168.2.xxx;

The configuration in turn is:

255.255.255.0;

192.168.2.1;

Save after configuring;

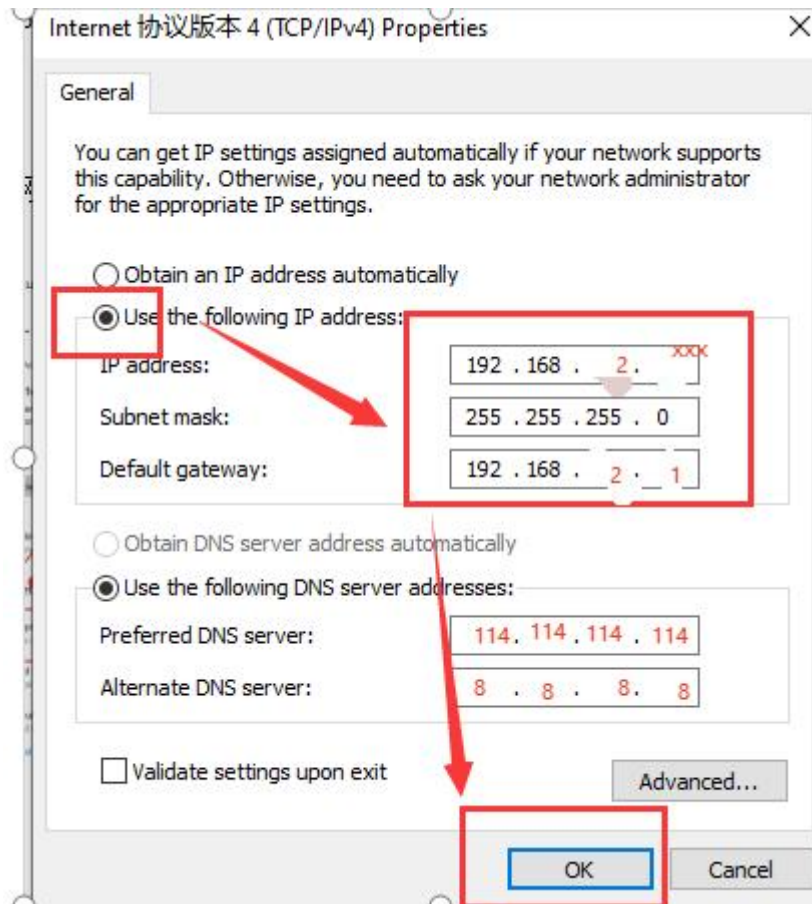

The third step configuration is completed;

## Step: Connect Demo

Open Fast tool



4. check device ip 192.168.2.100

5. edit device ip : static or dhcp

6. click IE logo to open web , then check software user manual

The device is connected successfully;