


MIDI SOLENOIS MANUAL

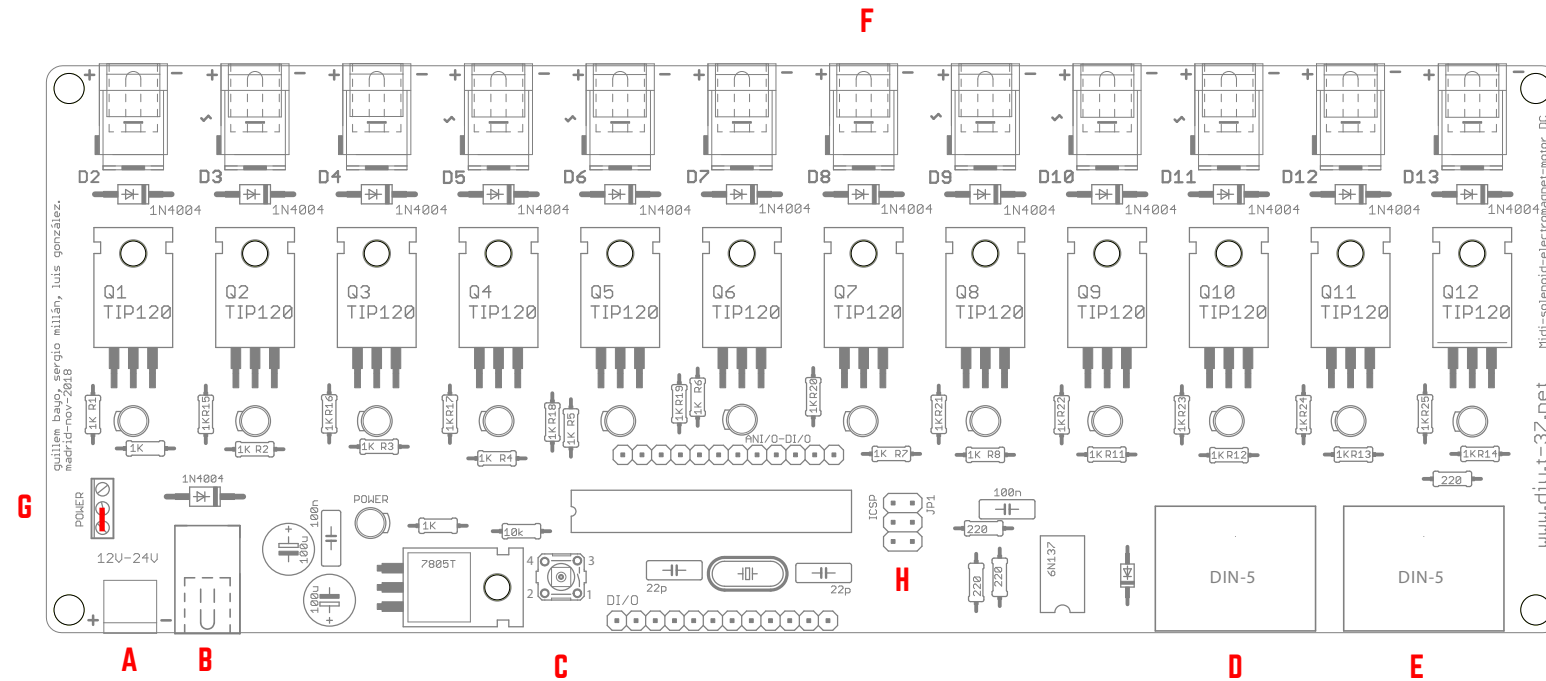

- A** Solenoids Power - Power source for actuators, 12 VDC/ 24 VDC.
- B** PCB Power - Power source for microcontroller (Atmel 328).
- C** Atmel reset switch.
- D** Midi THRU.
- E** Midi IN.
- F** Solenoids connectors.
- G** PCB Power switch - For a switch, sensor or jumper. You can solder the 2 pins together like the red line.
- H** ICSP - In Chip Serial Programmer.