



## Quick Reference for System Administrators

### Using System Administrator Options

Calling a System Administrator (SA) Mailbox	<p><b>From Administrator's telephone:</b> Press Voice Mail key</p> <p><b>From any ext:</b> Press idle CALL key • Dial <i>AspireMail</i> master ext. • Dial SA Mailbox number • Dial security code.</p> <p><b>From outside the company:</b> Call <i>AspireMail</i> • Dial # during company greeting • Dial SA Mailbox number • Dial security code.</p>
To record a <b>B</b> Roadcast message	<p>Call System Administrator Mailbox • Press S A • Press <b>B R</b></p> <p>A Broadcast Message plays when a person calls (logs on to) a Subscriber, Guest, Message Center, or Future Delivery Mailbox, right before the message count plays.</p>
To record a <b>W</b> elcome message	<p>Call System Administrator Mailbox • Press S A • Press <b>W</b></p> <p>A Welcome Message is for a Call Routing, Message Center, or Directory Dialing Mailbox. This message greets the caller (e.g. <i>Thank you for calling company ABC</i>).</p>
To record an <b>I</b> nstruction Menu	<p>Call System Administrator Mailbox • Press S A • Press <b>I</b></p> <p>An Instruction Menu is for a Call Routing or Directory Dialing Mailbox. This menu tells the caller what to dial (e.g. <i>Please dial the extension you wish to reach, or dial 1 for sales</i>).</p>
To record a <b>D</b> irectory <b>D</b> ialing Message	<p>Call System Administrator Mailbox • Press S A • Press <b>D D</b></p> <p>A Directory Dialing Message is for a Directory Dialing Mailbox or for a Call Routing Mailbox. This message tells the callers what letters to dial to reroute their call.</p>
To record an <b>A</b> nnouncement Message	<p>Call System Administrator Mailbox • Press S A • Press <b>A N</b></p> <p>An Announcement Message is for an Announcement Mailbox.</p>
To record Mailbox <b>N</b> ames	<p>Call System Administrator Mailbox • Press SA • Press <b>N</b></p> <p>A name replaces the corresponding number in voice prompts.</p>

To <b>E</b> rase All <b>M</b> essages	Call System Administrator Mailbox • Press S A • Press <b>E M</b> This lets you erase all the messages in a Subscriber, Guest, or Message Center Mailbox.
To <b>D</b> elate a <b>S</b> ecurity Code	Call System Administrator Mailbox • Press S A • Press <b>D S</b> This lets you delete the security code for a Subscriber, Message Center, Guest, Announcement or Modem Mailbox.
To use Answering <b>S</b> chedule <b>O</b> verride	Call System Administrator Mailbox • Press S A • Press <b>S O</b> This changes the mailbox that answers incoming calls.
To record <b>I</b> nteractive <b>P</b> rompts	Call System Administrator Mailbox • Press S A • Press <b>I P</b> These prompts are the questions for an Interactive Mailbox.
To use System <b>P</b> rompt <b>C</b> ustomization	Call System Administrator Mailbox • Press S A • Press <b>P C</b> This lets you re-record all the voice prompts in the system.
To get <b>S</b> ystem <b>V</b> ersion Number	Call System Administrator Mailbox • Press S A • Press <b>S V</b> This lets you get the software version number for your system.
To prepare the System for <b>P</b> ower- <b>D</b> own	Call System Administrator Mailbox • Press S A • Press <b>P D</b> This shuts down <i>AspireMail</i> . You should shut down <i>AspireMail</i> prior to unplugging the PCB.
To set the <i>AspireMail</i> <b>T</b> CPIP and <b>G</b> ATEway addresses (required to connect the Admin program)	<b>To set the TCP/IP Address:</b> Call System Administrator Mailbox • Press S A • Press <b>TCP/IP</b> • Use the format x*x*x*x*y# to enter the IP address (x) and number of bits in the subnet mask (y). See <i>Setting the IP Address</i> in the <i>System Guide</i> for more. <b>To set the GATEway Address:</b> Call System Administrator Mailbox • Press S A • Press <b>GATE</b> • Use the format x*x*x*x# to enter the gateway address. See <i>Setting the Gateway Address</i> in the <i>System Guide</i> for more. <b>You must reset <i>AspireMail</i> after setting the TCP/IP and Gateway addresses.</b>

## NEC

NEC America, Inc., Corporate Networks Group  
4 Forest Parkway, Shelton, CT 06484  
TEL: 203-926-5400 FAX: 203-929-0535  
[cng.nec.com](http://cng.nec.com)



0893411

April 18, 2003  
Printed in U.S.A.