

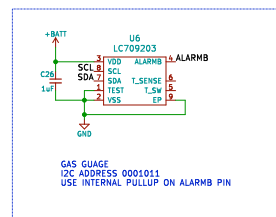
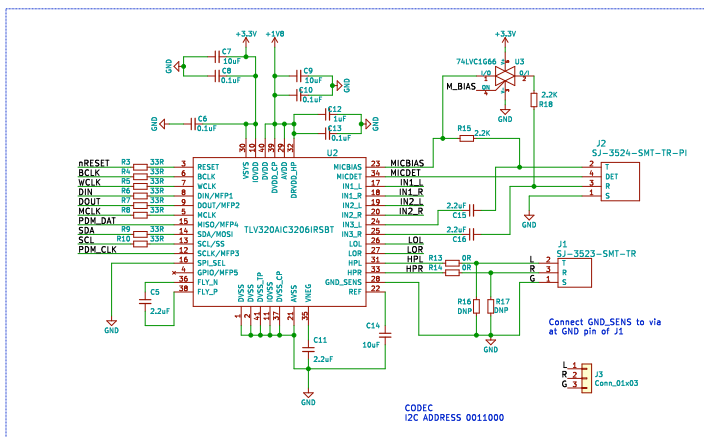
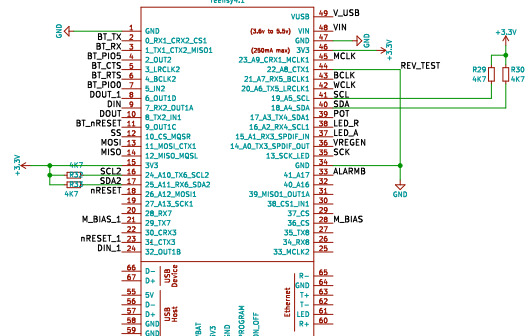
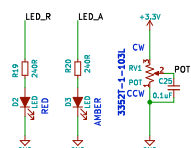
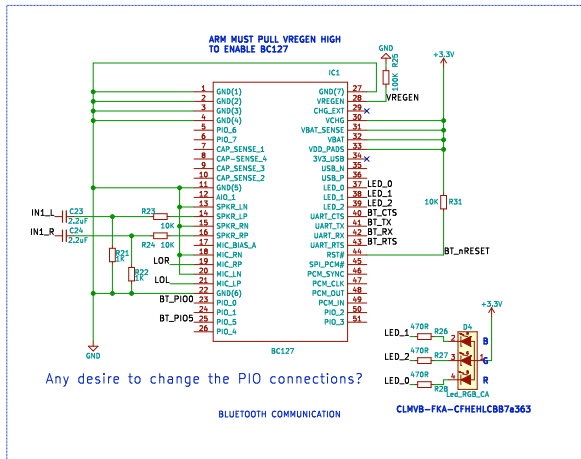


All unused pins will also be broken out and accessible  
<https://www.gjrc.com/teensy/schematic.html>

USE PIN 22 TO TEST BOARD REV

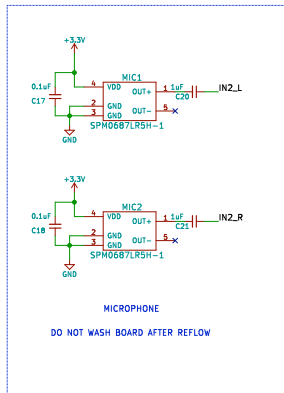

PROGRAM is already connected to push button pull-down on the Teensy  
 ON/OFF can float or have a pushbutton to GND  
 Force the chip off (press for 4-5 seconds) then on again (press for 1-2 seconds).  
<https://forum.gjrc.com/threads/57207-teensy-4-0-program-and-on-off-pins>

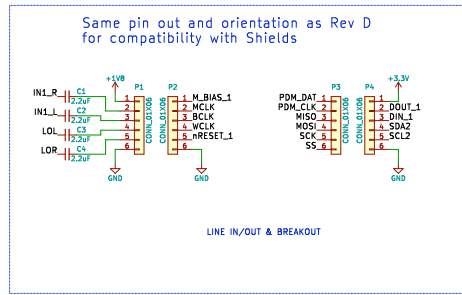

Removed P5 because it does not fit on board

