





# Bottom Panel

1 m

0.75 m

# Inset Front Panel

This is one option to have the front panel on the inside, but not completely covered so you can see the dice falling.

The other option is to use the "Front Panel Option" on the template for the back panel, and have that outset completely covering the front.

0.6 m