



Note: AVR MK2 ISP Programmer needs external power

Note: Arduino boards can be converted to ISP programmers. SS is RST. Bootloaders can be burnt using Arduino IDE

Note: Atmega328PB can be programmed using Serial Data port and USB-FTDI cable. Press RESET (SW1) on uploading.

TITLE: RFM69HCW Atmega328PB Integration		REV: 1.0
EasyEDA	Company: Your Company	Sheet: 1/1
	Date: 2021-02-22	Drawn By: Utsav Trivedi

54.356mm

31.750mm

U1 SW1 ICSP1 J1 J2 J3 J4

R1 R2 R3 R4 R5

C1 C2 C3 C4 C5 C6 C7 C8 C9 C10

PB1 RF-TX U3

Serial PE0 OE TX RX

0.591in/15.011mm
0.079in/2.007mm
0.157in/3.988mm*

