


54.356mm











31.750mm

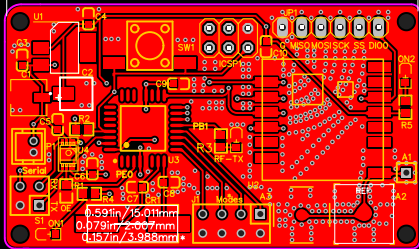

31.750 mm

~~0.079in/2.007mm~~

0.157in./3.988mm

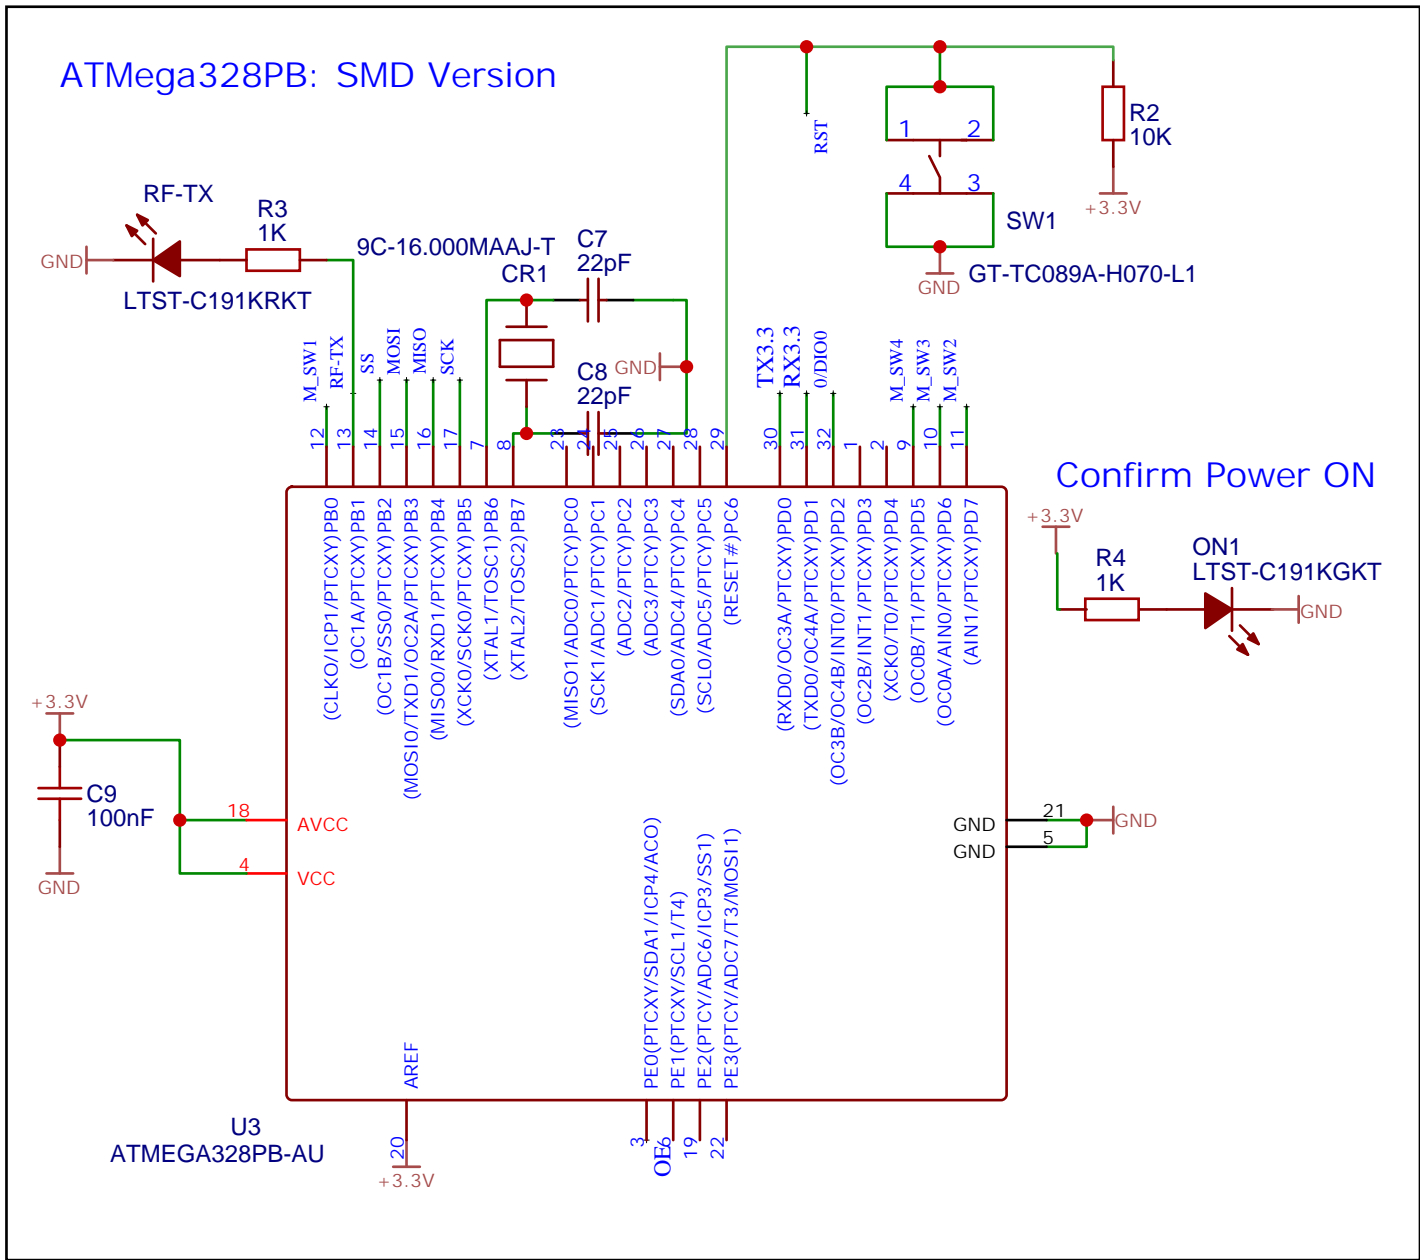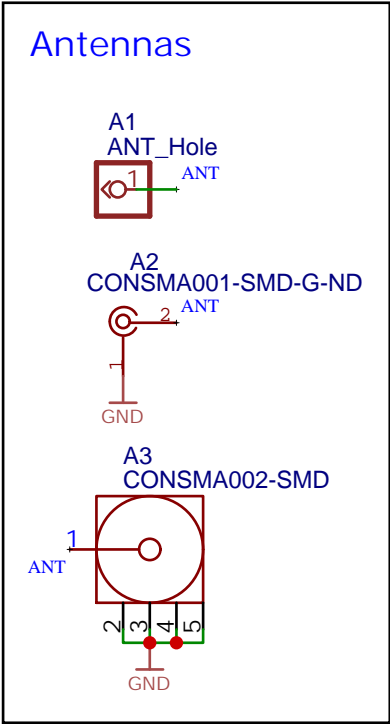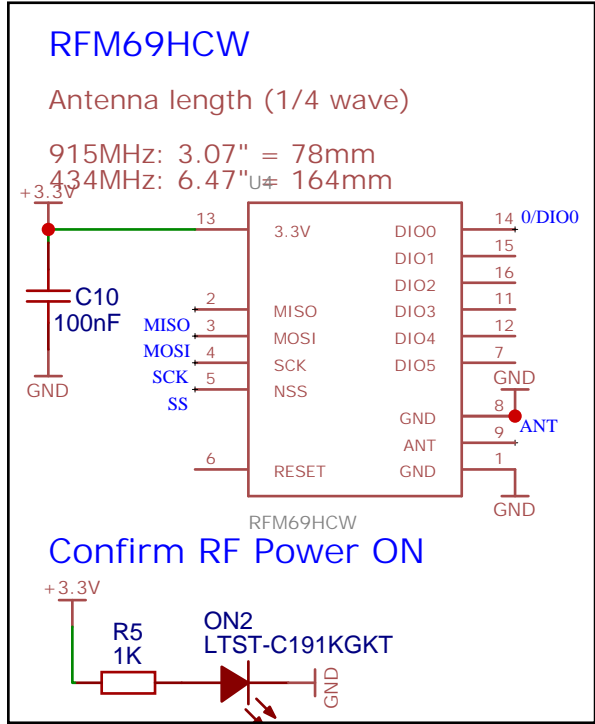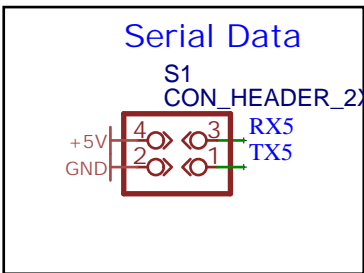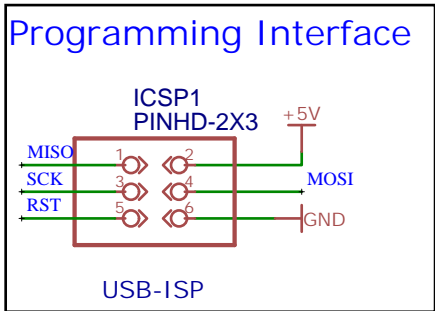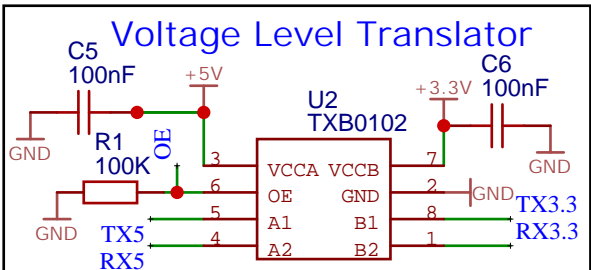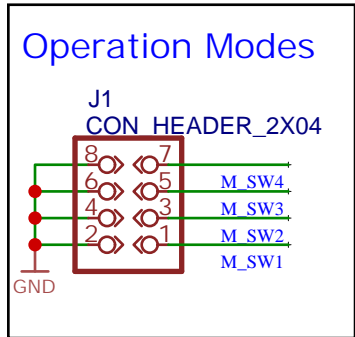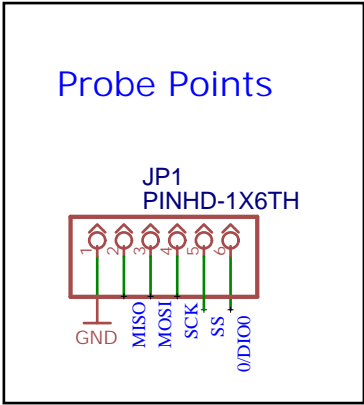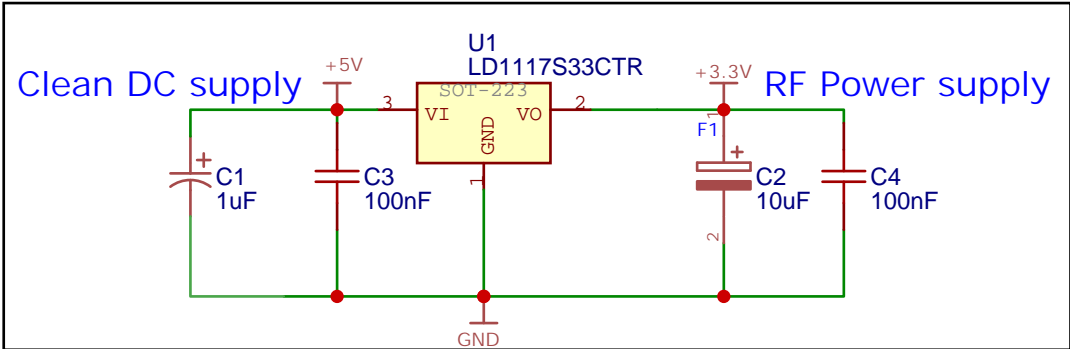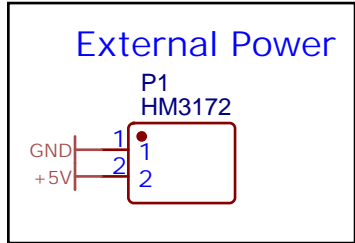

Note: AVR MK2 ISP Programmer needs external power

Note: Arduino boards can be converted to ISP programmers. SS is RST. Bootloaders can be burnt using Arduino IDE

Note: Atmega328PB can be programmed using Serial Data port and USB-FTDI cable. Press RESET (SW1) on uploading.

TITLE: RFM69HCW Atmega328PB Integration		REV: 1.0
EasyEDA	Company: Your Company	Sheet: 1/1
	Date: 2021-02-22	Drawn By: Utsav Trivedi