



VNM HANDBRAKE Quick Guide

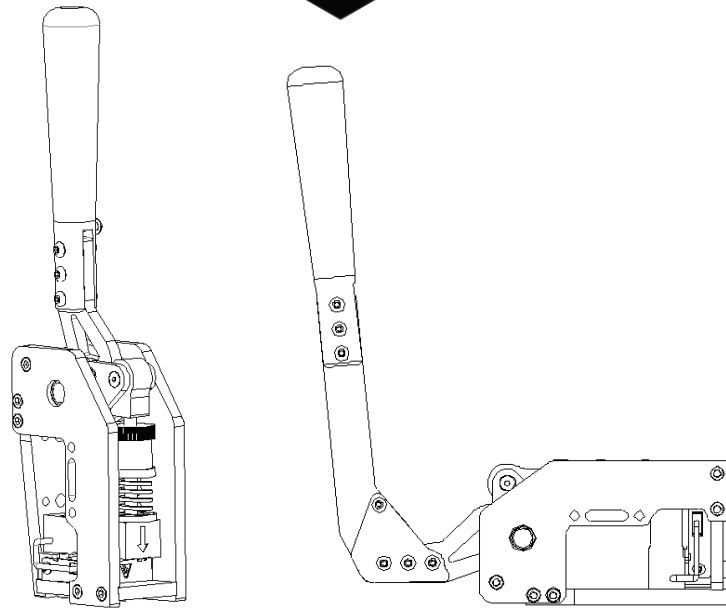

Content

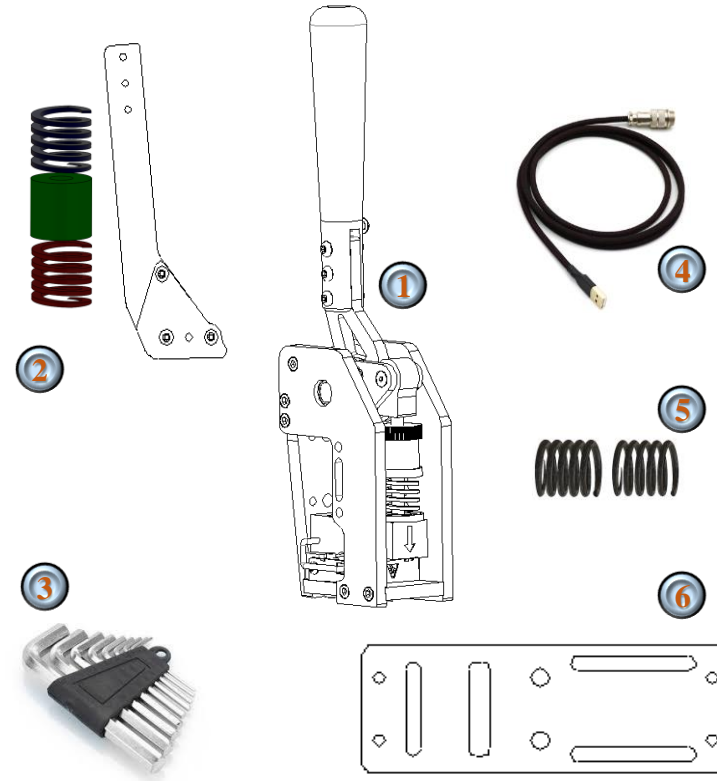


1. VNM Handbrake
2. **Add-on** (horizontal arm; red, blue spring & green elastomer)
3. Hexagon alloy key
4. USB - GX12 cable
5. Steel springs
6. Back plate for Handbrake and Shifter

Connection


- ✓ At the left of Handbrake is: Plug-in loadcell input by jack XH2.54-4P

- ✓ At the right of Handbrake is: 1. Switch **DFU/Game Mode** Slide left side to select **DFU Mode** or right side to select **Game Mode**

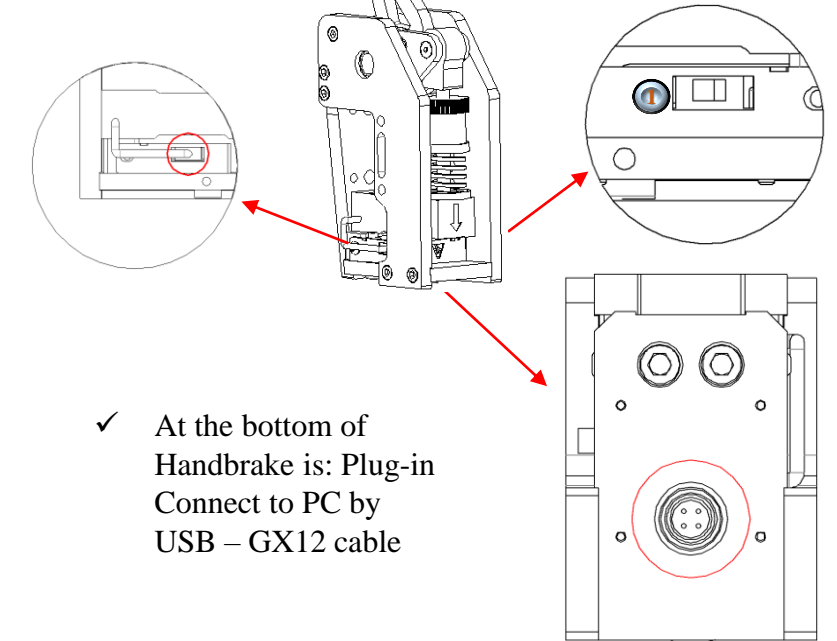

- ✓ At the bottom of Handbrake is: Plug-in Connect to PC by USB - GX12 cable

Exchange Elastomer & Spring

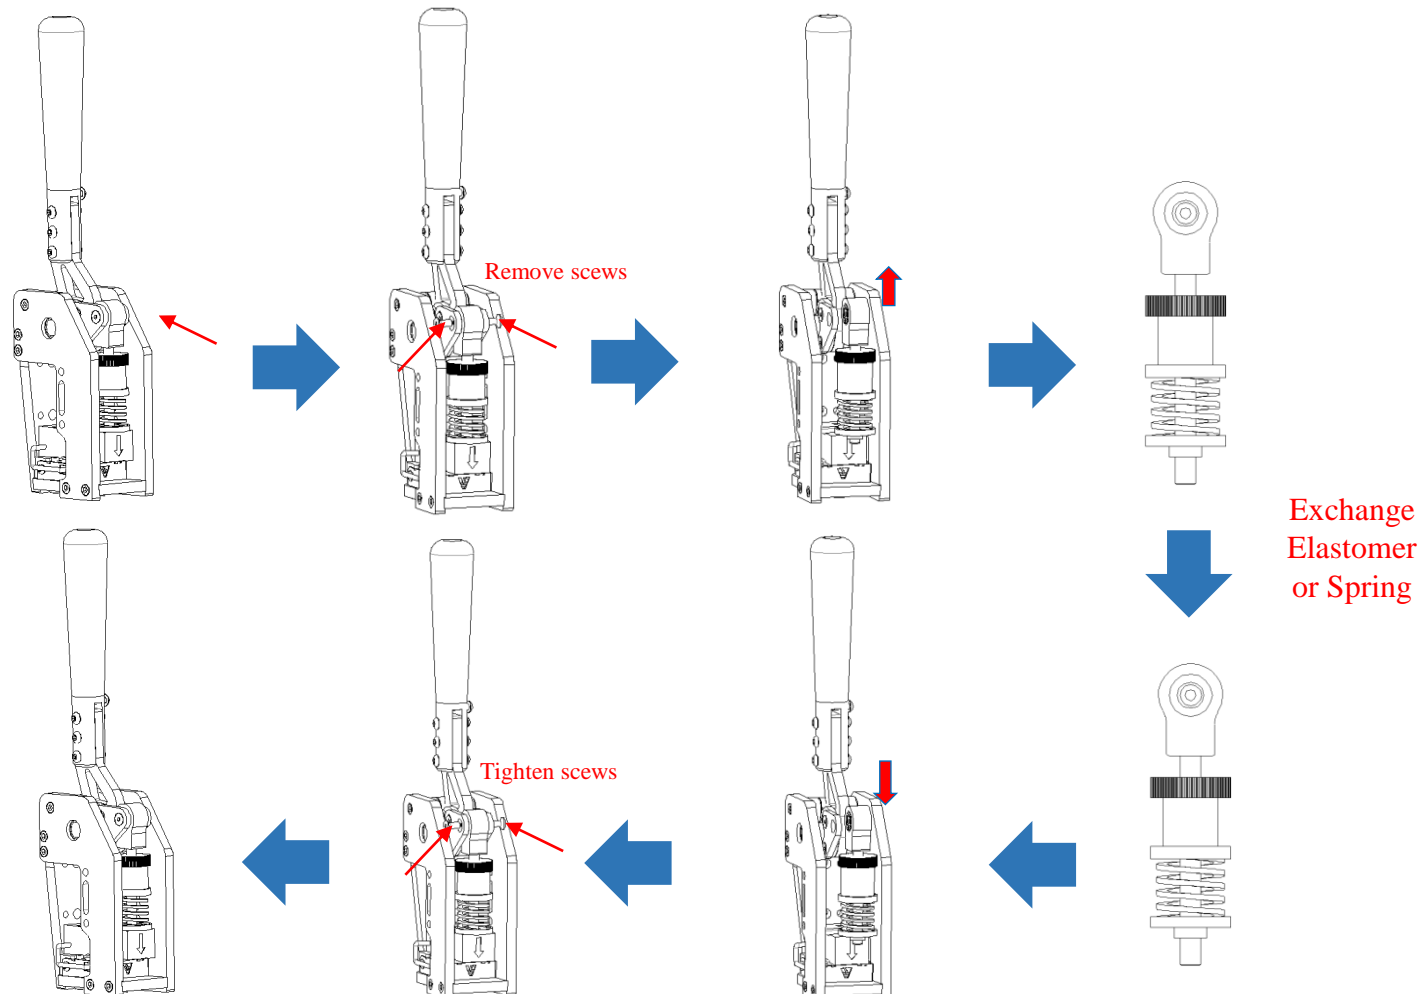


Exchange
Elastomer
or Spring

Adjust Handbrake

Adjust Spring & elastomer:

- ✓ Clockwise to made force heavier.
- ✓ Counter-clockwise to made force lighter.

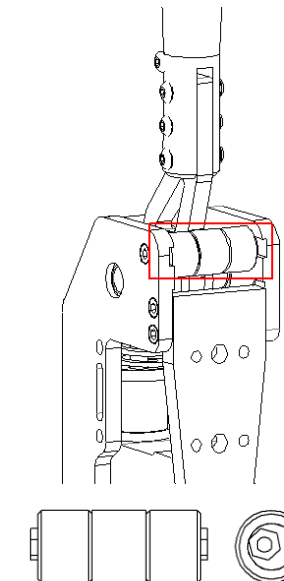

Adjust the angle of inclination:

- ✓ Remove 2 screws left, right
- ✓ Drag out adjustment part
- ✓ Rotate it, it has 6 positions. Choose position you want.
- ✓ Push that adjustment part in sliding slot.
- ✓ Screw up and play.

Mounting Drawing

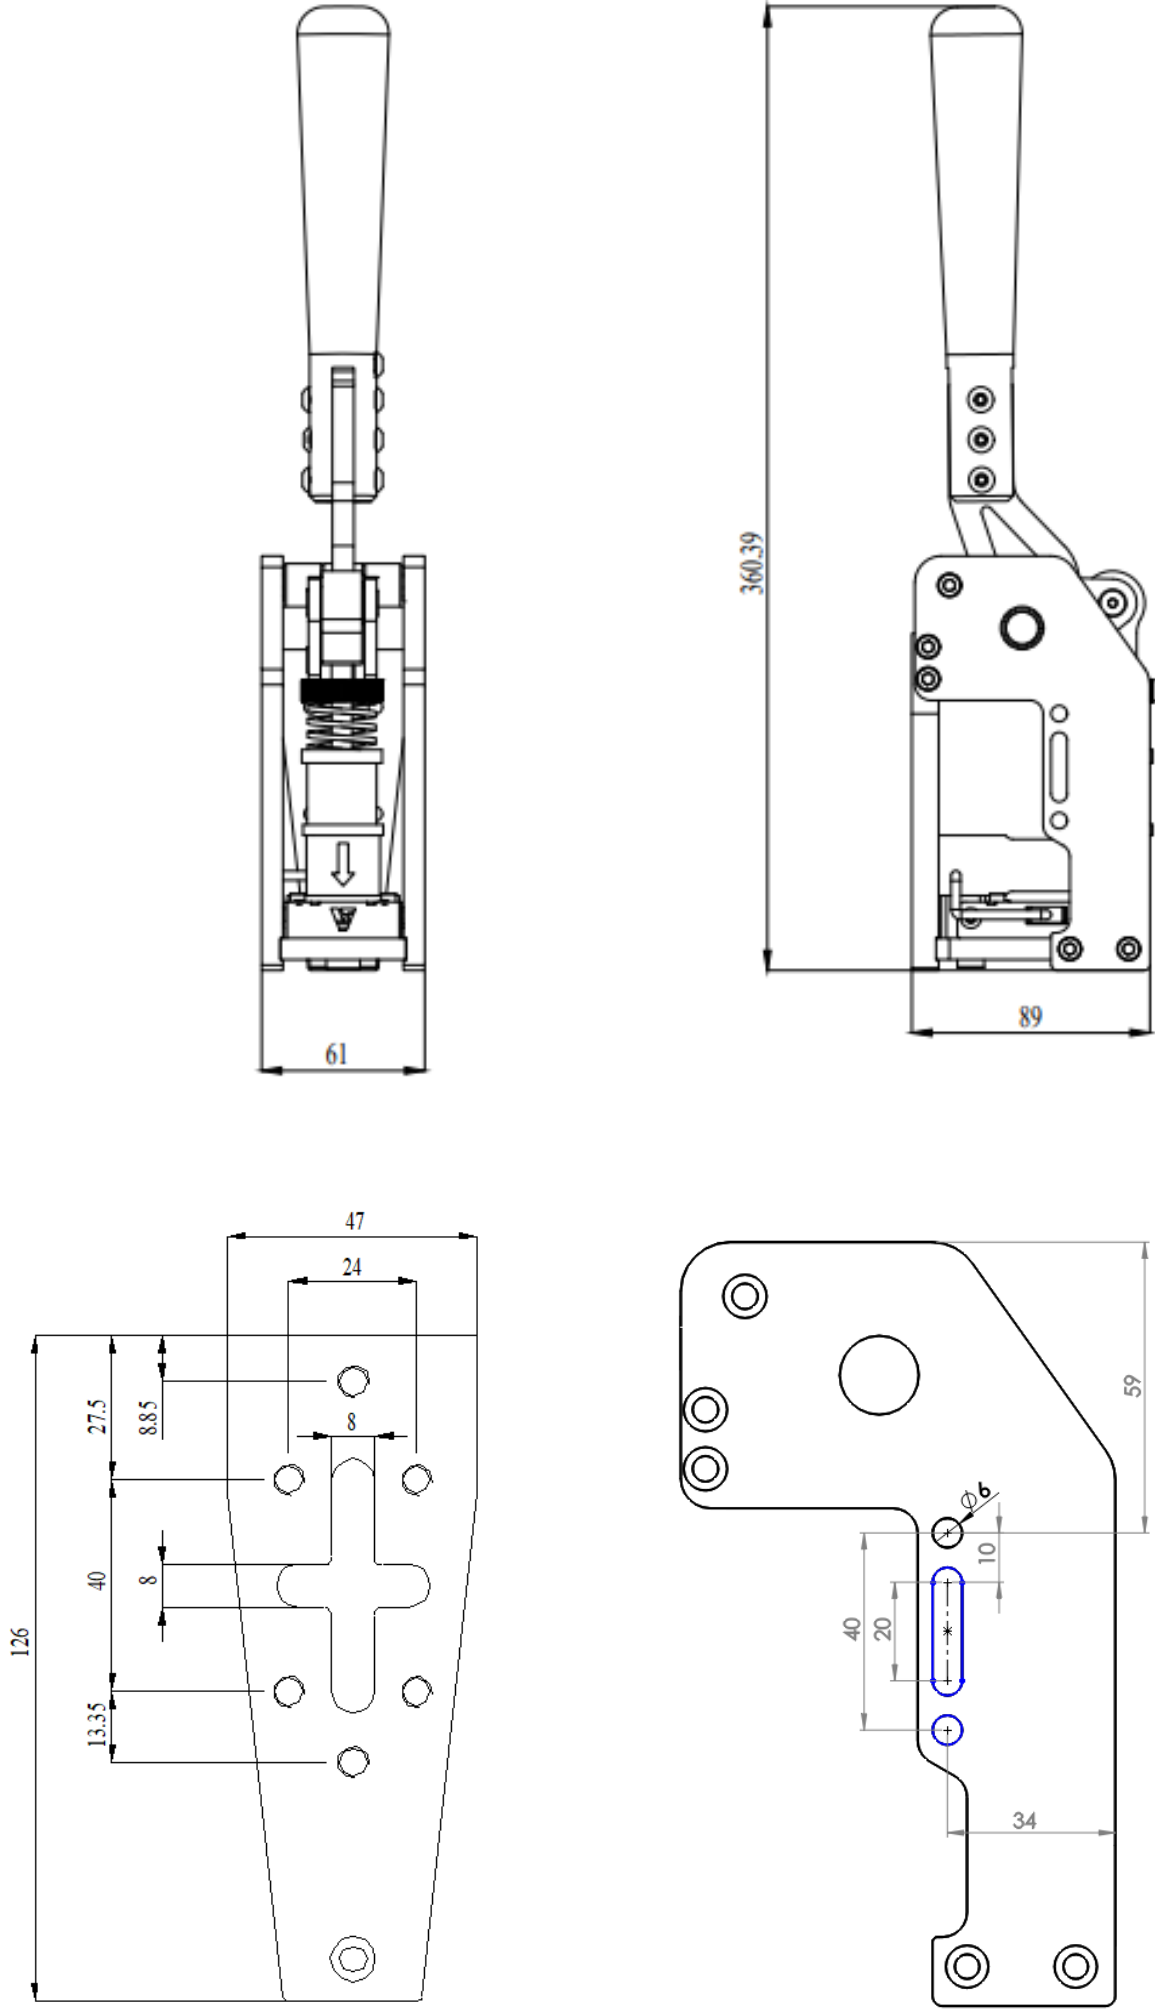


Plate Handbrake - Shifter Drawing

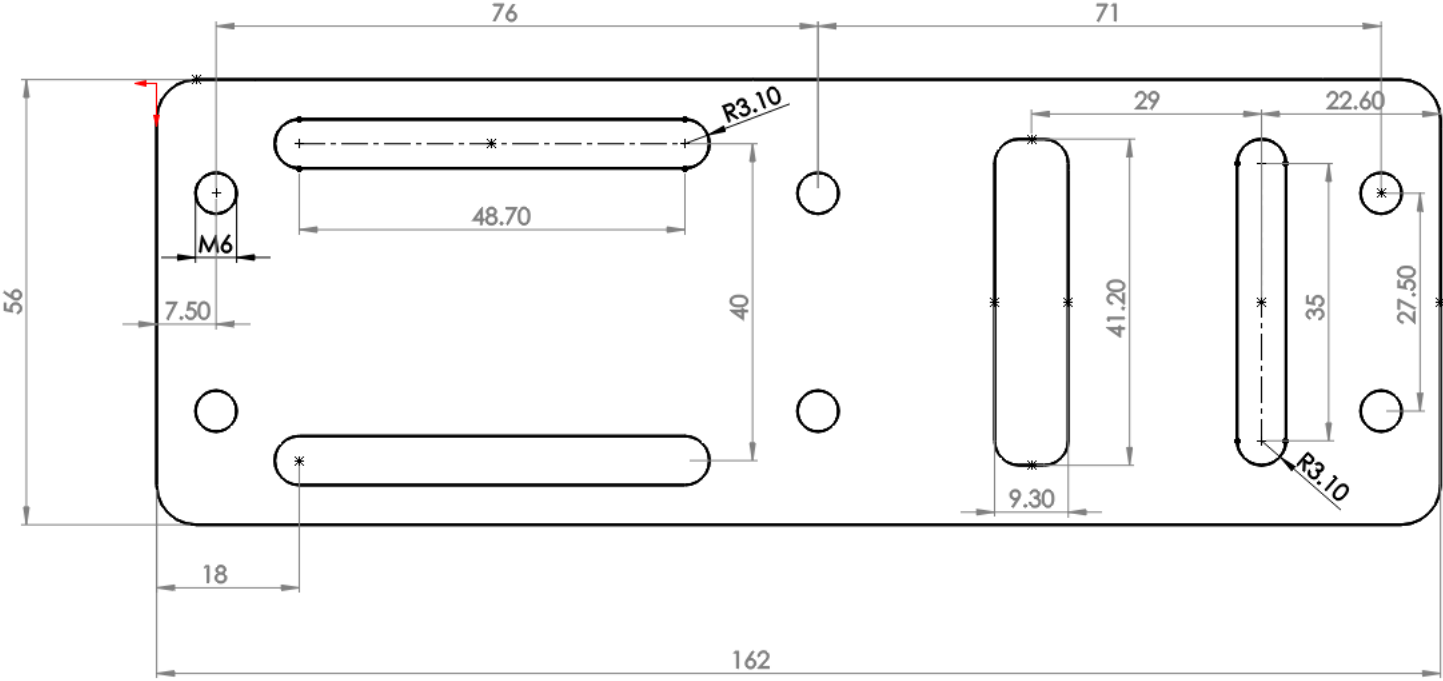


Table Clamp

