

DTD Shot Clock

Main Menu:



Regular clock:

Settings:

Save

Shotclock:

27

 
Timebank:

30

MAIN

MENU

Buttons:

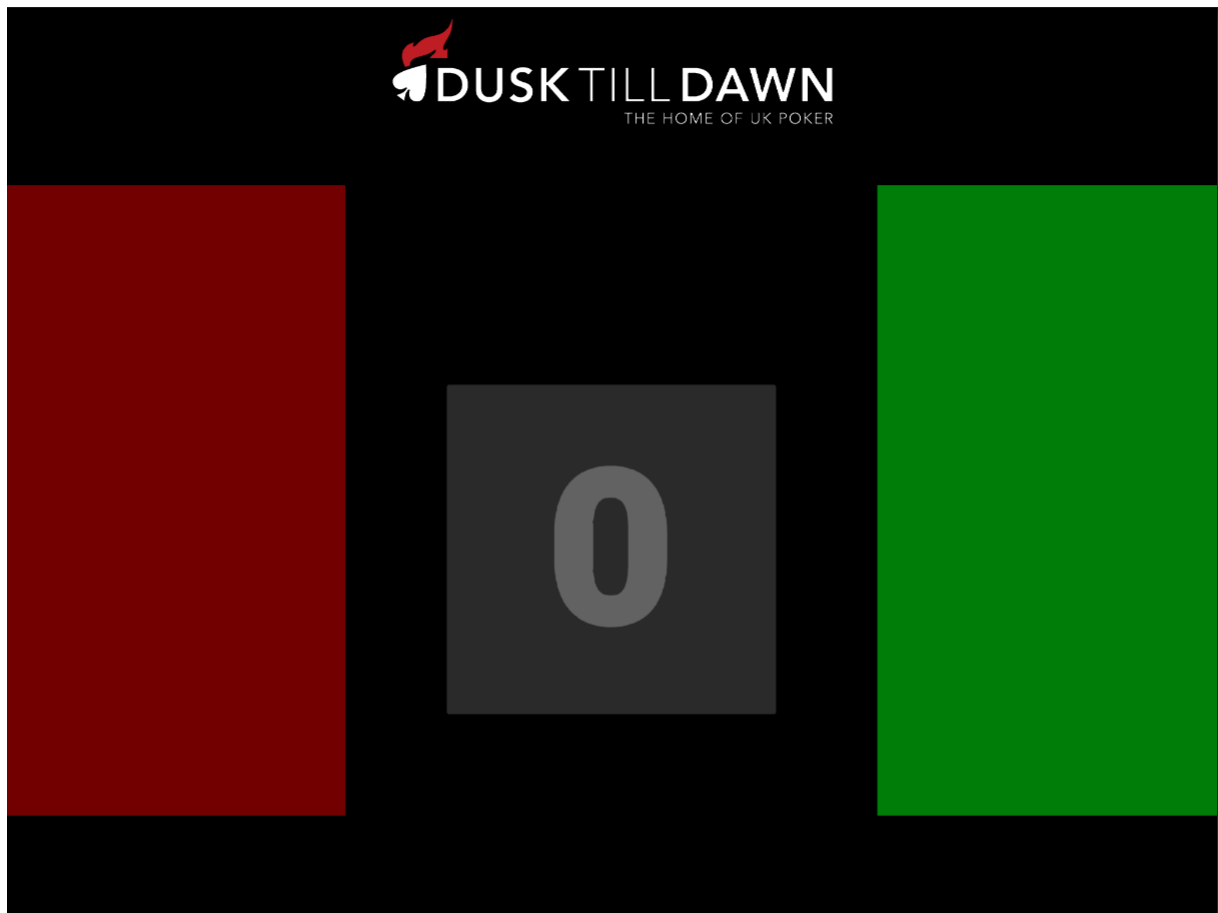

Red: New player (default shotclock)

Green: Time Bank (Add a timebank to current time)

Grey: Pause / Unpause (pause the shotclock for chipcounts and floorcalls)

DTD Logo: Back to settings

Final view:




Alternative shotclock:

Settings:

| | | |
|-----------------|----|--------------|
| | | SAVE |
| SHOTCLOCK: | 27 | |
| TIMEBANK: | 30 | |
| FLOP SHOTCLOCK: | 37 | |
| FLOP TIMEBANK: | 30 | |
| | | MAIN MENU |

 Buttons:

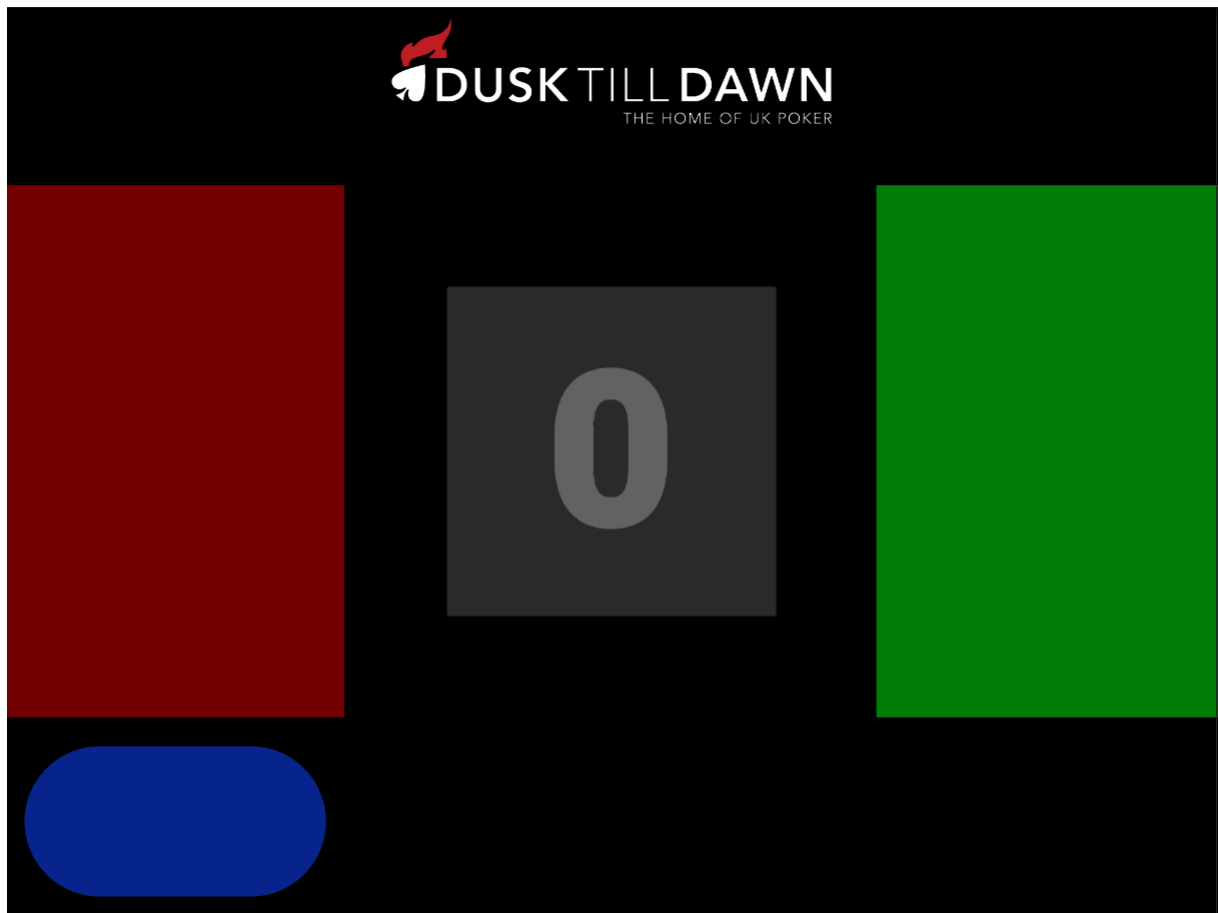

Red: New player

 
Green: Time Bank

Grey: Pause / Unpause

DTD Logo: Back to settings

Blue: Switch between preflop and postflop

Final view:

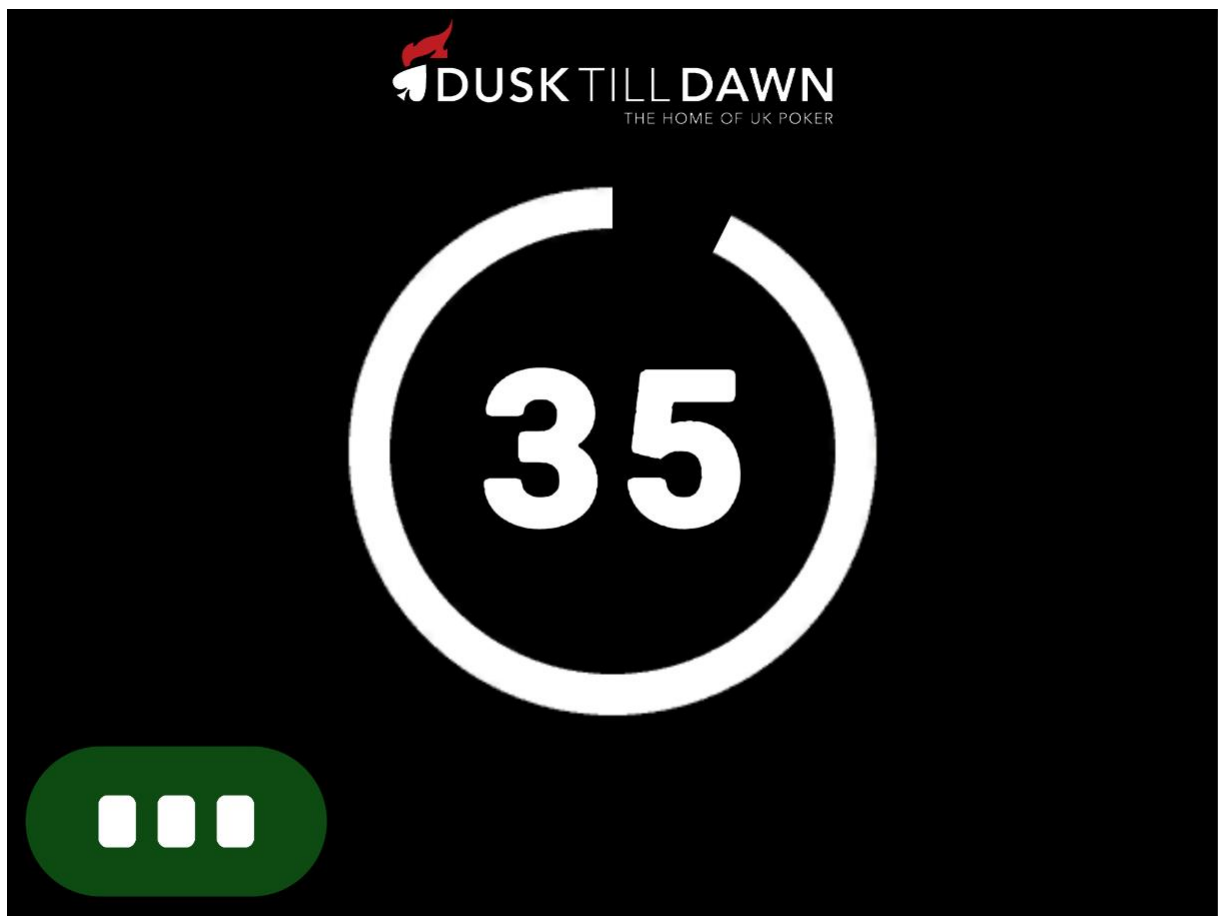

*Currently on the flop/turn/river. Preflop clock is indicated when the green button is without the 3 cards.

SnG mode:

Settings:

Shotclock: 27

Timebank: 30

| | | |
|----------|------|------|
| Level 1: | 100 | 200 |
| Level 2: | 200 | 400 |
| Level 3: | 300 | 600 |
| Level 4: | 500 | 1000 |
| Level 5: | 600 | 1200 |
| Level 6: | 800 | 1600 |
| Level 7: | 1000 | 2000 |
| Level 8: | 1200 | 2400 |
| Level 9: | 1500 | 3000 |

| | | |
|-----------|-------|-------|
| Level 10: | 2000 | 4000 |
| Level 11: | 2500 | 5000 |
| Level 12: | 3000 | 6000 |
| Level 13: | 4000 | 8000 |
| Level 14: | 5000 | 10000 |
| Level 15: | 6000 | 12000 |
| Level 16: | 8000 | 16000 |
| Level 17: | 10000 | 20000 |
| Level 18: | 10000 | 20000 |

 
Level duration (in seconds): 600

SAVE

EXIT

MAIN
MENU

Buttons:

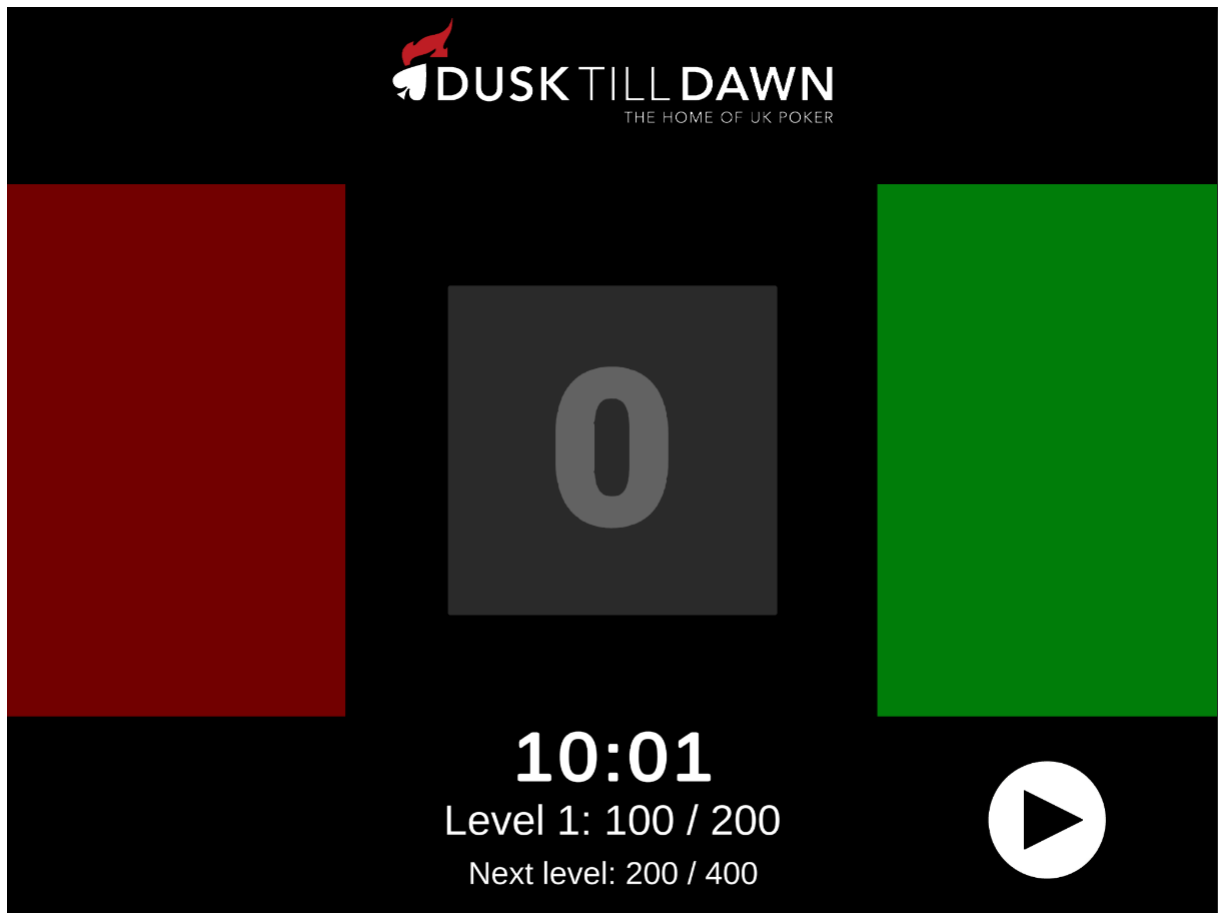

Red: New player

Green: Time Bank

Grey: Pause / Unpause

DTD Logo: Back to settings

Play button: Pause / unpause SnG clock (pauses shotclock as well for floor calls, etc)

Final view:

