





MCN Signal Routing

| | |
|---------------|-------|
| REAR_SUSP | AIN-1 |
| REAR_BRK_PRES | AIN-2 |
| 12V_SHUNT | AIN-3 |
| DC_DC_TEMP | AIN-5 |
| SPARE1_5V | AIN-6 |
| SPARE2_3V | AIN-7 |
| SPARE3_3V | AIN-8 |
| REAR_WSS | GP0 |
| FRAME_FAULT | GP1 |

