



Do not use internal flash pins unless you know what's you are doing

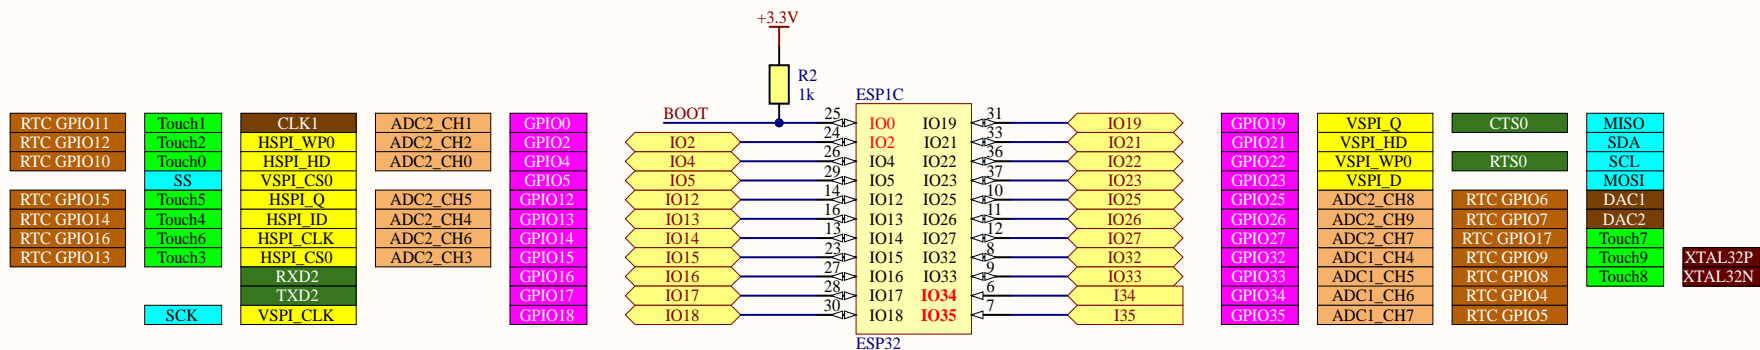


IO2 defines a boot mode, use as output


Title			
ESP32 WROOM module schematic			
Size	Number	Revision	
A4		1.0	
Date:	4.22.2022	Sheet of	
File:	C:\altium\...\ESP32_WROOM2.SchDoc	Drawn By:	Pavel Nadelin

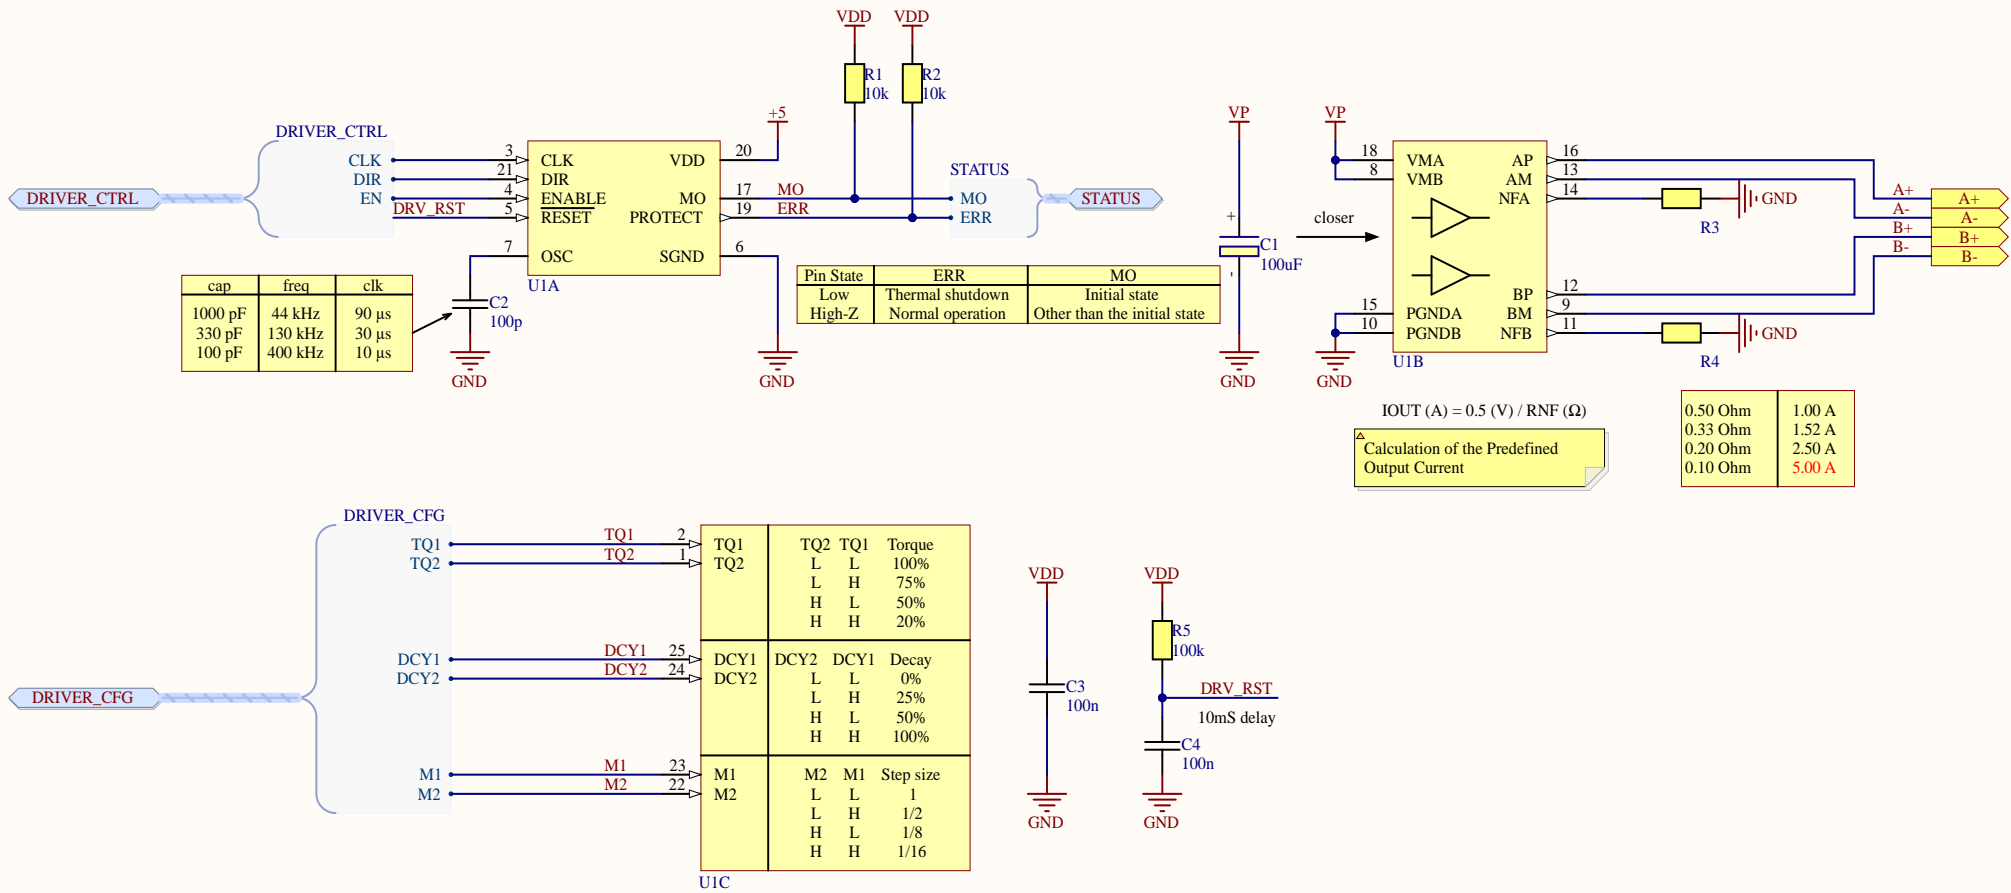



Title		
TB6560 stepper motor driver		
Size	Number	Revision
A4		
Date:	4.22.2022	Sheet of
File:	C:\altium\TB6560AHQ_stepper_driver.SchDoc	Drawn By: Pavel Nadein

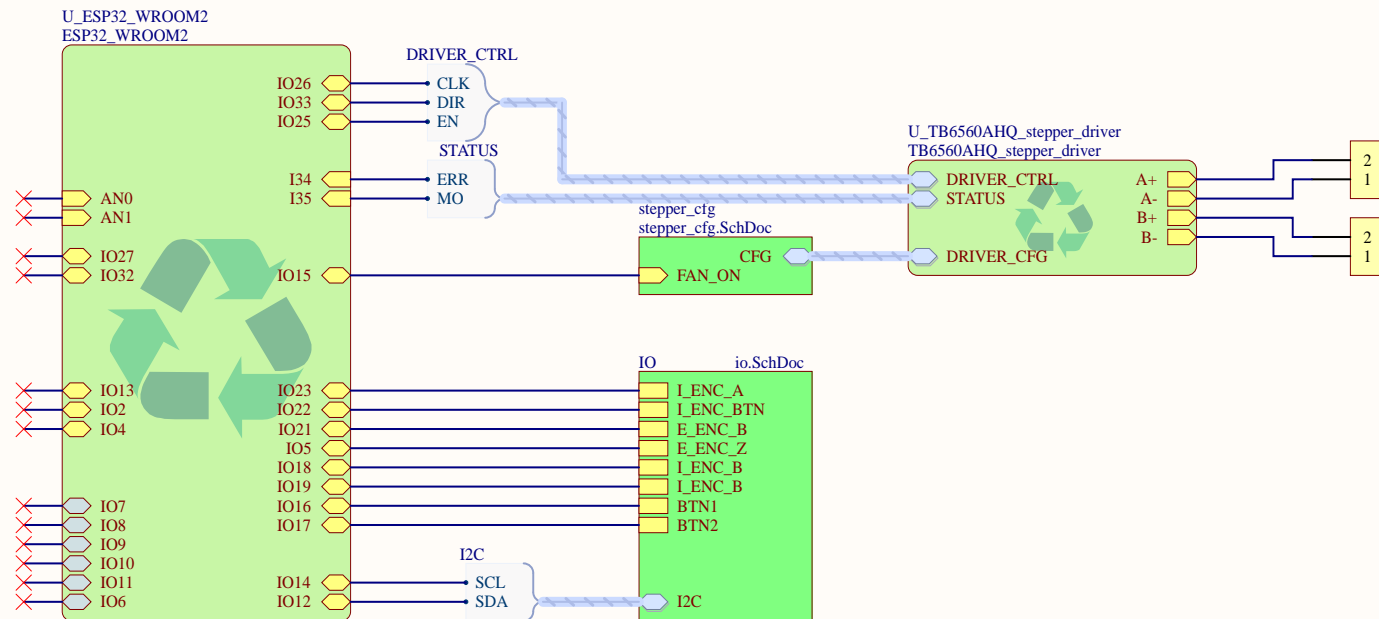

Title		
Size	Number	Revision
A4		
Date:	4.22.2022	Sheet of
File:	C:\Users\...\top_sheet.SchDoc	Drawn By:

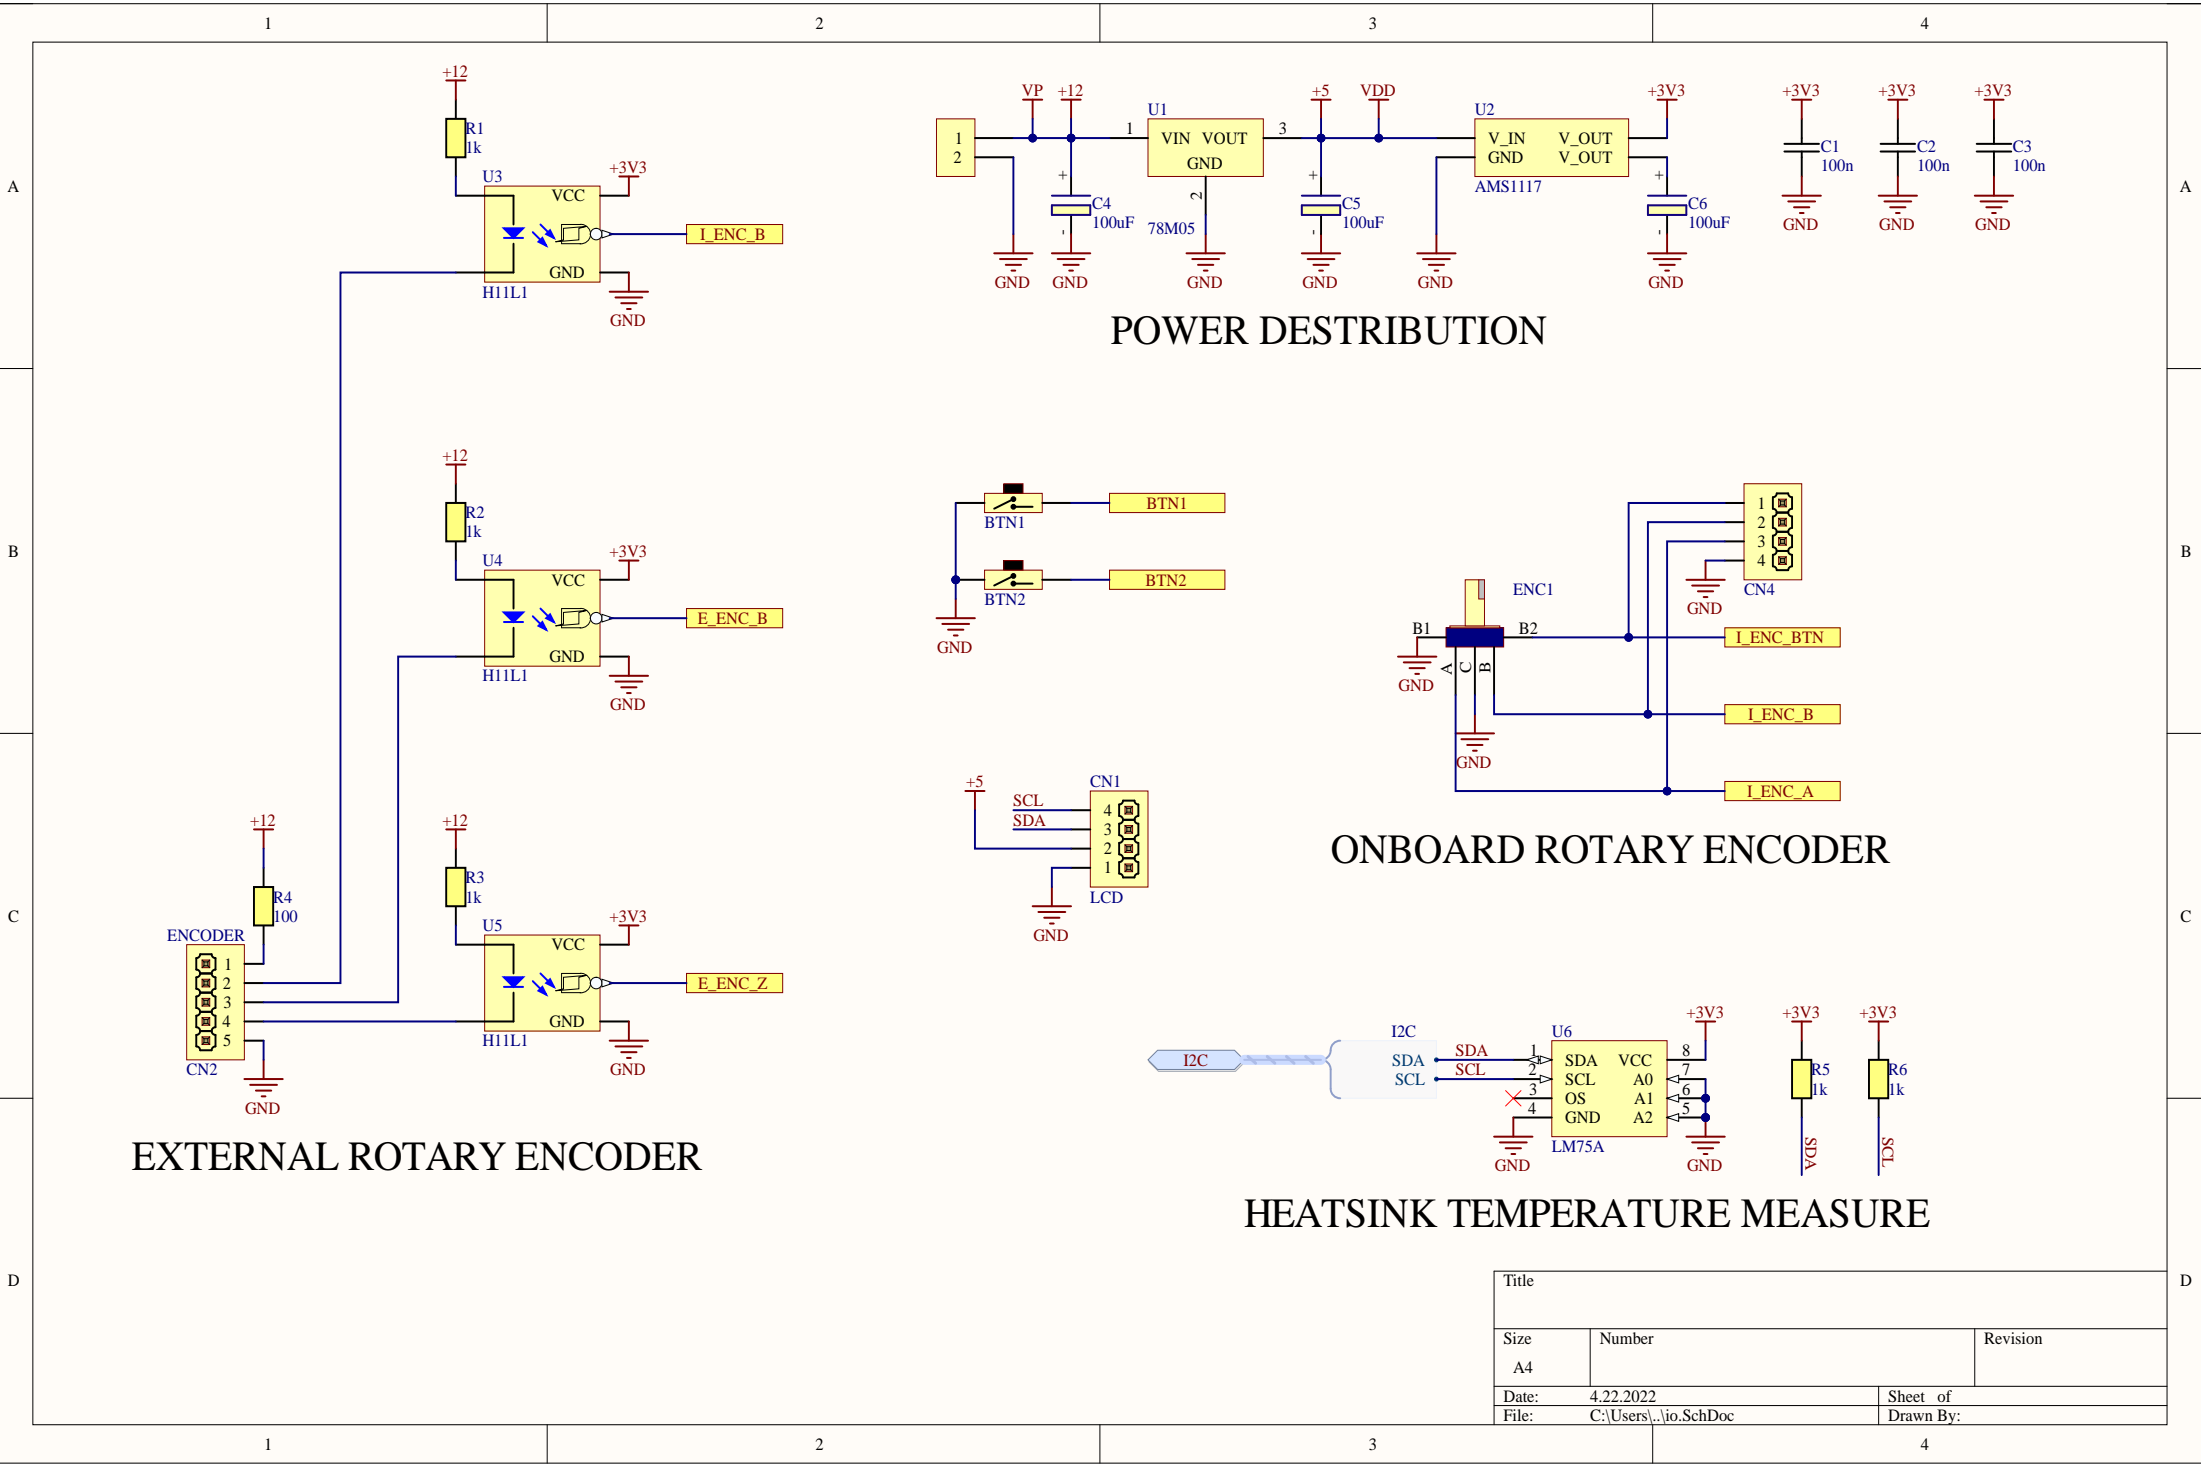

Title		
Size	Number	Revision
A4		
Date:	4.22.2022	Sheet of
File:	C:\Users\...\io.SchDoc	Drawn By:

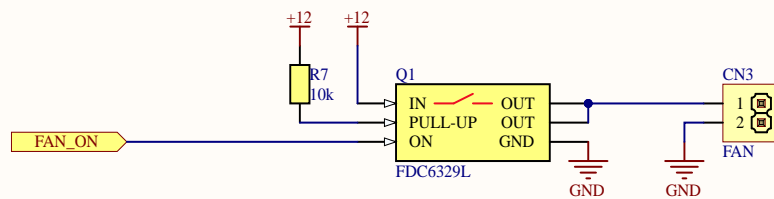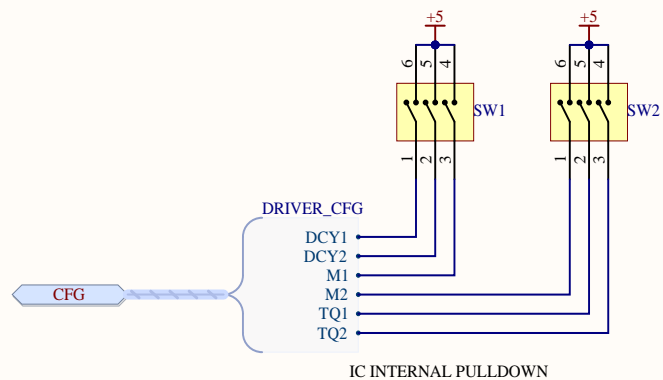

Title		
Size	Number	Revision
A4		
Date:	4.22.2022	Sheet of
File:	C:\Users\...\stepper_cfg.SchDoc	Drawn By:

