





### Injector Driver 1

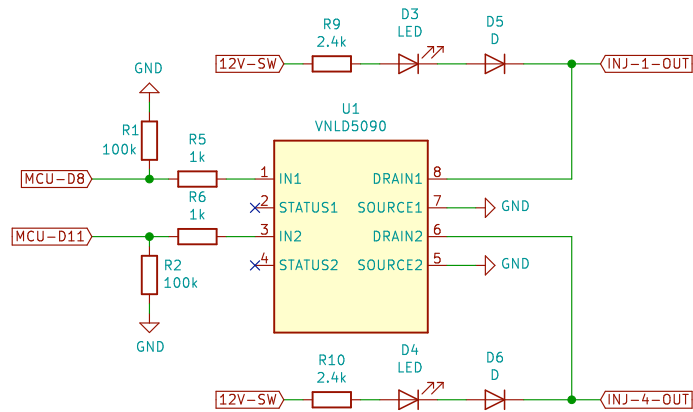


### Injector Driver 2

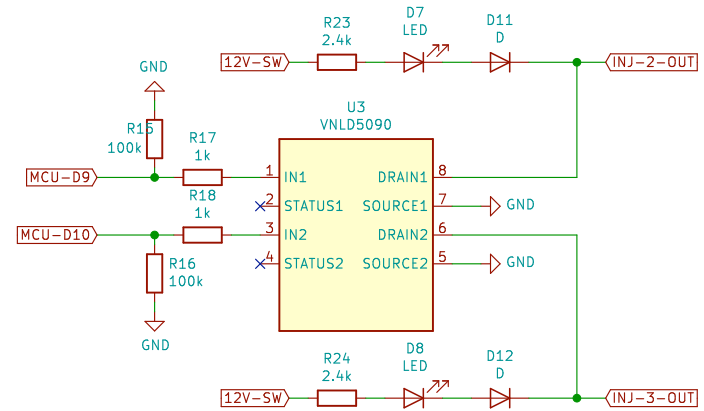

### Ignition Driver 1

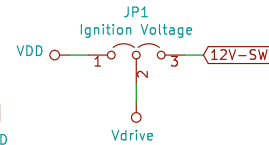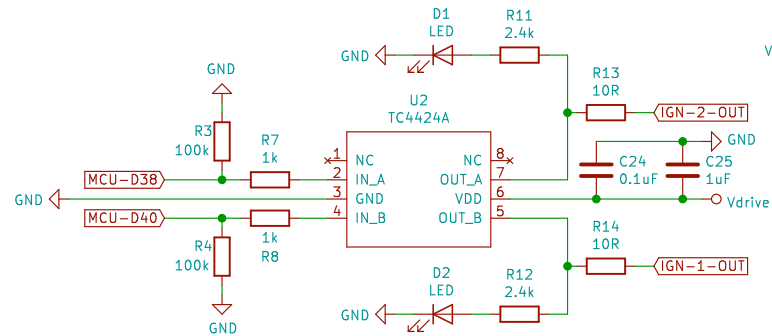

### Ignition Driver 2

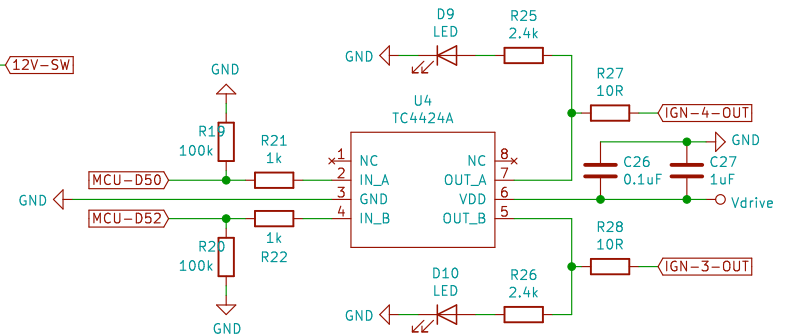

Sheet: /Fuel & Ignition/  
File: Fuel\_Ignition.sch

#### Title:


Size: A4


Date:


KiCad E.D.A. kicad (5.1.4-0-10\_14)

Rev:


Id: 2/7

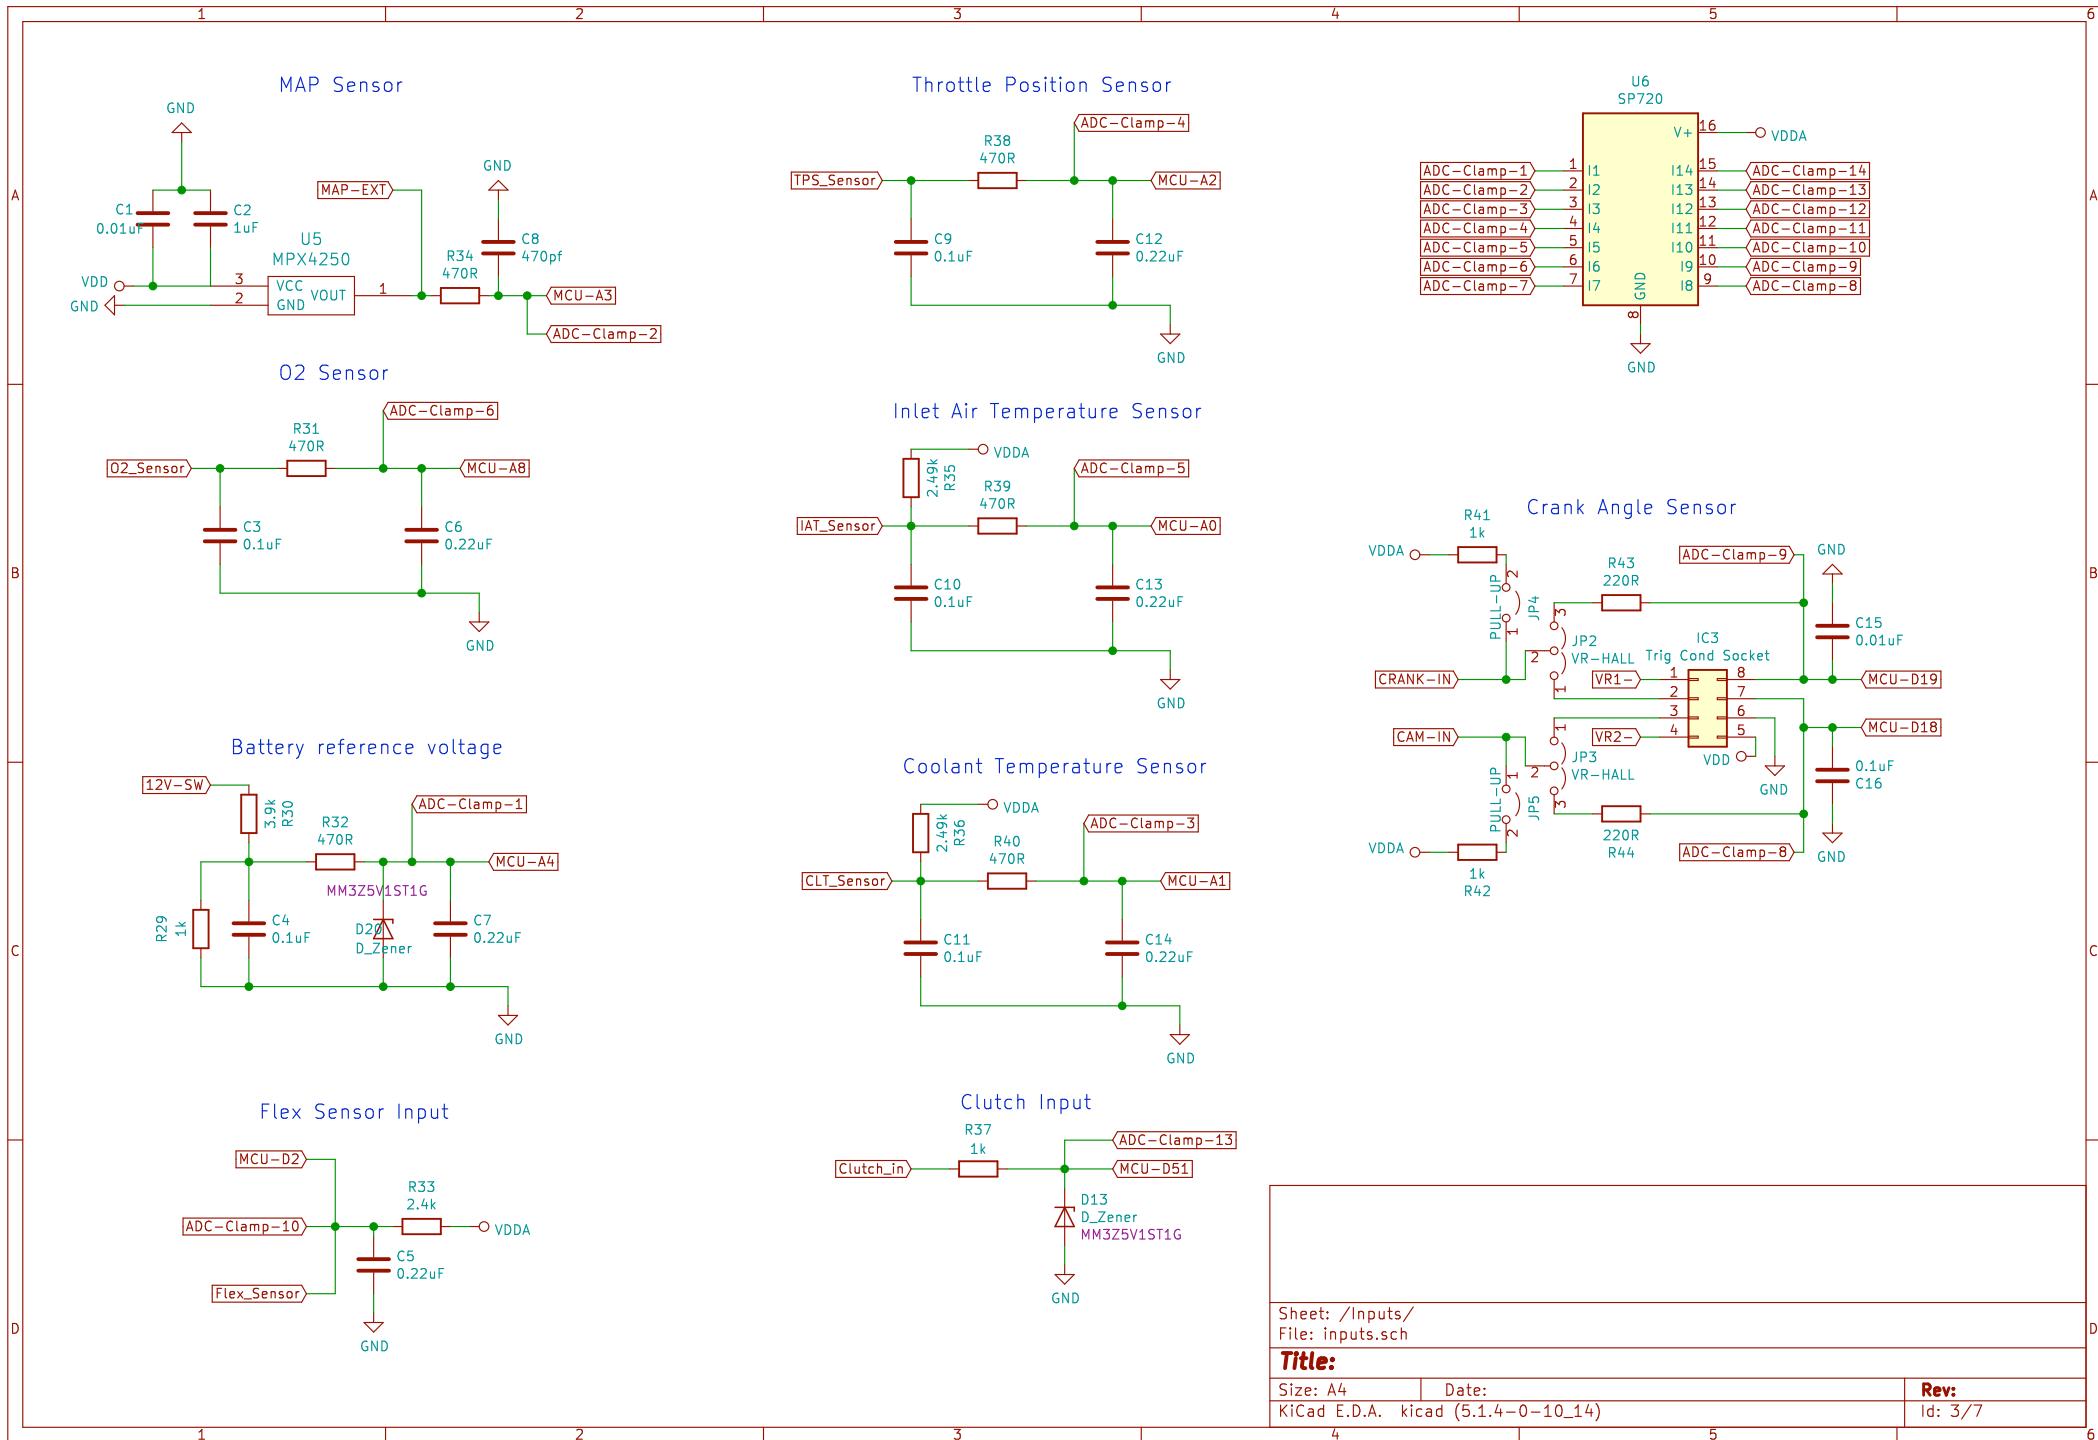

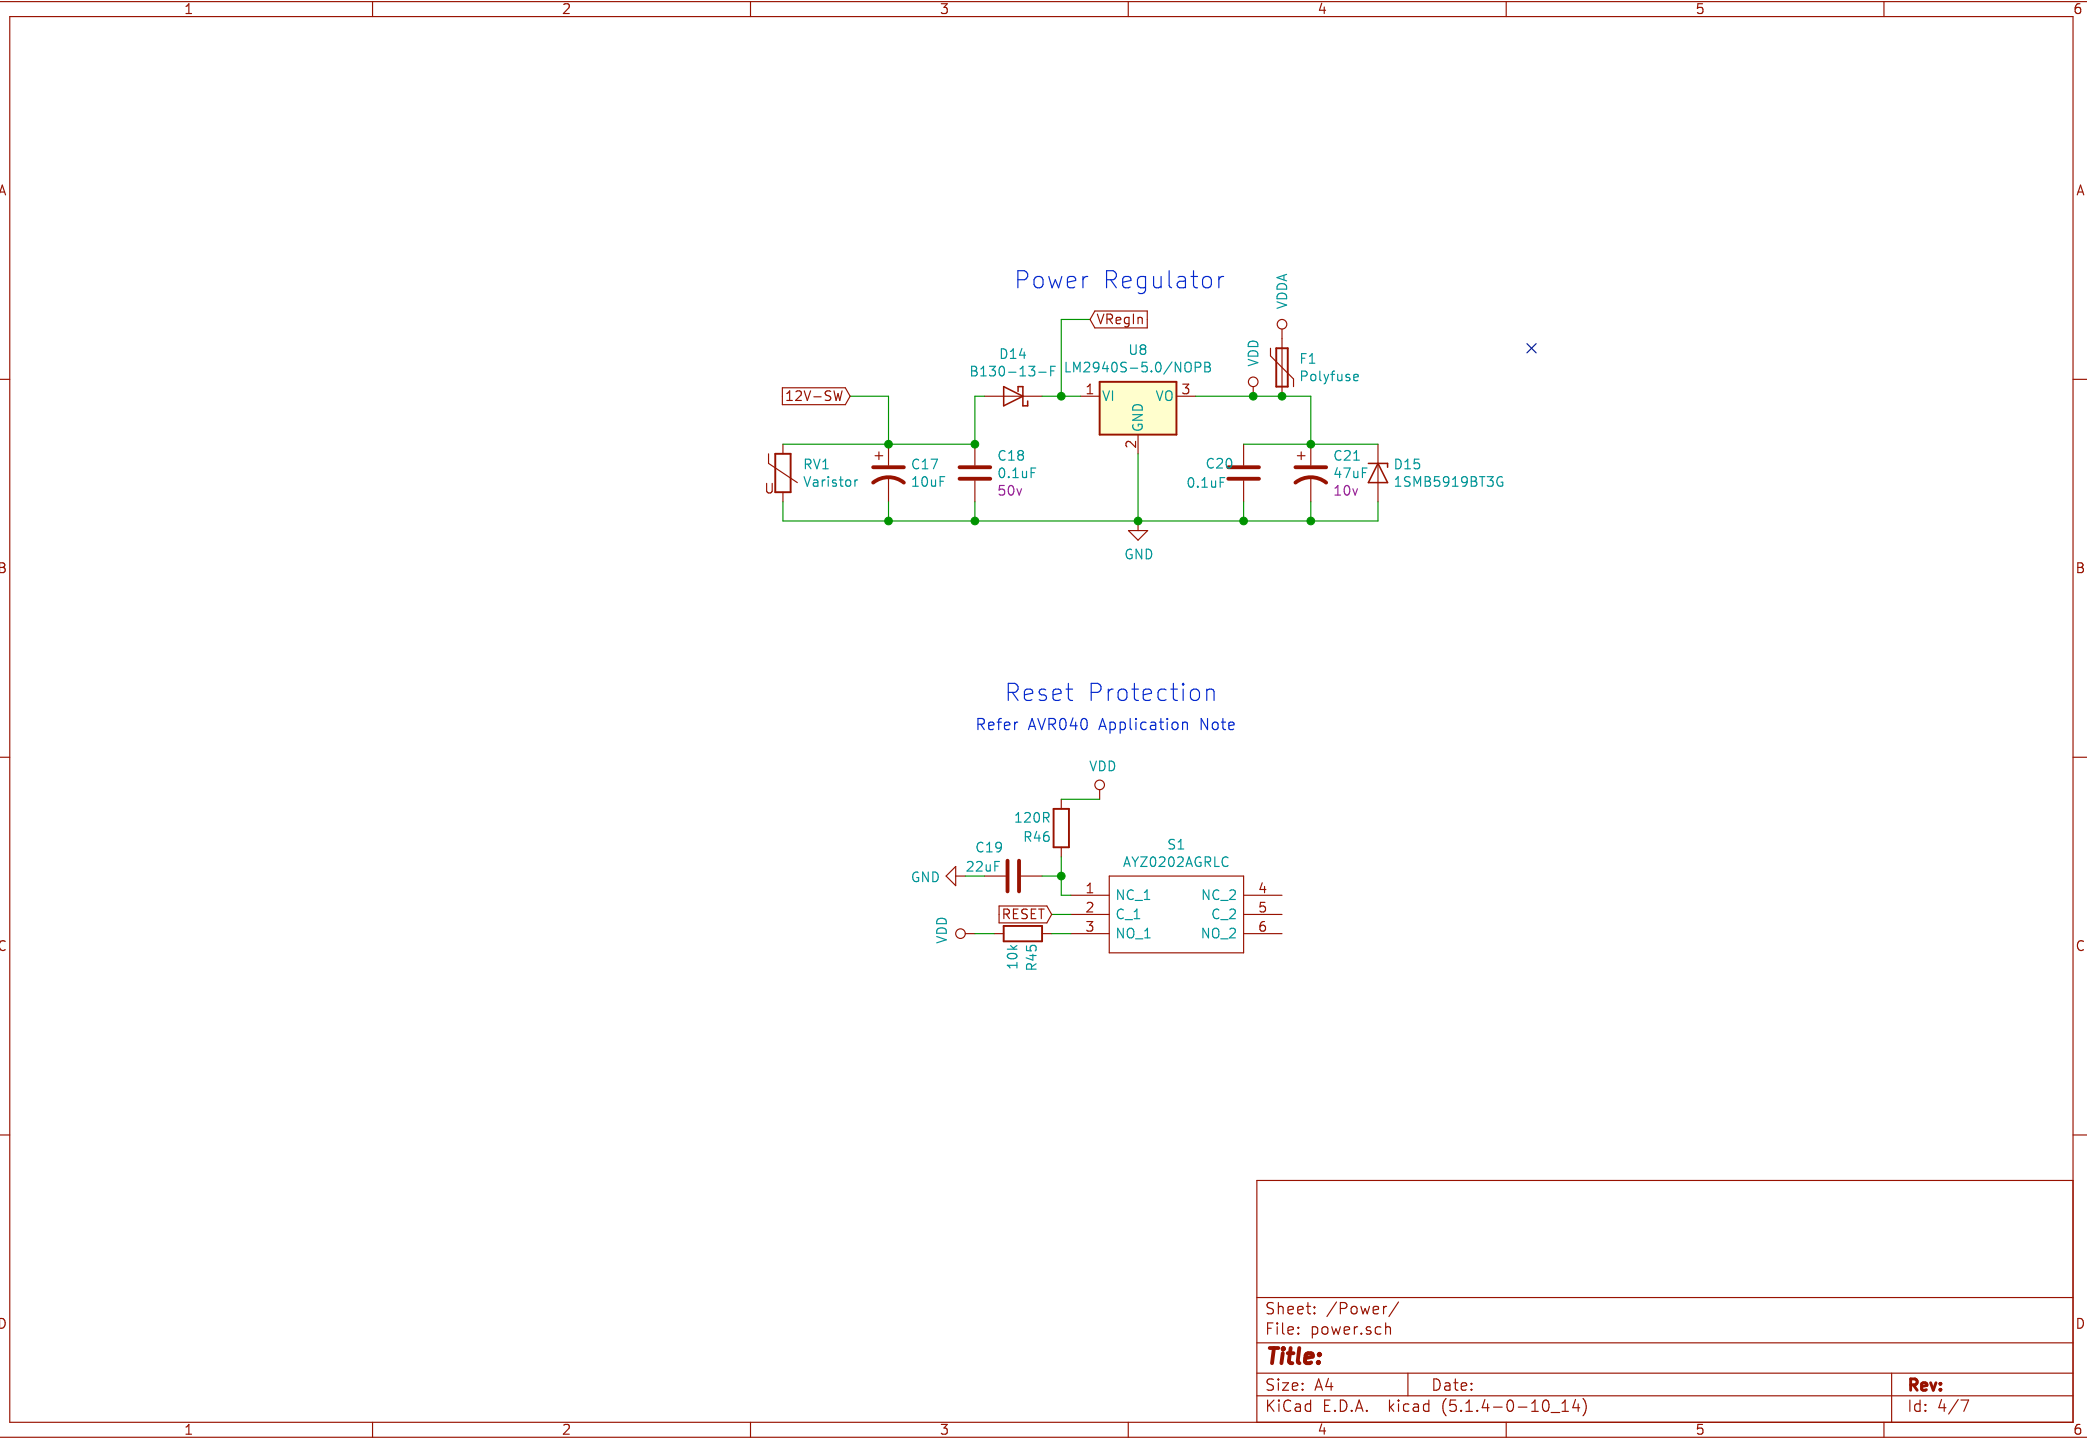


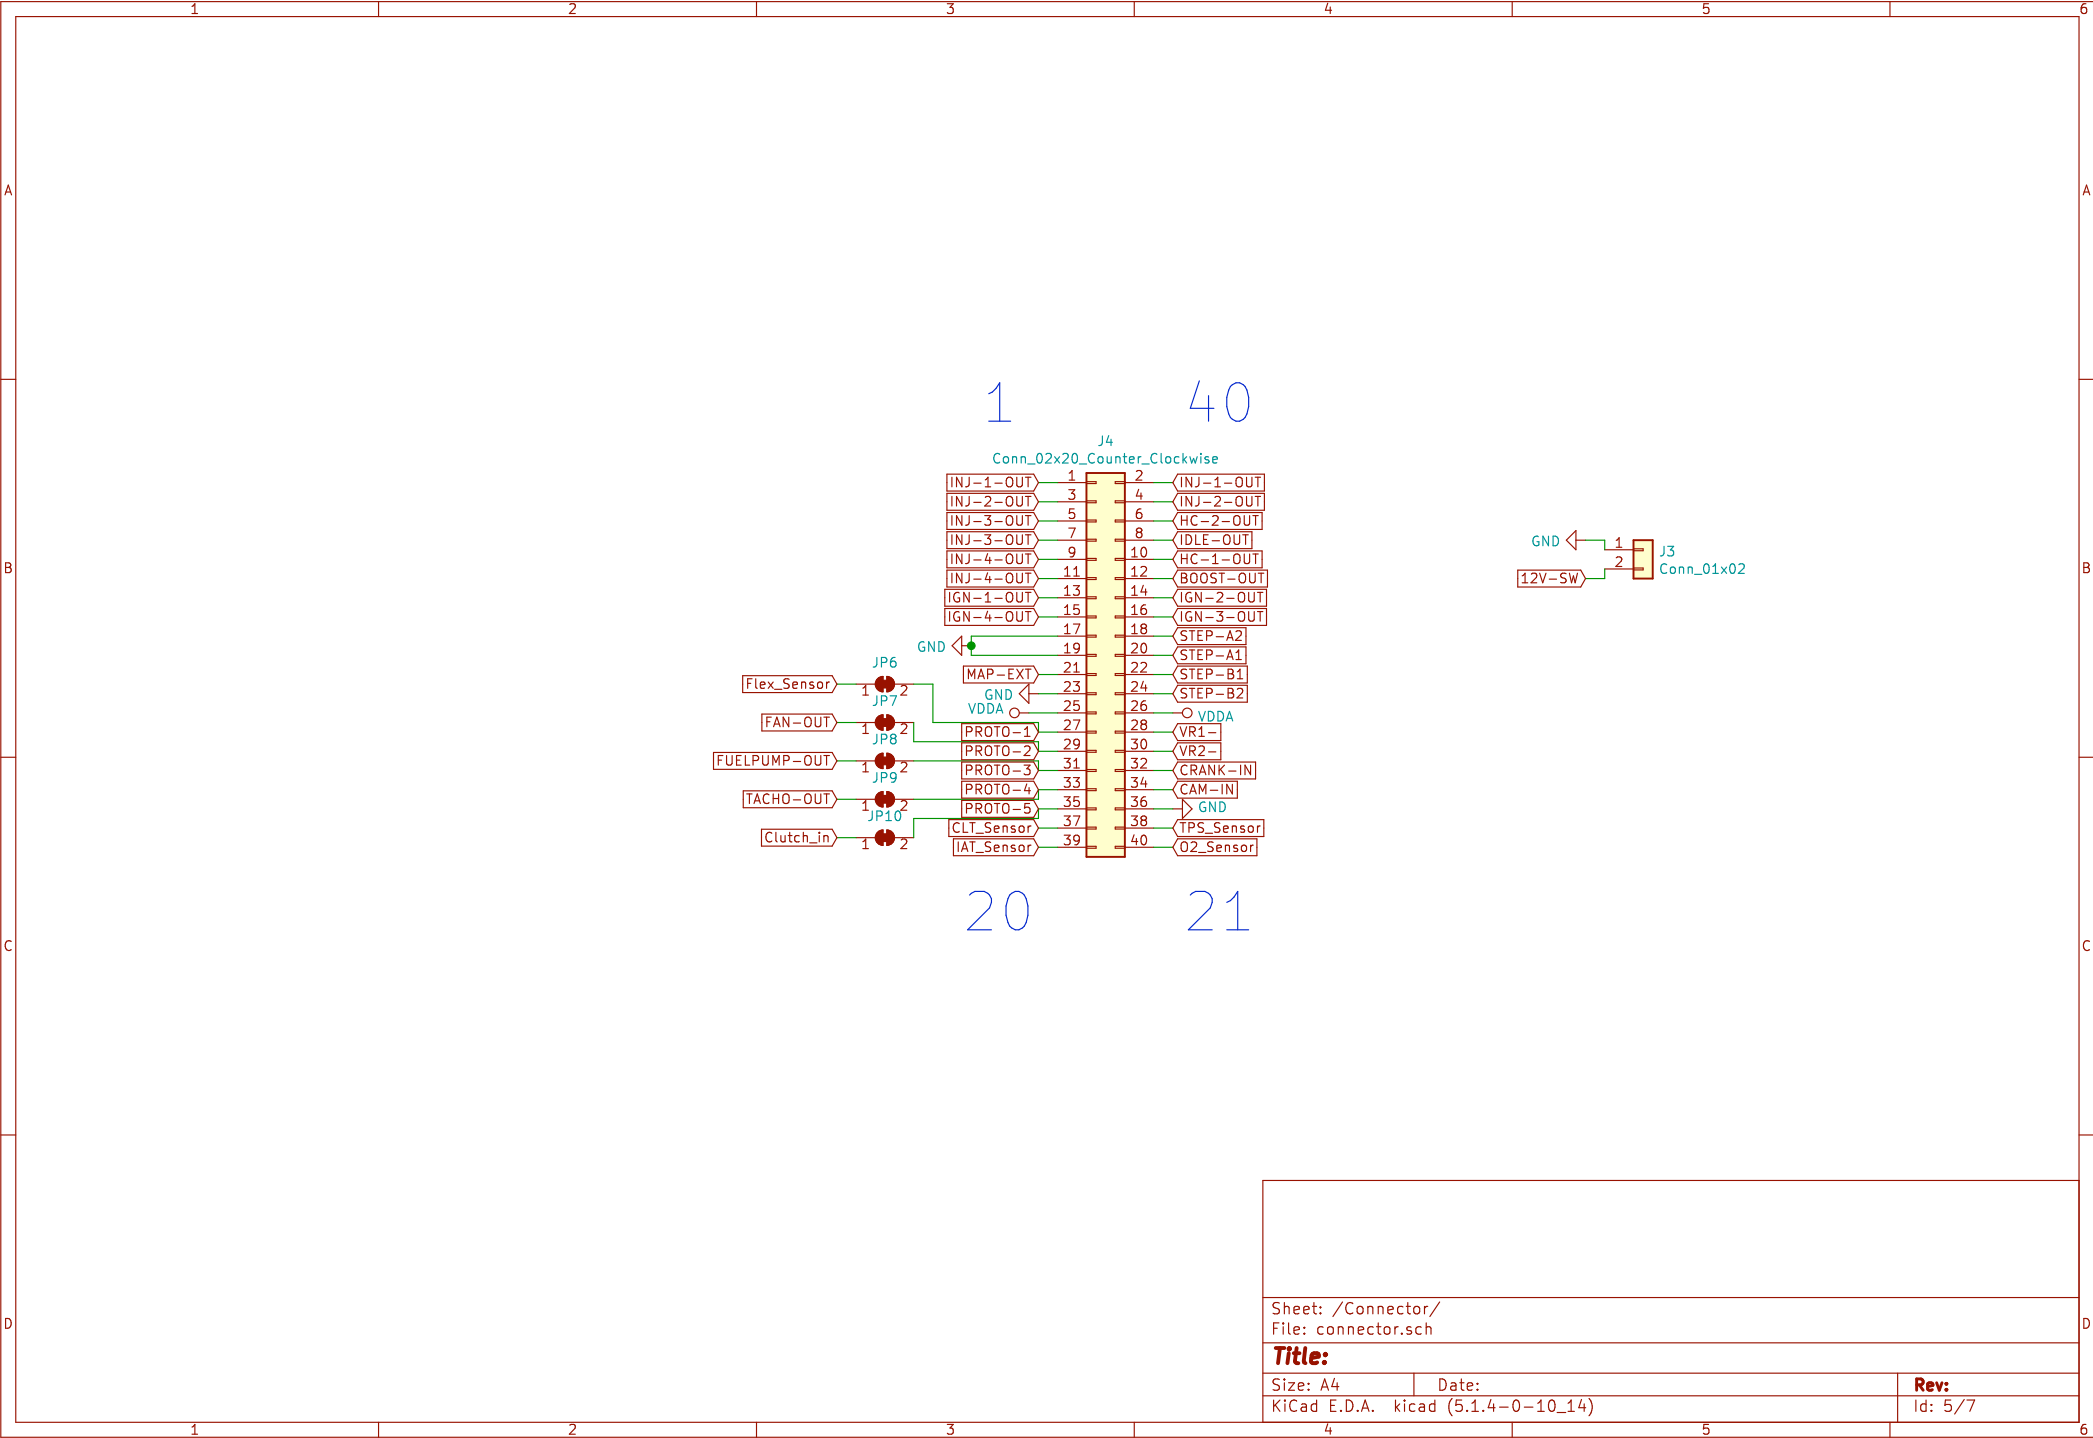


### PWM Idle and Boost outputs

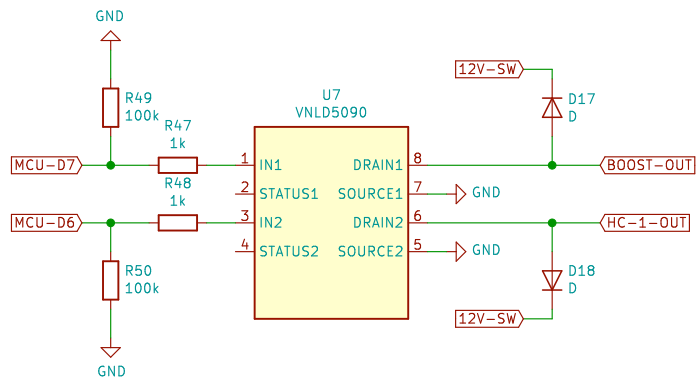


### Spare High Current outputs

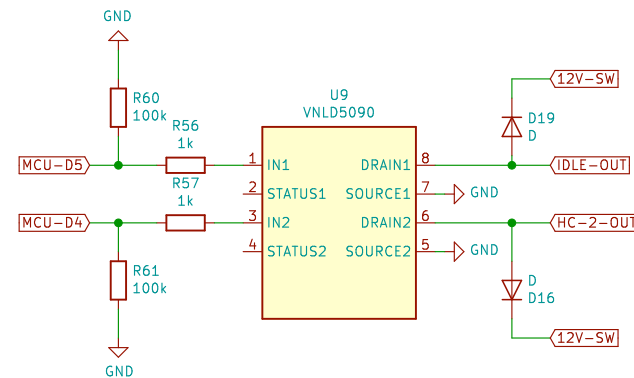


### Tacho output

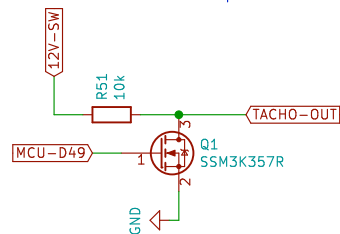


### Fan and Fuel Pump outputs

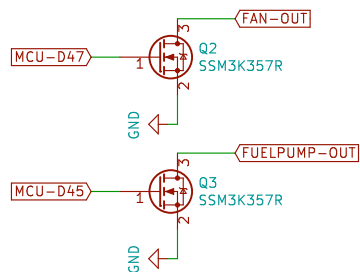

### Stepper Idle

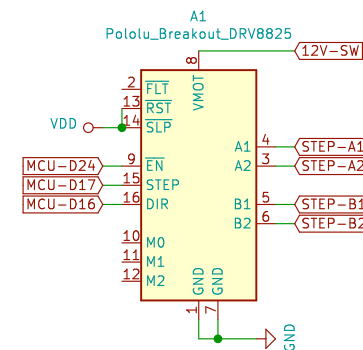

### HC-05 Bluetooth Connector

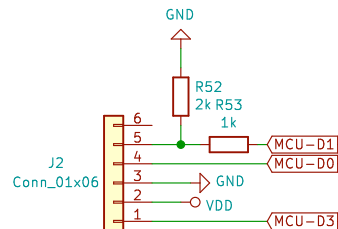

Sheet: /Outputs/  
File: outputs.sch

**Title:**

Size: A4

Date:

KiCad E.D.A. kicad (5.1.4-0-10\_14)

**Rev:**

Id: 6/7

