

Warning Message	Procedure
Cruise Control Fault	Indicates that the cruise control system has detected a fault. Please consult an MG Authorised Repairer as soon as possible.
Active Speed Limiter Fault	Indicates that the active speed limit system has detected a fault. Contact an MG Authorised Repairer as soon as possible.
Engine Coolant Temperature High	High engine coolant temperature could result in severe damage. As soon as conditions permit, safely stop the vehicle and switch off the engine and contact an MG Authorised Repairer immediately.
Engine Coolant Temperature Sensor Fault	Indicates that the engine coolant temperature sensor has failed. As soon as conditions permit, safely stop the vehicle and switch off the engine and contact an MG Authorised Repairer immediately.
Warning Message	Procedure
Low Oil Pressure	Indicates that the oil pressure is too low, which may result in severe engine damage. As soon as safety permits, stop the car, switch off the engine and check the engine oil level. Contact an MG Authorised Repairer as soon as possible.
Engine Fault	Indicates that a failure has occurred that will effect engine performance and emissions. Contact an MG Authorised Repairer as soon as possible.
Check Engine	Indicates that a failure has occurred that may severely damage the engine. As soon as conditions permit, safely stop the vehicle , switch off the engine and contact an MG Authorised Repairer immediately.
Warning Message	Procedure
Stop Start System Fault	Indicates that the Stop/Start intelligent fuel saving system has detected a fault. Please consult an MG Authorised Repairer as soon as possible.
Clutch Switch Fault	Indicates that the clutch switch has detected a fault. Please consult an MG Authorised Repairer as soon as possible.
Gasoline Particular Filter Full	Indicates that the gasoline particular filter is full. Please consult an MG Authorised Repairer as soon as possible.
Ignition System Fault	Indicates that the ignition system has detected a fault. Please consult an MG Authorised Repairer immediately.
Warning Message	Procedure

Start Stop Button Fault	Indicates that the Start Stop button has detected a fault. Please consult an MG Authorised Repairer immediately.
Passive Entry Fault	Indicates that the passive keyless entry (PKE) function has detected a fault. Please consult an MG Authorised Repairer as soon as possible.
ABS Fault	Indicates that the anti-lock brake system (ABS) has failed and the ABS function is about to be disabled. Please consult an MG Authorised Repairer immediately.

Warning Message	Procedure
Brake Fault	Indicates that the brake fluid could be low or a fault has been detected in the Electronic Brake-force Distribution (EBD) system. As soon as safety permits, stop the car, switch off the engine and check the brake fluid level. Contact an MG Authorised Repairer as soon as possible.
Stability Control Fault	Indicates that the stability control system has detected a fault. Please consult an MG Authorised Repairer immediately.
Traction Control Fault	Indicates that the traction control system has detected a fault. Please consult an MG Authorised Repairer immediately.

Warning Message	Procedure
EPB System Fault	Indicates that the electronic parking brake system (EPB) has detected a fault. Please consult an MG Authorised Repairer as soon as possible.
Park Brake Force Not Enough	Indicates that there is an issue with the electronic parking brake, it may not be able to provide adequate clamping force. Contact an MG Authorised Repairer as soon as possible.
Autohold Fault	Indicates that the Autohold System has detected a fault. Please consult an MG Authorised Repairer as soon as possible.
Hill Descent Control Fault	Indicates that the hill descent control system has detected a fault. Please consult an MG Authorised Repairer as soon as possible.

Warning Message	Procedure
EPS Performance Reduced	Indicates that the electric power steering system has a general failure and that the steering performance has been reduced. As soon as conditions permit, safely stop the vehicle and switch off the engine. After a short while, start the engine, drive the

	vehicle a short distance and monitor the operation of the steering, if the message is still displayed or the steering assistance reduced please contact an MG Authorised Repairer immediately.
EPS Assistance Failure	Indicates that the electric power steering system has failed. Please consult an MG Authorised Repairer immediately.
Warning Message	Procedure
Steering Angle Fault	Indicates that the steering angle sensor has failed. Please consult an MG Authorised Repairer as soon as possible.
Steering Angle Uncalibrated	Indicates that the steering angle sensor is not calibrated. Please consult an MG Authorised Repairer as soon as possible.
ESCL Fault	Indicates that a fault has been detected with the Electronic Steering Column Lock (ESCL). As soon as conditions permit, safely stop the vehicle and switch off the engine. Contact an MG Authorised Repairer as soon as possible.
Fuel Sensor Fault	Indicates that fuel sensor has detected a fault. Please consult an MG Authorised Repairer as soon as possible.

Warning Message	Procedure
Airbag Fault	Indicates that the Airbag system has detected a fault. As soon as conditions permit, safely stop the vehicle and switch off the engine and contact an MG Authorised Repairer immediately.
Front Left/Front Right/Rear Left/Rear Right Tyre Sensor Battery Low	Indicates that the Tyre Pressure Monitoring system has detected that a tyre pressure sensor has a low battery. Please consult an MG Authorised Repairer as soon as possible.
TPMS Fault	Indicates that the tyre pressure monitoring system has detected a fault. Please consult an MG Authorised Repairer as soon as possible.
Warning Message	Procedure
12V Battery Charging System Fault	Indicates that the 12V battery charging system has failed. Please consult an MG Authorised Repairer immediately.
Rear Drive Assist System Fault	Indicates that the rear drive assist system (RDA) has detected a fault. Please consult an MG Authorised Repairer as soon as possible.