

INSPECTION


1. INSPECT COMBINATION METER CIRCUIT

Connector connected:


Connect connector "A" and "B" from the combination meter and inspect the connectors on the wire harness side as shown in the table.

Connector connected

Connector B"

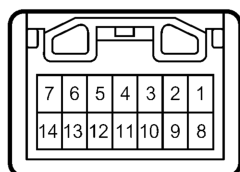

Connector A"

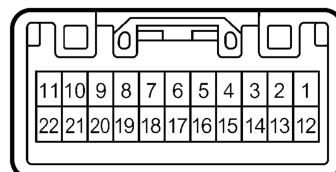

I11995

Tester connection	Condition	Specified condition
A2 - Ground (Turn L)	Ignition switch ON and turn signal switch Left	Battery voltage
A3 - Ground (Turn R)	Ignition switch ON and turn signal switch Right	Battery voltage
A4 - Ground (Beam +)	Always	Battery voltage
A5 - Ground (Beam -)	Headlight dimmer switch HI	Battery voltage
A6 - Ground (BRK level)	Ignition switch ON and Brake fluid level warning switch LO	Battery voltage
A7 - Ground (Check engine)	Ignition switch ON and engine running	Battery voltage
A8 - Ground (SRS)	SRS warning light does not light up	Battery voltage
A9 - Ground (ABS)	Ignition switch ON and ABS warning does not lights up	Battery voltage
A10 - Ground (ILL-)	Light control switch TAIL or HEAD	Continuity
A11 - Ground (Headlight beam level)	Headlight beam level control system is operation	Battery voltage
A12 - Ground (Speed signal input)	Ignition switch ON and turn propeller shaft slowly	Battery voltage
A13 - Ground (Speed signal output)	Ignition switch ON and turn propeller shaft slowly	1 V to 4.5 - 5.5 V
A14 - Ground (Tachometer signal)	Engine running	Pulse generation *1
A15 - Ground (MPX +B)	Always	Battery voltage

BODY ELECTRICAL - COMBINATION METER

A16 - Ground (DOME +B)	Always	Battery voltage
A17 - Ground (IGN)	Ignition switch ON	Battery voltage
A18 - Ground (Power ground)	Always	Continuity
A19 - Ground (Signal ground)	Always	Continuity
A20 - Ground (MPX+)	Ignition switch ON	Pulse generation
A21 - Ground (MPX-)	Ignition switch ON	Pulse generation
A22 - Ground (ILL+)	Light control switch TAIL or HEAD	Battery voltage
B1 - Ground (SP ground)	Always	Continuity
B3 - Ground (TRC OFF)	Ignition switch ON and TRC OFF indicator does not light up	Battery voltage
B4 - Ground (SLIP)	Ignition switch ON and SLIP indicator does not light up	Battery voltage
B5 - Ground (VSC)	Ignition switch ON and VSC indicator does not light up	Battery voltage
B6 - Ground (Rear Lights)	Ignition Switch ON and rear lights bulb is blown	Battery voltage
B8 - Ground (Security)	Theft deterrent system is operating	Battery voltage
B9 - Ground (Alternator L terminal)	Engine running	Battery voltage

If circuit is not as specified, wiring diagram and inspect the circuits connected to other parts.