

Tractor Pre-trip

1. Inspect body or fairing for damage.
2. Inspect license plate.
3. Inspect under tractor for leaking fluid.
4. Inspect DVIR, FWHA, HAZMAT book, fire extinguisher.
5. Turn on all lights, 4-ways, and put hand valve down.
6. Walk around and inspect lights.
7. If brake lights were on, release hand-valve / if 4-ways were on, turn off 4-ways.
8. Turn on high beams.
9. Open driver side hood latch.
10. Inspect driver side mirror.
11. Inspect DOT, IFTA, and UPS stickers.
12. Inspect battery box, air tanks, and fuel tank.
13. Inspect for air leaks underneath the cab.
14. Inspect glad hands, grommets, and electrical cord.
15. Inspect drive line, brake chambers, air lines, and brake linings.
16. Inspect springs, spring hangers, bolts, u-bolts, and air bags.
17. Inspect rear driver side tire.
18. Inspect 5th wheel from rear.
19. Inspect drive line, brake chambers, air lines, and brake linings.
20. Inspect mud flaps.
21. Inspect rear lights.
22. Open pintle latch, check electrical plug, tow hooks, and chain loops.
23. Inspect springs, spring hangers, bolts, u-bolts, and air bags.
24. Inspect passenger side rear tire.
25. Inspect drive line, brake chambers, air lines, and brake linings.
26. Inspect auto-greaser, tire chains.
27. Inspect fuel tank and air tanks (if applicable).
28. Inspect DOT, IFTA, and UPS stickers.
29. Inspect passenger side mirror.

30. Inspect triangles.
31. Open passenger side hood latch.
32. Inspect fender mirror.
33. Open hood, Z-scan for leaking air or fluids.
34. Inspect oil, coolant, power steering fluid, and washer fluid.
35. Inspect springs, shocks, brake chambers, brake linings, and air lines.
36. Inspect steering tires for abnormal movement.
37. Inspect steering shaft.
38. Close hood and latch both sides, check high beams.
39. Inspect seat and seat belt.
40. Turn the key to on position. Ensure at least 90 psi, push both brakes and bleed down.
41. Ensure buzzer and light at 60psi.
42. Ensure brake pops between 45psi and 20psi.
43. Start your engine and inspect interior lights.
44. Inspect windows, windshield, and mirrors.
45. Inspect horn and ensure no more than 2 inches of play in steering wheel.
46. Inspect indicator lights (4-ways, high beams, and left and right signals).
47. Inspect gauges.
48. Inspect wipers and washers.
49. Inspect heater, air conditioning, and defroster.
50. Inspect permits (Insurance, registration, and IFTA).
51. Ensure nothing is under the pedals.
52. Test parking brake, ensure at least 90psi and make sure brake holds.
53. Push in brake, roll forward, and test service brake.