


# Update Non-ThinkPad Machine Identifiers

- \* Look up identifiers before getting started.
- \* Use USB ports soldered to the SB (typically on left of laptops; in back of desktops)
- \* Use CapsLock when entering identifiers.

## Step 1. Disable Secure Boot.

1. Press F1, F2, or Enter repeatedly, or the Novo button to enter BIOS Setup Utility.
2. Select **Security**, then **Secure Boot**. Change Enabled to Disabled.

3. Insert U1 USB.
4. Select Exit and save changes or press **F10 to restart.**

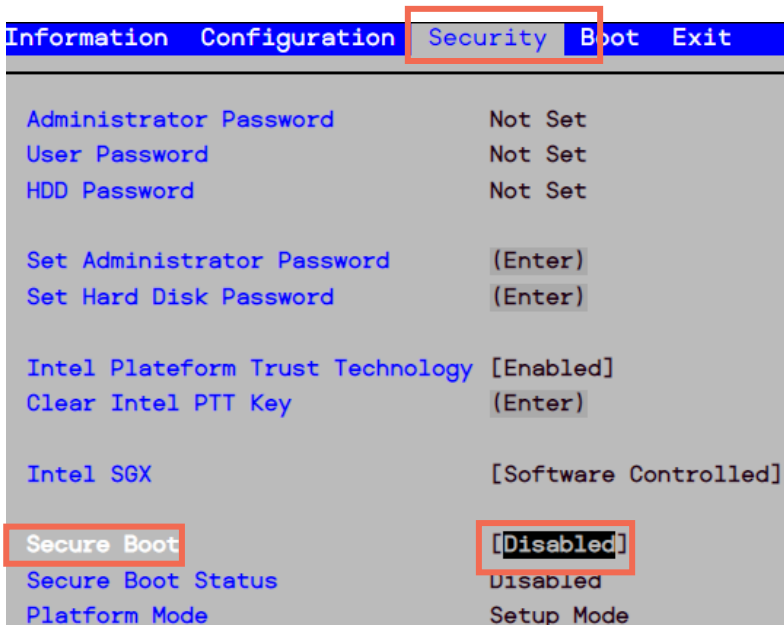


## Step 2. Boot From U1 USB.

1. Press F12 repeatedly to open the Boot Menu.
2. Select the USB device.




### Step 3. Open the Flash Tool.

1. In the U1 main menu, select **MTM/SN/PN/UUID Flash Tool**.

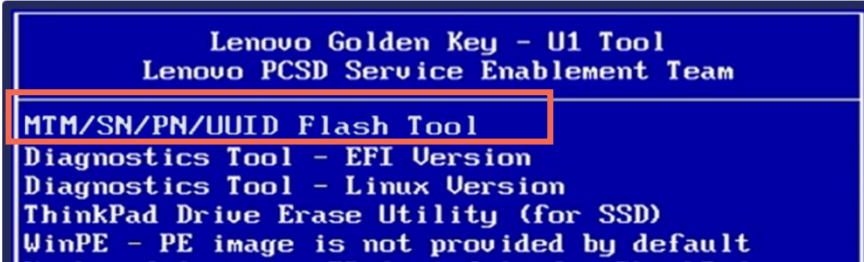


2. You should see this screen.

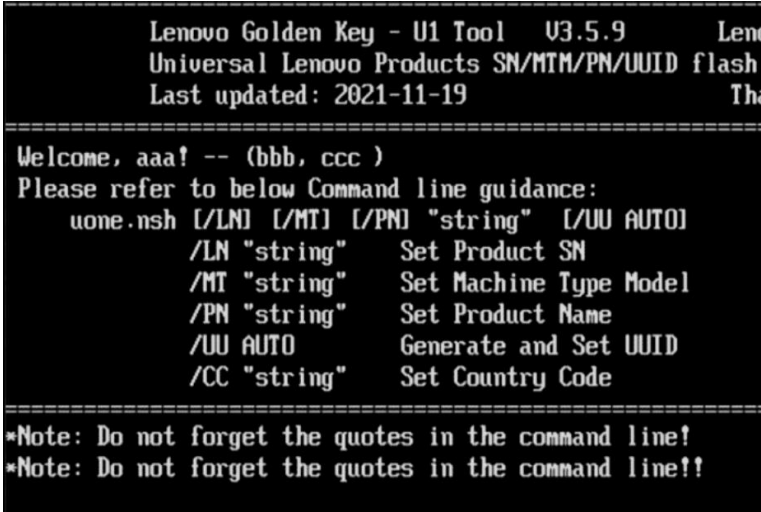


### Step 4. Update Remaining Identifiers


1. Enter the command `uones`. Then enter the:
- serial number
  - machine-type model number

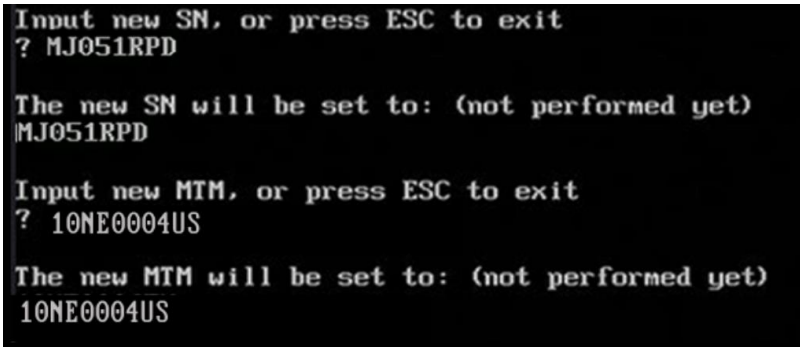

2. Press 1 to confirm the brand name, or 0 to make a change.

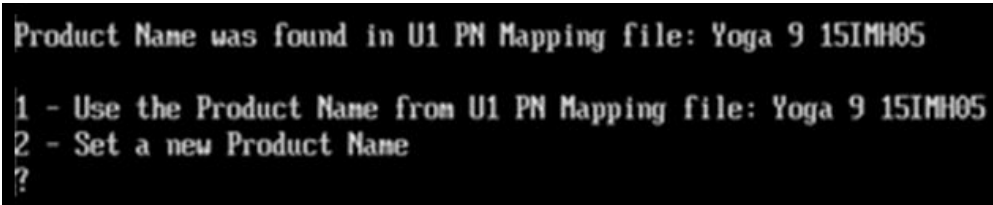

3. Press 1, then enter (enabled) ship-to-cc. Press 0 if not enabled.

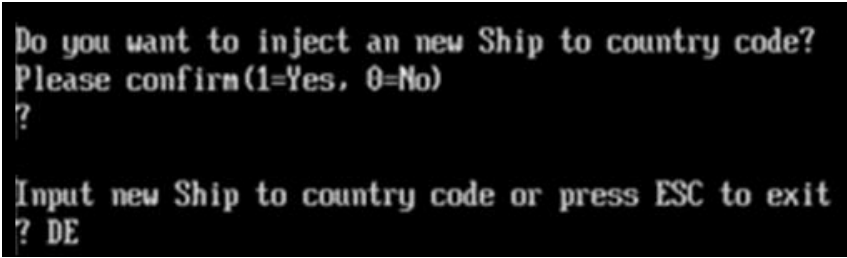

4. Review information. Press 1 to update or 2 to make a change.

5. “Done” status means the update is complete.

6. Press ctrl+alt+delete to reboot.

## Step 6. Confirm Successful Update

1. Open the Lenovo Vantage app.

2. Confirm the correct warranty information is displayed.

