



the high-performance real-time implementation  
of TCP/IP standards

## **Trivial File Transfer Protocol (TFTP)**

# **User Guide**

**Express Logic, Inc.**

858.613.6640  
Toll Free 888.THREADX  
FAX 858.521.4259

[www.expresslogic.com](http://www.expresslogic.com)

**©2002-2010 by Express Logic, Inc.**

All rights reserved. This document and the associated NetX software are the sole property of Express Logic, Inc. Each contains proprietary information of Express Logic, Inc. Reproduction or duplication by any means of any portion of this document without the prior written consent of Express Logic, Inc. is expressly forbidden. Express Logic, Inc. reserves the right to make changes to the specifications described herein at any time and without notice in order to improve design or reliability of NetX. The information in this document has been carefully checked for accuracy; however, Express Logic, Inc. makes no warranty pertaining to the correctness of this document.

**Trademarks**

NetX, Piconet, and UDP Fast Path are trademarks of Express Logic, Inc. ThreadX is a registered trademark of Express Logic, Inc.

All other product and company names are trademarks or registered trademarks of their respective holders.

**Warranty Limitations**

Express Logic, Inc. makes no warranty of any kind that the NetX products will meet the USER's requirements, or will operate in the manner specified by the USER, or that the operation of the NetX products will operate uninterrupted or error free, or that any defects that may exist in the NetX products will be corrected after the warranty period. Express Logic, Inc. makes no warranties of any kind, either expressed or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, with respect to the NetX products. No oral or written information or advice given by Express Logic, Inc., its dealers, distributors, agents, or employees shall create any other warranty or in any way increase the scope of this warranty, and licensee may not rely on any such information or advice.

Part Number: 000-1052

Revision 5.0

# Contents

---

Chapter 1 Introduction to TFTP.....	4
TFTP Requirements .....	4
TFTP File Names .....	4
TFTP Messages .....	5
TFTP Communication .....	6
TFTP Multi-Thread Support.....	6
TFTP RFCs .....	6
Chapter 2 Installation and Use of TFTP .....	7
Product Distribution .....	7
TFTP Installation .....	7
Using TFTP .....	7
Small Example System .....	8
Configuration Options.....	12
Chapter 3 Description of TFTP Services.....	14
nx_tftp_client_create .....	16
nx_tftp_client_delete .....	18
nx_tftp_client_error_info_get.....	19
nx_tftp_client_file_close .....	20
nx_tftp_client_file_open.....	21
nx_tftp_client_file_read .....	23
nx_tftp_client_file_write .....	25
nx_tftp_client_packet_allocate .....	27
nx_tftp_server_create.....	29
nx_tftp_server_delete.....	31
nx_tftp_server_start.....	32
nx_tftp_server_stop.....	33

# Chapter 1

## Introduction to TFTP

The Trivial File Transfer Protocol (TFTP) is a lightweight protocol designed for file transfers. Unlike more robust protocols, TFTP does not perform extensive error checking and can also have limited performance because it is a stop-and-wait protocol. After a TFTP data packet is sent, the sender waits for an ACK to be returned by the recipient. Although this is simple, it does limit the overall TFTP throughput.

## TFTP Requirements

In order to function properly, the NetX TFTP package requires that a NetX IP instance has already been created. In addition, UDP must be enabled on that same IP instance. The TFTP Client portion of the NetX TFTP package has no further requirements.

The TFTP Server portion of the NetX TFTP package has several additional requirements. First, it requires complete access to UDP *well known port 69* for handling all client TFTP requests. The TFTP Server is also designed for use with the FileX embedded file system. If FileX is not available, the user may port the portions of FileX used to their own environment. This is discussed in later sections of this guide.

## TFTP File Names

TFTP file names should be in the format of the target file system (usually FileX). They should be NULL terminated ASCII strings, with full path information if necessary. There is no specified limit in the size of TFTP file names in the NetX TFTP implementation.

## TFTP Messages

The TFTP has a very simple mechanism for opening, reading, writing, and closing files. There are basically 2-4 bytes of TFTP header underneath the UDP header. The definition of the TFTP file open messages has the following format:

**oooof...f0OCTET0**

Where:

**oooo**            2-byte Opcode field

0x0001 -> Open for read  
0x0002 -> Open for write

**f...f**            n-byte Filename field

**0**                1-byte NULL termination character

**OCTET**          ASCII "OCTET" to specify binary transfer

**0**                1-byte NULL termination character

The definition of the TFTP write, ACK, and error messages are slightly different and are defined as follows:

**oooobbbbd...d**

Where:

**oooo**            2-byte Opcode field

0x0003 -> Data packet  
0x0004 -> ACK for last read  
0x0005 -> Error condition

**bbbb**            2-byte Block Number field (1-n)

**d...d**            n-byte Data field

Opcode	Filename	NULL	Mode	NULL
0x0001 (read)	File Name	0	OCTET	0
0x0002 (write)	File Name	0	OCTET	0

## TFTP Communication

The TFTP Server utilizes the well-known UDP port 69 to field client requests. TFTP Clients may use any available UDP port. Data packets are fixed at 512 bytes, until the last packet. A packet containing fewer than 512 bytes signals the end of file. The general sequence of events is as follows:

TFTP Read File Requests:

1. Client Issues "Open For Read" request with the File Name and waits for a packet from Server.
2. Server sends the first 512 bytes of the file.
3. Client receives data, sends ACK, and waits for the next packet if the last packet had 512 bytes.
4. The sequence ends when a packet containing fewer than 512 bytes is received.

TFTP Write Requests:

1. Client Issues "Open for Write" request with the File Name and waits for an ACK with a block number of 0 from the Server.
2. When the Server is ready to write the file, it sends an ACK with a block number of zero.
3. Client sends the first 512 bytes of the file to the Server and waits for an ACK.
4. Server sends ACK after the bytes are written.
5. The sequence ends when the Client completes writing a packet containing fewer than 512 bytes.

## TFTP Multi-Thread Support

The NetX TFTP Client services can be called from multiple threads simultaneously. However, read or write requests for a particular TFTP client instance should be done in sequence from the same thread.

## TFTP RFCs

NetX TFTP is compliant with RFC1350 and related RFCs.

## Chapter 2

# Installation and Use of TFTP

This chapter contains a description of various issues related to installation, setup, and usage of the NetX TFTP component.

## Product Distribution

TFTP for NetX is shipped on a single CD-ROM compatible disk. The package includes two source files and a PDF file that contains this document, as follows:

<b><code>nx_tftp.h</code></b>	Header file for TFTP for NetX
<b><code>nx_tftp_client.c</code></b>	C Source file for TFTP Client for NetX
<b><code>nx_tftp_server.c</code></b>	C Source file for TFTP Server for NetX
<b><code>filex_stub.h</code></b>	Stub file if FileX is not present
<b><code>nx_tftp.pdf</code></b>	PDF description of TFTP for NetX
<b><code>demo_netx_tftp.c</code></b>	NetX TFTP demonstration

## TFTP Installation

In order to use TFTP for NetX, the entire distribution mentioned previously should be copied to the same directory where NetX is installed. For example, if NetX is installed in the directory “*\threadx\arm7\green*” then the *nx\_tftp.h*, *nx\_tftp\_client.c*, and *nx\_tftp\_server.c* files should be copied into this directory.

## Using TFTP

Using TFTP for NetX is easy. Basically, the application code must include *nx\_tftp.h* after it includes *tx\_api.h*, *fx\_api.h*, and *nx\_api.h*, in order to use ThreadX, FileX, and NetX, respectively. Once *nx\_tftp.h* is included, the application code is then able to make the TFTP function calls specified later in this guide. The application must also include *nx\_tftp\_client.c* and *nx\_tftp\_server.c* in the build process. These files must be compiled in the same manner as other application files and its object form must be linked along with the files of the application. This is all that is required to use NetX TFTP.

Note that since TFTP utilizes NetX UDP services, UDP must be enabled with the `nx_udp_enable` call prior to using TFTP.

## Small Example System

An example of how easy it is to use NetX TFTP is described in Figure 1.1 that appears below. In this example, the TFTP include file `nx_tftp.h` is brought in at line 4. Next, the TFTP server is created in “`tx_application_define`” at line 120. Note that the TFTP Server control block “`server`” was defined as a global variable at line 22 previously. After successful creation, a TFTP Server is started at line 129. At line 165 the TFTP Client is created. And finally, the client writes the file at line 196 and reads the file back at line 218.

```

0001 #include "tx_api.h"
0002 #include "nx_api.h"
0003 #include "fx_api.h"
0004 #include "nx_tftp.h"
0005
0006 #define DEMO_STACK_SIZE 2048
0007
0008
0009 /* Define the ThreadX, NetX, and FileX object control blocks... */
0010
0011 TX_THREAD client_thread;
0012 NX_PACKET_POOL server_pool;
0013 NX_IP server_ip;
0014 NX_PACKET_POOL client_pool;
0015 NX_IP client_ip;
0016 FX_MEDIA ram_disk;
0017
0018
0019 /* Define the NetX TFTP object control blocks. */
0020
0021 NX_TFTP_CLIENT client;
0022 NX_TFTP_SERVER server;
0023
0024
0025 /* Define the counters used in the demo application... */
0026
0027 ULONG error_counter;
0028
0029
0030 /* Define the memory area for the FileX RAM disk. */
0031
0032 UCHAR ram_disk_memory[32000];
0033
0034
0035 /* Define function prototypes. */
0036
0037 VOID _fx_ram_driver(FX_MEDIA *media_ptr);
0038 VOID _nx_ram_network_driver(NX_IP_DRIVER *driver_req_ptr);
0039 void client_thread_entry(ULONG thread_input);
0040
0041
0042 /* Define main entry point. */
0043
0044 int main()
0045 {
0046
0047     /* Enter the ThreadX kernel. */
0048     tx_kernel_enter();
0049 }
0050
0051
0052 /* Define what the initial system looks like. */
0053
0054 void tx_application_define(void *first_unused_memory)
0055 {
0056
0057     UINT status;
0058     UCHAR *pointer;

```



```

0059
0060
0061 /* Setup the working pointer. */
0062 pointer = (UCHAR *) first_unused_memory;
0063
0064 /* Create the main TFTP demo thread. */
0065 status = tx_thread_create(&client_thread, "thread 0",
0066 client_thread_entry, 0, pointer, DEMO_STACK_SIZE,
0067 17, 17, TX_NO_TIME_SLICE, TX_AUTO_START);
0068 pointer += DEMO_STACK_SIZE ;
0069
0070 /* Check for errors. */
0071 if (status)
0072 error_counter++;
0073
0074 /* Open the RAM disk. */
0075 status = fx_media_open(&ram_disk, "RAM DISK", _fx_ram_driver,
0076 ram_disk_memory, pointer, 4096);
0077 pointer += 4096 ;
0078
0079 /* Check for errors. */
0080 if (status)
0081 error_counter++;
0082
0083 /* Create the packet pool for the TFTP Server. The packet size must
0084 be a minimum of 560 bytes. */
0085 status = nx_packet_pool_create(&server_pool, "NetX Server Packet Pool",
0086 560, pointer, 8192);
0087 pointer = pointer + 8192;
0088
0089 /* Check for errors. */
0090 if (status)
0091 error_counter++;
0092
0093 /* Create the IP instance for the TFTP Server. */
0094 status = nx_ip_create(&server_ip, "NetX Server IP Instance",
0095 IP_ADDRESS(1, 2, 3, 4), 0xFFFFFFFF0UL,
0096 &server_pool, _nx_ram_network_driver,
0097 pointer, 2048, 1);
0098 pointer = pointer + 2048;
0099
0100 /* Check for errors. */
0101 if (status)
0102 error_counter++;
0103
0104 /* Enable ARP and supply ARP cache memory for IP Instance 0. */
0105 status = nx_arp_enable(&server_ip, (void *) pointer, 1024);
0106 pointer = pointer + 1024;
0107
0108 /* Check for errors. */
0109 if (status)
0110 error_counter++;
0111
0112 /* Enable UDP. */
0113 status = nx_udp_enable(&server_ip);
0114
0115 /* Check for errors. */
0116 if (status)
0117 error_counter++;
0118
0119 /* Create the TFTP server. */
0120 status = nx_tftp_server_create(&server, "TFTP Server Instance",
0121 &server_ip, &ram_disk, pointer, DEMO_STACK_SIZE, &server_pool);
0122 pointer = pointer + DEMO_STACK_SIZE;
0123
0124 /* Check for errors. */
0125 if (status)
0126 error_counter++;
0127
0128 /* Start the TFTP server. */
0129 status = nx_tftp_server_start(&server);
0130
0131 /* Check for errors. */
0132 if (status)
0133 error_counter++;
0134
0135 /* Create a packet pool for the TFTP client. */
0136 status = nx_packet_pool_create(&client_pool, "NetX Client Packet Pool",
0137 560, pointer, 8192);
0138 pointer = pointer + 8192;
0139

```

```

0140      /* Create an IP instance for the TFTP client. */
0141      status = nx_ip_create(&client_ip, "NetX Client IP Instance",
0142                          IP_ADDRESS(1, 2, 3, 5), 0xFFFFFFFF00UL,
0143                          &client_pool, _nx_ram_network_driver, pointer, 2048, 1);
0144      pointer = pointer + 2048;
0145
0146      /* Enable ARP and supply ARP cache memory for IP Instance 1. */
0147      status = nx_arp_enable(&client_ip, (void *) pointer, 1024);
0148      pointer = pointer + 1024;
0149
0150      /* Enable UDP for client IP instance. */
0151      status = nx_udp_enable(&client_ip);
0152 }
0153
0154
0155 /* Define the TFTP client thread. */
0156
0157 void client_thread_entry(ULONG thread_input)
0158 {
0159     NX_PACKET *my_packet;
0160     UINT status;
0161
0162
0163
0164     /* Create a TFTP client. */
0165     status = nx_tftp_client_create(&client, "New Client", &client_ip,
0166                                   &client_pool);
0167
0168     /* Check status. */
0169     if (status)
0170         error_counter++;
0171
0172     /* Open a TFTP file for writing. */
0173     status = nx_tftp_client_file_open(&client, "test.txt",
0174                                       IP_ADDRESS(1, 2, 3, 4), NX_TFTP_OPEN_FOR_WRITE, 100);
0175
0176     /* Check status. */
0177     if (status)
0178         error_counter++;
0179
0180     /* Allocate a TFTP packet. */
0181     status = nx_tftp_client_packet_allocate(&client_pool, &my_packet, 100);
0182
0183     /* Check status. */
0184     if (status)
0185         error_counter++;
0186
0187     /* Write ABCs into the packet payload! */
0188     memcpy(my_packet -> nx_packet_prepend_ptr,
0189           "ABCDEFGH IJKLMNOPQRSTUVWXYZ ", 28);
0190
0191     /* Adjust the write pointer. */
0192     my_packet -> nx_packet_length = 28;
0193     my_packet -> nx_packet_append_ptr = my_packet -> nx_packet_prepend_ptr + 28;
0194
0195     /* Write this packet to the file via TFTP. */
0196     status = nx_tftp_client_file_write(&client, my_packet, 100);
0197
0198     /* Check status. */
0199     if (status)
0200         error_counter++;
0201
0202     /* Close this file. */
0203     status = nx_tftp_client_file_close(&client);
0204
0205     /* Check status. */
0206     if (status)
0207         error_counter++;
0208
0209     /* Open the same file for reading. */
0210     status = nx_tftp_client_file_open(&client, "test.txt",
0211                                       IP_ADDRESS(1, 2, 3, 4), NX_TFTP_OPEN_FOR_READ, 100);
0212
0213     /* Check status. */
0214     if (status)
0215         error_counter++;
0216
0217     /* Read the file back. */
0218     status = nx_tftp_client_file_read(&client, &my_packet, 100);
0219
0220     /* Check status. */

```

```

0221     if (status)
0222         error_counter++;
0223     else
0224         nx_packet_release(my_packet);
0225
0226     /* Close the file again. */
0227     status = nx_tftp_client_file_close(&client);
0228
0229     /* Check status. */
0230     if (status)
0231         error_counter++;
0232
0233     /* Delete the client. */
0234     status = nx_tftp_client_delete(&client);
0235
0236     /* Check status. */
0237     if (status)
0238         error_counter++;
0239 }

```

Figure 1.1 Example of TFTP use with NetX

## Configuration Options

There are several configuration options for building TFTP for NetX. The following list describes each in detail:

Define	Meaning
<b>NX_DISABLE_ERROR_CHECKING</b>	Defined, this option removes the basic TFTP error checking. It is typically used after the application has been debugged.
<b>NX_TFTP_SERVER_PRIORITY</b>	The priority of the TFTP server thread. By default, this value is defined as 16 to specify priority 16.
<b>NX_TFTP_MAX_CLIENTS</b>	The maximum number of clients the server can handle at one time. By default, this value is 10 to support 10 clients at once.
<b>NX_TFTP_ERROR_STRING_MAX</b>	The maximum number of characters in the error string. By default, this value is 64.
<b>NX_TFTP_NO_FILEX</b>	Defined, this option provides a stub for FileX dependencies. The TFTP Client will function without any change if this option is defined. The TFTP Server will need to either be modified or the user will have to create a handful of FileX services in order to function properly.
<b>NX_TFTP_TYPE_OF_SERVICE</b>	Type of service required for the TFTP UDP requests. By default, this value is defined as <code>NX_IP_NORMAL</code> to indicate normal IP packet service. This define can be set by the application prior to inclusion of <i>nx_tftp.h</i> .

**NX\_TFTP\_FRAGMENT\_OPTION**

Fragment enable for TFTP UDP requests. By default, this value is `NX_DONT_FRAGMENT` to disable TFTP UDP fragmenting. This define can be set by the application prior to inclusion of *nx\_tftp.h*.

**NX\_TFTP\_TIME\_TO\_LIVE**

Specifies the number of routers this packet can pass before it is discarded. The default value is set to 0x80, but can be redefined prior to inclusion of *nx\_tftp.h*.

## Chapter 3

# Description of TFTP Services

This chapter contains a description of all NetX TFTP services (listed below) in alphabetic order.

In the “Return Values” section in the following API descriptions, values in **BOLD** are not affected by the **NX\_DISABLE\_ERROR\_CHECKING** define that is used to disable API error checking, while non-bold values are completely disabled.

`nx_tftp_client_create`  
*Create a TFTP client instance*

`nx_tftp_client_delete`  
*Delete a TFTP client instance*

`nx_tftp_client_error_info_get`  
*Get client error information*

`nx_tftp_client_file_close`  
*Close client file*

`nx_tftp_client_file_open`  
*Open client file*

`nx_tftp_client_file_read`  
*Read a block from client file*

`nx_tftp_client_file_write`  
*Write block to client file*

`nx_tftp_client_packet_allocate`  
*Allocate packet for client file write*

`nx_tftp_server_create`  
*Create TFTP server*

`nx_tftp_server_delete`  
*Delete TFTP server*

`nx_tftp_server_start`  
*Start TFTP Server*

`nx_tftp_server_stop`  
*Stop TFTP Server*

## **nx\_tftp\_client\_create**

Create a TFTP client instance

### **Prototype**

```
UINT nx_tftp_client_create(NX_TFTP_CLIENT *tftp_client_ptr,
    CHAR *tftp_client_name, NX_IP *ip_ptr, NX_PACKET_POOL *pool_ptr);
```

### **Description**

This service creates a TFTP client instance for the previously created IP instance.

**Important Note:** The application must make certain the supplied IP and packet pool are already created. In addition, UDP must be enabled for the IP instance prior to calling this service.

### **Input Parameters**

<b>tftp_client_ptr</b>	Pointer to TFTP client control block.
<b>tftp_client_name</b>	Name of this TFTP client instance
<b>ip_ptr</b>	Pointer to previously created IP instance.
<b>pool_ptr</b>	Pointer to packet pool TFTP client instance.

### **Return Values**

<b>NX_SUCCESS</b>	(0x00)	Successful TFTP create.
<b>status</b>		Actual NetX completion status
<b>NX_PTR_ERROR</b>	(0x16)	Invalid IP, pool, or TFTP pointer.

### **Allowed From**

Initialization and Threads

### **Example**

```
/* Create a TFTP client instance. */
status = nx_tftp_client_create(&my_tftp_client, "My TFTP Client",
    &my_ip, &pool_ptr);

/* If status is NX_SUCCESS a TFTP client instance was successfully
   created. */
```



**See Also**

`nx_tftp_client_delete`, `nx_tftp_client_error_info_get`,  
`nx_tftp_client_file_close`, `nx_tftp_client_file_open`, `nx_tftp_client_file_read`,  
`nx_tftp_client_file_write`, `nx_tftp_client_packet_allocate`,  
`nx_tftp_server_create`, `nx_tftp_server_delete`, `nx_tftp_server_start`,  
`nx_tftp_server_stop`

## **nx\_tftp\_client\_delete**

Delete a TFTP client instance

### **Prototype**

```
UINT nx_tftp_client_delete(NX_TFTP_CLIENT *tftp_client_ptr);
```

### **Description**

This service deletes a previously created TFTP client instance.

### **Input Parameters**

<b>tftp_client_ptr</b>	Pointer to previously created TFTP client instance.
------------------------	---

### **Return Values**

<b>NX_SUCCESS</b>	(0x00)	Successful TFTP client delete.
<b>NX_PTR_ERROR</b>	(0x16)	Invalid TFTP pointer.
<b>NX_CALLER_ERROR</b>	(0x11)	Invalid caller of this service.

### **Allowed From**

Threads

### **Example**

```
/* Delete a TFTP client instance. */
status = nx_tftp_client_delete(&my_tftp_client);

/* If status is NX_SUCCESS the TFTP client instance was successfully
   deleted. */
```

### **See Also**

nx\_tftp\_client\_create, nx\_tftp\_client\_error\_info\_get,  
 nx\_tftp\_client\_file\_close, nx\_tftp\_client\_file\_open, nx\_tftp\_client\_file\_read,  
 nx\_tftp\_client\_file\_write, nx\_tftp\_client\_packet\_allocate,  
 nx\_tftp\_server\_create, nx\_tftp\_server\_delete, nx\_tftp\_server\_start,  
 nx\_tftp\_server\_stop

# **nx\_tftp\_client\_error\_info\_get**

Get client error information

## **Prototype**

```
UINT nx_tftp_client_error_info_get(NX_TFTP_CLIENT *tftp_client_ptr,
                                   UINT *error_code, CHAR **error_string);
```

## **Description**

This service returns the last error code received and sets the pointer to the client's internal error string. In error conditions, the user can view the last error sent by the server. A null error string indicates no error is present.

## **Input Parameters**

<b>tftp_client_ptr</b>	Pointer to previously created TFTP client instance.
<b>error_code</b>	Pointer to destination area for error code
<b>error_string</b>	Pointer to destination for error string

## **Return Values**

<b>NX_SUCCESS</b>	(0x00)	Successful TFTP error info get.
<b>NX_PTR_ERROR</b>	(0x16)	Invalid TFTP client pointer.
<b>NX_CALLER_ERROR</b>	(0x11)	Invalid caller of this service.

## **Allowed From**

Threads

## **Example**

```
/* Get error information for client. */
status = nx_tftp_client_error_info_get(&my_tftp_client, &error_code,
                                       &error_string_ptr);

/* If status is NX_SUCCESS the error code and error string are available. */
```

## **See Also**

nx\_tftp\_client\_create, nx\_tftp\_client\_delete, nx\_tftp\_client\_file\_close,  
 nx\_tftp\_client\_file\_open, nx\_tftp\_client\_file\_read, nx\_tftp\_client\_file\_write,  
 nx\_tftp\_client\_packet\_allocate, nx\_tftp\_server\_create,  
 nx\_tftp\_server\_delete, nx\_tftp\_server\_start, nx\_tftp\_server\_stop

## **nx\_tftp\_client\_file\_close**

Close client file

### **Prototype**

```
UINT nx_tftp_client_file_close(NX_TFTP_CLIENT *tftp_client_ptr);
```

### **Description**

This service closes the previously opened file by this TFTP client instance. A TFTP client instance is allowed to have only one file open at a time.

### **Input Parameters**

<b>tftp_client_ptr</b>	Pointer to previously created TFTP client instance.
------------------------	---

### **Return Values**

<b>NX_SUCCESS</b>	(0x00)	Successful TFTP file close.
<b>status</b>		Actual NetX completion status
<b>NX_PTR_ERROR</b>	(0x16)	Invalid TFTP client pointer.
<b>NX_CALLER_ERROR</b>	(0x11)	Invalid caller of this service.

### **Allowed From**

Threads

### **Example**

```
/* Close the previously opened file associated with "my_client". */
status = nx_tftp_client_file_close(&my_tftp_client);

/* If status is NX_SUCCESS the TFTP file is closed. */
```

### **See Also**

nx\_tftp\_client\_create, nx\_tftp\_client\_delete, nx\_tftp\_client\_error\_info\_get,  
nx\_tftp\_client\_file\_open, nx\_tftp\_client\_file\_read, nx\_tftp\_client\_file\_write,  
nx\_tftp\_client\_packet\_allocate, nx\_tftp\_server\_create,  
nx\_tftp\_server\_delete, nx\_tftp\_server\_start, nx\_tftp\_server\_stop

## **nx\_tftp\_client\_file\_open**

Open client file

### **Prototype**

```
UINT nx_tftp_client_file_open(NX_TFTP_CLIENT *tftp_client_ptr,
                              CHAR *file_name, ULONG server_ip_address, UINT open_type,
                              ULONG wait_option);
```

### **Description**

This service attempts to open the specified file on the TFTP server at the specified IP address. The file will be opened for either reading or writing.

### **Input Parameters**

**tftp\_client\_ptr** Pointer to TFTP control block.

**file\_name** ASCII file name, NULL-terminated and with appropriate path information.

**server\_ip\_address** IP address of TFTP Server.

**open\_type** Type of open request, either:

**NX\_TFTP\_OPEN\_FOR\_READ** (0x01)  
**NX\_TFTP\_OPEN\_FOR\_WRITE** (0x02)

**wait\_option** Defines how long the service will wait for the TFTP client file open. The wait options are defined as follows:

**timeout value** (0x00000001 through 0xFFFFFFFF)  
**TX\_WAIT\_FOREVER** (0xFFFFFFFF)

Selecting TX\_WAIT\_FOREVER causes the calling thread to suspend indefinitely until a TFTP server responds to the request.

Selecting a numeric value (1-0xFFFFFFFF) specifies the maximum number of timer-ticks to stay suspended while waiting for the TFTP server response.

## Return Values

<b>NX_SUCCESS</b>	(0x00)	Successful TFTP client file open
<b>NX_TFTP_NOT_CLOSED</b>	(0xC3)	Client already has file open
<b>NX_INVALID_TFTP_SERVER_ADDRESS</b>	(0x08)	Invalid server address received
<b>NX_TFTP_NO_ACK_RECEIVED</b>	(0x09)	No ACK received from server
<b>status</b>		Actual NetX completion status
<b>NX_PTR_ERROR</b>	(0x16)	Invalid TFTP pointer.
<b>NX_CALLER_ERROR</b>	(0x11)	Invalid caller of this service
<b>NX_IP_ADDRESS_ERROR</b>	(0x21)	Invalid TFTP Server IP address
<b>NX_OPTION_ERROR</b>	(0x0a)	Invalid open type

## Allowed From

Threads

## Example

```
/* Open file "test.txt" for reading on the TFTP server at 202.2.2.13. */
status = nx_tftp_client_file_open(&my_tftp_client, "test.txt",
IP_ADDRESS(202, 2, 2, 13), NX_TFTP_OPEN_FOR_READ, 200);

/* If status is NX_SUCCESS the "test.txt" file is now open for reading. */
```

## See Also

nx\_tftp\_client\_create, nx\_tftp\_client\_delete, nx\_tftp\_client\_error\_info\_get,  
nx\_tftp\_client\_file\_close, nx\_tftp\_client\_file\_read, nx\_tftp\_client\_file\_write,  
nx\_tftp\_client\_packet\_allocate, nx\_tftp\_server\_create,  
nx\_tftp\_server\_delete, nx\_tftp\_server\_start, nx\_tftp\_server\_stop

## **nx\_tftp\_client\_file\_read**

Read a block from client file

### **Prototype**

```
UINT nx_tftp_client_file_read(NX_TFTP_CLIENT *tftp_client_ptr,
                             NX_PACKET **packet_ptr, ULONG wait_option);
```

### **Description**

This service reads a 512-byte block from the previously opened TFTP client file. A block containing fewer than 512 bytes signals the end of the file.

### **Input Parameters**

<b>tftp_client_ptr</b>	Pointer to TFTP client control block.
<b>packet_ptr</b>	Destination for packet containing the block read from the file.
<b>wait_option</b>	Defines how long the service will wait for the read to complete. The wait options are defined as follows:  <b>timeout value</b> (0x00000001 through 0xFFFFFFFF) <b>TX_WAIT_FOREVER</b> (0xFFFFFFFF)  Selecting TX_WAIT_FOREVER causes the calling thread to suspend indefinitely until the TFTP server responds to the request.  Selecting a numeric value (1-0xFFFFFFFF) specifies the maximum number of timer-ticks to stay suspended while waiting for the TFTP server to send a block of the file.

### **Return Values**

<b>NX_SUCCESS</b>	(0x00)	Successful TFTP client block read
<b>NX_TFTP_NOT_OPEN</b>	(0xC3)	Specified TFTP client file is not open for reading

<b>NX_NO_PACKET</b>	(0x01)	Packet not received from TFTP server.
<b>NX_INVALID_TFTP_SERVER_ADDRESS</b>	(0x08)	Invalid server address received
<b>NX_TFTP_NO_ACK_RECEIVED</b>	(0x09)	No ACK received from server
<b>status</b>		Actual NetX completion status
<b>NX_TFTP_END_OF_FILE</b>	(0xC5)	End of file detected.
<b>NX_PTR_ERROR</b>	(0x16)	Invalid TFTP client pointer.
<b>NX_CALLER_ERROR</b>	(0x11)	Invalid caller of this service

### Allowed From

Threads

### Example

```

/* Read a block from a previously opened file of "my_client". */
status = nx_tftp_client_file_read(&my_tftp_client, &return_packet_ptr, 200);

/* If status is NX_SUCCESS a block of the TFTP file is in the payload of
   "return_packet_ptr". */

```

### See Also

nx\_tftp\_client\_create, nx\_tftp\_client\_delete, nx\_tftp\_client\_error\_info\_get,  
 nx\_tftp\_client\_file\_close, nx\_tftp\_client\_file\_open, nx\_tftp\_client\_file\_write,  
 nx\_tftp\_client\_packet\_allocate, nx\_tftp\_server\_create,  
 nx\_tftp\_server\_delete, nx\_tftp\_server\_start, nx\_tftp\_server\_stop



## **nx\_tftp\_client\_file\_write**

Write block to client file

### **Prototype**

```
UINT nx_tftp_client_file_write(NX_TFTP_CLIENT *tftp_client_ptr,
                               NX_PACKET *packet_ptr, ULONG wait_option);
```

### **Description**

This service writes a 512-byte block to the previously opened TFTP client file. Specifying a block containing fewer than 512 bytes signals the end of the file.

### **Input Parameters**

<b>tftp_client_ptr</b>	Pointer to TFTP client control block.
<b>packet_ptr</b>	Packet containing the block to write to the file.
<b>wait_option</b>	Defines how long the service will wait for the write to complete. The wait options are defined as follows:

**timeout value** (0x00000001 through 0xFFFFFFFF)

**TX\_WAIT\_FOREVER** (0xFFFFFFFF)

Selecting TX\_WAIT\_FOREVER causes the calling thread to suspend indefinitely until the TFTP server responds to the request.

Selecting a numeric value (1-0xFFFFFFFF) specifies the maximum number of timer-ticks to stay suspended while waiting for the TFTP server to send an ACK for the write request.

### **Return Values**

<b>NX_SUCCESS</b>	(0x00)	Successful Client block write
<b>NX_TFTP_NOT_OPEN</b>	(0xC3)	Specified TFTP client file is not open for writing

<b>NX_TFTP_TIMEOUT</b>	(0xC1)	Timeout waiting for Server ACK
<b>NX_INVALID_TFTP_SERVER_ADDRESS</b>		
	(0x08)	Invalid server address received
<b>NX_TFTP_NO_ACK_RECEIVED</b>		
	(0x09)	No ACK received from server
<b>status</b>		Actual NetX completion status
<b>NX_PTR_ERROR</b>	(0x16)	Invalid TFTP client pointer.
<b>NX_CALLER_ERROR</b>	(0x11)	Invalid caller of this service

## Allowed From

Threads

## Example

```
/* Write a block to the previously opened file of "my_client". */
status = nx_tftp_client_file_write(&my_tftp_client, packet_ptr, 200);

/* If status is NX_SUCCESS the block in the payload of "packet_ptr" was
   written to the TFPT file opened by "my_client". */
```

## See Also

nx\_tftp\_client\_create, nx\_tftp\_client\_delete, nx\_tftp\_client\_error\_info\_get,  
 nx\_tftp\_client\_file\_close, nx\_tftp\_client\_file\_open, nx\_tftp\_client\_file\_read,  
 nx\_tftp\_client\_packet\_allocate, nx\_tftp\_server\_create,  
 nx\_tftp\_server\_delete, nx\_tftp\_server\_start, nx\_tftp\_server\_stop

# **nx\_tftp\_client\_packet\_allocate**

Allocate packet for client file write

## **Prototype**

```
UINT nx_tftp_client_packet_allocate(NX_PACKET_POOL *pool_ptr,
                                     NX_PACKET **packet_ptr, ULONG wait_option)
```

## **Description**

This service allocates a UDP packet from the specified packet pool and makes room for the 4-byte TFTP header before the packet is returned to the caller. The caller can then build a buffer for writing to a client file.

## **Input Parameters**

<b>pool_ptr</b>	Pointer to packet pool.
<b>packet_ptr</b>	Destination for pointer to allocated packet.
<b>wait_option</b>	Defines how long the service will wait for the packet allocate to complete. The wait options are defined as follows:
<b>timeout value</b>	(0x00000001 through 0xFFFFFFFF)
<b>TX_WAIT_FOREVER</b>	(0xFFFFFFFF)
	Selecting TX_WAIT_FOREVER causes the calling thread to suspend indefinitely until the allocation completes.
	Selecting a numeric value (1-0xFFFFFFFF) specifies the maximum number of timer-ticks to stay suspended while waiting for the packet allocation.

## **Return Values**

<b>NX_SUCCESS</b>	(0x00)	Successful packet allocate
<b>NX_NO_PACKET</b>	(0x01)	No packet available
<b>NX_WAIT_ABORTED</b>	(0x1A)	Requested suspension was aborted by a call to <i>tx_thread_wait_abort</i> .

<b>status</b>		Actual NetX completion status
NX_PTR_ERROR	(0x16)	Invalid TFTP client pointer.
NX_CALLER_ERROR	(0x11)	Invalid caller of this service

### Allowed From

Threads

### Example

```
/* Allocate a packet for TFTP file write. */
status = nx_tftp_packet_allocate(&my_pool, &packet_ptr, 200);
/* If status is NX_SUCCESS "packet_ptr" contains the new packet. */
```

### See Also

nx\_tftp\_client\_create, nx\_tftp\_client\_delete, nx\_tftp\_client\_error\_info\_get,  
 nx\_tftp\_client\_file\_close, nx\_tftp\_client\_file\_open, nx\_tftp\_client\_file\_read,  
 nx\_tftp\_client\_file\_write, nx\_tftp\_server\_create, nx\_tftp\_server\_delete,  
 nx\_tftp\_server\_start, nx\_tftp\_server\_stop

# nx\_tftp\_server\_create

Create TFTP server

## Prototype

```
UINT nx_tftp_server_create(NX_TFTP_SERVER *tftp_server_ptr,
                           CHAR *tftp_server_name, NX_IP *ip_ptr, FX_MEDIA *media_ptr,
                           VOID *stack_ptr, ULONG stack_size,
                           NX_PACKET_POOL *pool_ptr);
```

## Description

This service creates a TFTP server that responds to TFTP client requests on port 69. The server must be started by a subsequent call to *nx\_tftp\_server\_start*.

**Important Note:** The application must make certain the supplied IP, packet pool, and FileX media instance are already created. In addition, UDP must be enabled for the IP instance prior to calling this service.

## Input Parameters

<b>tftp_server_ptr</b>	Pointer to TFTP server control block.
<b>tftp_server_name</b>	Name of this TFTP server instance
<b>ip_ptr</b>	Pointer to previously created IP instance.
<b>media_ptr</b>	Pointer to FileX media instance.
<b>stack_ptr</b>	Pointer to stack area for TFTP server thread.
<b>stack_size</b>	Number of bytes in the TFTP server stack.
<b>pool_ptr</b>	Pointer to TFTP packet pool. Note that the supplied pool must have packet payloads at least 560 bytes in size. <sup>1</sup>

## Return Values

<b>NX_SUCCESS</b>	(0x00)	Successful TFTP server create
-------------------	--------	-------------------------------

<sup>1</sup> The data portion of a packet is exactly 512 bytes, but the packet payload size must be at least 560 bytes. The remaining bytes are used for the UDP, IP, and Ethernet headers.

<b>NX_TFTP_POOL_ERROR</b>	(0xC6)	Packet pool has packet size of less than 560 bytes
<b>status</b>		Actual NetX completion status
<b>NX_PTR_ERROR</b>	(0x16)	Invalid TFTP server, stack, IP, media, or pool pointer.

## Allowed From

Initialization, Threads

## Example

```
/* Create a TFTP server called "my_server". */
status = nx_tftp_server_create(&my_server, "My TFTP Server", &server_ip,
                               &ram_disk, stack_ptr, 2048, pool_ptr);

/* If status is NX_SUCCESS the TFTP server is created. */
```

## See Also

nx\_tftp\_client\_create, nx\_tftp\_client\_delete, nx\_tftp\_client\_error\_info\_get,  
 nx\_tftp\_client\_file\_close, nx\_tftp\_client\_file\_open, nx\_tftp\_client\_file\_read,  
 nx\_tftp\_client\_file\_write, nx\_tftp\_client\_packet\_allocate,  
 nx\_tftp\_server\_delete, nx\_tftp\_server\_start, nx\_tftp\_server\_stop

# **nx\_tftp\_server\_delete**

Delete TFTP server

## **Prototype**

```
UINT nx_tftp_server_delete(NX_TFTP_SERVER *tftp_server_ptr);
```

## **Description**

This service deletes a previously created TFTP server.

## **Input Parameters**

<b>tftp_server_ptr</b>	Pointer to TFTP server control block.
------------------------	---------------------------------------

## **Return Values**

<b>NX_SUCCESS</b>	(0x00)	Successful TFTP server delete
<b>NX_PTR_ERROR</b>	(0x16)	Invalid TFTP server pointer.
<b>NX_CALLER_ERROR</b>	(0x11)	Invalid caller of this service

## **Allowed From**

Threads

## **Example**

```
/* Delete the TFTP server called "my_server". */
status = nx_tftp_server_delete(&my_server);

/* If status is NX_SUCCESS the TFTP server is deleted. */
```

## **See Also**

nx\_tftp\_client\_create, nx\_tftp\_client\_delete, nx\_tftp\_client\_error\_info\_get,  
 nx\_tftp\_client\_file\_close, nx\_tftp\_client\_file\_open, nx\_tftp\_client\_file\_read,  
 nx\_tftp\_client\_file\_write, nx\_tftp\_client\_packet\_allocate,  
 nx\_tftp\_server\_create, nx\_tftp\_server\_start, nx\_tftp\_server\_stop

# **nx\_tftp\_server\_start**

Start TFTP server

## **Prototype**

```
UINT nx_tftp_server_start(NX_TFTP_SERVER *tftp_server_ptr);
```

## **Description**

This service starts the previously created TFTP server.

## **Input Parameters**

**tftp\_server\_ptr**                      Pointer to TFTP server control block.

## **Return Values**

<b>NX_SUCCESS</b>	(0x00)	Successful TFTP server start
<b>NX_PTR_ERROR</b>	(0x16)	Invalid TFTP server pointer.

## **Allowed From**

Initialization, threads

## **Example**

```
/* Start the TFTP server called "my_server". */
status = nx_tftp_server_start(&my_server);

/* If status is NX_SUCCESS the TFTP server is started. */
```

## **See Also**

nx\_tftp\_client\_create, nx\_tftp\_client\_delete, nx\_tftp\_client\_error\_info\_get,  
nx\_tftp\_client\_file\_close, nx\_tftp\_client\_file\_open, nx\_tftp\_client\_file\_read,  
nx\_tftp\_client\_file\_write, nx\_tftp\_client\_packet\_allocate,  
nx\_tftp\_server\_create, nx\_tftp\_server\_delete, nx\_tftp\_server\_stop



## **nx\_tftp\_server\_stop**

Stop TFTP server

### **Prototype**

```
UINT nx_tftp_server_stop(NX_TFTP_SERVER *tftp_server_ptr);
```

### **Description**

This service stops the previously created TFTP server.

### **Input Parameters**

**tftp\_server\_ptr**                      Pointer to TFTP server control block.

### **Return Values**

<b>NX_SUCCESS</b>	(0x00)	Successful TFTP server stop
<b>NX_PTR_ERROR</b>	(0x16)	Invalid TFTP server pointer.
<b>NX_CALLER_ERROR</b>	(0x11)	Invalid caller of this service

### **Allowed From**

Threads

### **Example**

```
/* Stop the TFTP server called "my_server". */
status = nx_tftp_server_stop(&my_server);

/* If status is NX_SUCCESS the TFTP server is stopped. */
```

### **See Also**

nx\_tftp\_client\_create, nx\_tftp\_client\_delete, nx\_tftp\_client\_error\_info\_get,  
 nx\_tftp\_client\_file\_close, nx\_tftp\_client\_file\_open, nx\_tftp\_client\_file\_read,  
 nx\_tftp\_client\_file\_write, nx\_tftp\_client\_packet\_allocate,  
 nx\_tftp\_server\_create, nx\_tftp\_server\_delete, nx\_tftp\_server\_start