

# Text Large Model + Robotic Arm Control (Text Version)

---

Before running the function, you need to close the App and large programs. For the closing method, refer to [4. Preparation] - [1. Manage APP control services].

## 1. Function Description

After the program runs, you can input a series of action commands through the terminal. The large model will plan the corresponding action functions for these commands and execute all instructions sequentially.

## 2. Startup

Users with Jetson-Nano board version need to enter the docker container and input the following command. Orin board users can directly open the terminal and input the following command:

```
ros2 launch largemodel largemodel_control.launch.py text_chat_mode:=True
```

Then open a second terminal and input the following command:

```
ros2 run text_chat text_chat
```

Then input the commands you want to control the robotic arm in the text\_chat terminal.

Currently, the following robotic arm control commands are available:

- Individual servo control: Set servo x to y degrees, where x ranges from 1-6 and y ranges from 0-180, for example, set servo 1 to 120 degrees.
- Individual robotic arm action control: Robotic arm up/down/left/right, gripping posture, tracking posture, for example, set the robotic arm to gripping posture, robotic arm extend upward;
- Control robotic arm motion action groups: Robotic arm dance/clap/nod/shake head, for example, please nod your head;
- Change robotic arm end position: Robotic arm adjust up/down/left/right/forward/backward by x centimeters, for example, adjust the robotic arm upward by 3 centimeters.

You can freely combine robotic arm control commands, and the large model will plan the corresponding action groups for each command. You can refer to the following content and input in the text\_chat terminal:

```
First, adjust the robotic arm upward by 3 centimeters, wait 3 seconds, then  
extend the robotic arm downward, stay for 3 seconds, then have the robotic arm  
shake its head, pause for 3 seconds, and finally set servo 1 to 150 degrees.
```

