

9. Cartographer mapping algorithm

9. Cartographer mapping algorithm

9.1. Introduction

9.2. Use

9.2.1. Start

9.2.2. Controlling the robot

9.2.3. Map saving

9.2.4. Node View

9.2.5. View tf tree

9.3. Configuration parameters

Cartographer: <https://google-cartographer.readthedocs.io/en/latest/>


Cartographer ROS: <https://google-cartographer-ros.readthedocs.io/en/latest/>

map_server: https://wiki.ros.org/map_server

9.1. Introduction

Cartographer is a 2D and 3D SLAM (simultaneous localization and mapping) library supported by Google's open source ROS system. A graph-building algorithm based on graph optimization (multi-threaded backend optimization, problem optimization of ceiling construction). Data from multiple sensors (such as LIDAR, IMU, and cameras) can be combined to simultaneously calculate the sensor's position and map the environment around the sensor.

The source code of cartographer mainly includes three parts: cartographer, cartographer_ros and ceres-solver (back-end optimization).

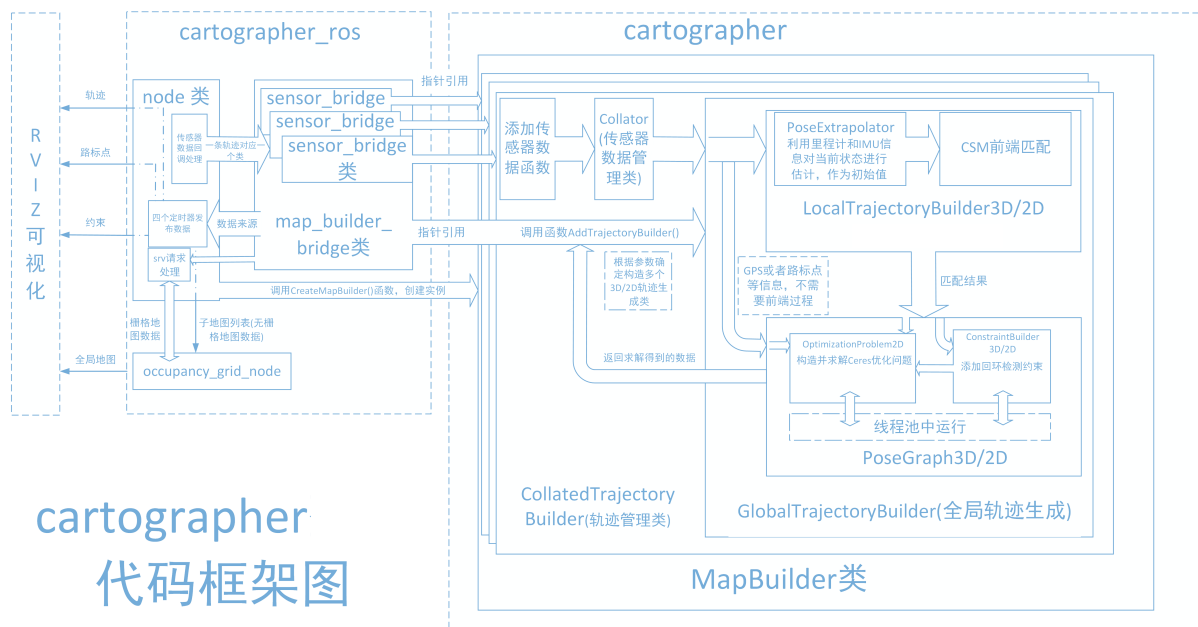

- cartographer


```
sudo vim .bashrc
```

Find the [ROBOT_TYPE] parameters and modify the corresponding car model

```
export ROBOT_TYPE=X3 # ROBOT_TYPE: X1 X3 X3plus R2 X7
```

To replace the configuration file, copy the launch file and lua file required by cartographer to the specified directory. It is configured before leaving the factory.

```
sudo bash ~/yahboomcar_ws/src/yahboomcar_nav/scripts/copy_carto.sh
```

9.2.1. Start

Start the command (robot side). For the convenience of operation, this section takes [mono + laser + yahboomcar] as an example.

```
roslaunch yahboomcar_nav laser_bringup.launch # laser + yahboomcar
roslaunch yahboomcar_nav laser_usb_bringup.launch # mono + laser + yahboomcar
roslaunch yahboomcar_nav laser_astapro_bringup.launch # Astra + laser + yahboomcar
```

Mapping command (robot side)

<PI5 needs to open another terminal to enter the same docker container

1. In the above steps, a docker container has been opened. You can open another terminal on the host (car) to view:

```
docker ps -a
```

```
jetson@ubuntu:~$ docker ps -a
CONTAINER ID   IMAGE                                COMMAND                  CREATED        STATUS        PORTS        NAMES
5b698ea10535   yahboomtechnology/ros-foxy:3.3.9   "/bin/bash"            3 days ago    Up 9 hours                ecstatic_lewin
jetson@ubuntu:~$
```

2. Now enter the docker container in the newly opened terminal:

```
docker exec -it 5b698ea10535 /bin/bash
```

```
jetson@ubuntu:~$ docker ps -a
CONTAINER ID   IMAGE                                COMMAND                  CREATED        STATUS        PORTS        NAMES
5b698ea10535   yahboomtechnology/ros-foxy:3.3.9   "/bin/bash"            3 days ago    Up 9 hours                ecstatic_lewin
jetson@ubuntu:~$ docker exec -it 5b698ea10535 /bin/bash
-----
my_robot_type: x3 | my_lidar: a1 | my_camera: astrapro
-----
root@ubuntu:/#
```


After successfully entering the container, you can open countless terminals to enter the container.

```
roslaunch yahboomcar_nav yahboomcar_map.launch use_rviz:=false
map_type:=cartographer
```

- [use_rviz] parameter: whether to enable rviz visualization.
- [map_type] parameter: Set the mapping algorithm [cartographer].

Turn on the visual interface (virtual machine side)

```
roslaunch yahboomcar_nav view_cartographer.launch
```

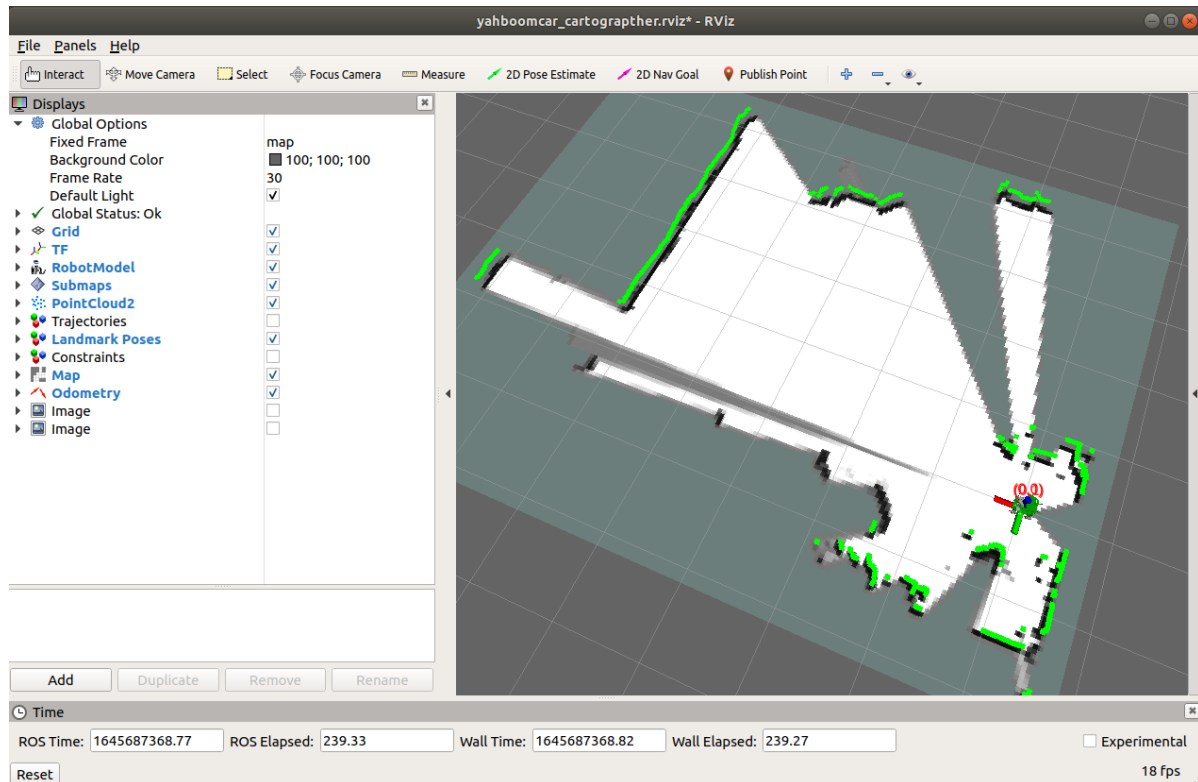

The gap at the back of the robot is due to the obstruction caused by the installation position of the display screen, so a certain range of radar data is blocked. The shielding range can be adjusted, or it can not be blocked according to the actual situation. For specific operations, see [01. Radar Basic Course].

9.2.2. Controlling the robot

- Keyboard controls robot movement

```
roslaunch teleop_twist_keyboard teleop_twist_keyboard.py # System integration
roslaunch yahboomcar_ctrl yahboom_keyboard.launch # Custom
```

- Control the robot movement with the handle

Make the robot cover the area to be mapped and the map should be as closed as possible.

There may be some scattered points during the mapping process. If the mapping environment is well closed, relatively regular, and the movement is slow, the scattering phenomenon will be much smaller.

9.2.3. Map saving

```
bash ~/yahboomcar_ws/src/yahboomcar_nav/maps/carto_map.sh
```

The map will be saved to the ~/yahboomcar_ws/src/yahboomcar_nav/maps/ folder, a pgm image and a yaml file.

map.yaml

```

image: map.pgm
resolution: 0.05
origin: [-15.4,-12.2,0.0]
Negate: 0
occupied_thresh: 0.65
free_thresh: 0.196


```

Parameter analysis:

- image: The path of the map file, which can be an absolute path or a relative path.
- resolution: resolution of the map, meters/pixel
- Origin: 2D pose (x, y, yaw) in the lower left corner of the map. The yaw here is rotated counterclockwise (yaw=0 means no rotation). Many parts of the current system ignore the yaw value.
- negate: whether to reverse the meaning of white/black and free/occupied (the interpretation of the threshold is not affected)
- occupied_thresh: Pixels with an occupation probability greater than this threshold will be considered fully occupied.
- free_thresh: Pixels with occupancy probability less than this threshold will be considered completely free.


9.2.4. Node View

rqt_graph

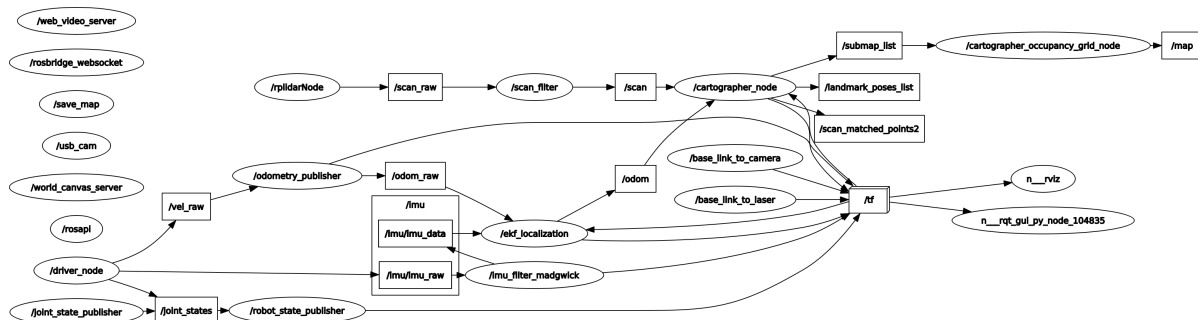

9.2.5. View tf tree

roslaunch rqt_tf_tree rqt_tf_tree

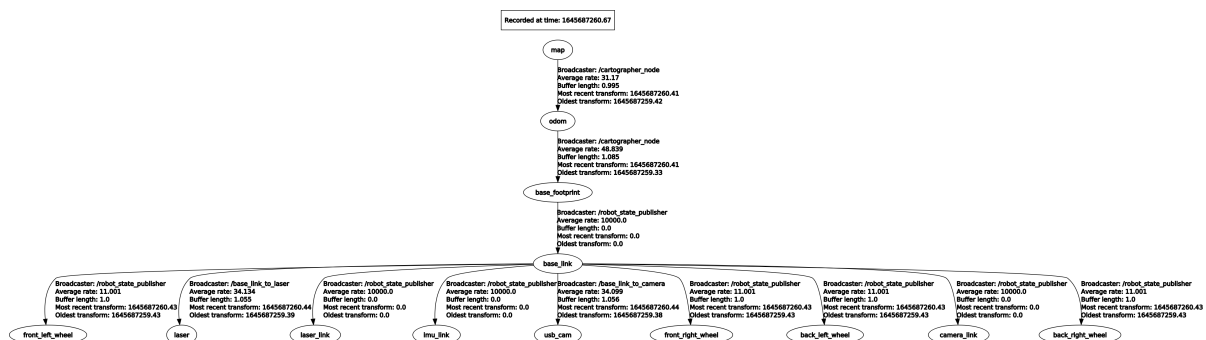

9.3. Configuration parameters

lua file

Parameters	Description
map_frame	map coordinate system
tracking_frame	Convert all sensor data to this coordinate system
published_frame	The coordinate system pointed to by map
odom_frame	Do you provide odom's tf? If it is true, the tf tree is map->odom->footprint; if it is false, the tf tree is map->footprint
provide_odom_frame	If true, the local, non-loop-closed, continuous pose will be published as odom_frame in map_frame?
publish_frame_projected_to_2d	If enabled, published poses will be restricted to pure 2D poses (no roll, pitch or z-offset)
use_odometry	Whether to use odometer, if required, you must have odom tf
use_nav_sat	Whether to use gps
use_landmarks	Whether to use landmarks
num_laser_scans	Whether to use single-line laser data
num_multi_echo_laser_scans	Whether to use multi_echo_laser_scans data
num_subdivisions_per_laser_scan	1 frame of data is divided into several times for processing, usually 1
num_point_clouds	Whether to use point cloud data
lookup_transform_timeout_sec	Timeout when looking up tf
submap_publish_period_sec	Time interval for publishing submap (seconds)
pose_publish_period_sec	The time interval for publishing pose, when the value is 5e-3, it is 200HZ
trajectory_publish_period_sec	The time interval for publishing trajectory markers (trajectory nodes), the value is 30e-3 is 30ms
rangefinder_sampling_ratio	Fixed sampling frequency for lidar messages
odometry_sampling_ratio	Fixed sampling frequency of odometry messages
fixed_frame_pose_sampling_ratio	Fixed sampling frequency of fixed coordinate system messages
imu_sampling_ratio	Fixed sampling frequency of IMU messages
landmarks_sampling_ratio	Fixed sampling frequency of landmark messages