

Start the Transbot_se container

Start the Transbot_se container

[Preliminary preparation](#)

[Start Docker](#)

[Precautions](#)

[Example: USB camera](#)

The ROS environment of Raspberry Pi 5 and the hardware control case of transbot se are both located in Docker. Every time we run a case, we need to confirm that it is in the docker container of transbot se.

Starting docker yourself is necessary to run a single case or personal development.

Preliminary preparation

Note: The startup program must be closed to run a single case!

For a tutorial on closing the large boot program, please refer to the tutorial [Transbot SE expansion board control tutorial: closing the large self-starting program].

[Preparation before development: Close the startup program]: The tutorial provides temporary/permanent shutdown of the startup program and shutdown/restoration of the startup Docker script operation!

For first time use, it is recommended to temporarily close the startup program. For simple developers, you can try to permanently close the startup program.

If the recovery of the large startup program fails permanently, you can follow the tutorial to reverse the recovery or burn the system yourself to restore the factory state.

Start Docker

We provide the script file `run_docker.sh` for running the docker image corresponding to transbot se in the home directory on the Raspberry Pi 5 motherboard.

```
#!/bin/bash


# wait for the Docker service to start
while true; do
    if systemctl is-active --quiet docker; then
        echo "Docker service has been started"
        break
    else
        echo "The Docker service has not started, waiting..."
        sleep 1
    fi
fi
```

done

```
xhost+
docker run -it \
--net=host \
--env="DISPLAY" \
--env="QT_X11_NO_MITSHM=1" \
-v /tmp/.X11-unix:/tmp/.X11-unix \
--security-opt apparmor:unconfined \
-v /home/pi/temp:/root/temp \
--device=/dev/ttyAMA0 \
--device=/dev/video0 \
--device=/dev/input \
--device=/dev/video1 \
yahboomtechnology/ros-melodic:Transbot_Se_v1 /bin/bash
```

Start command

```
./run_docker.sh
```

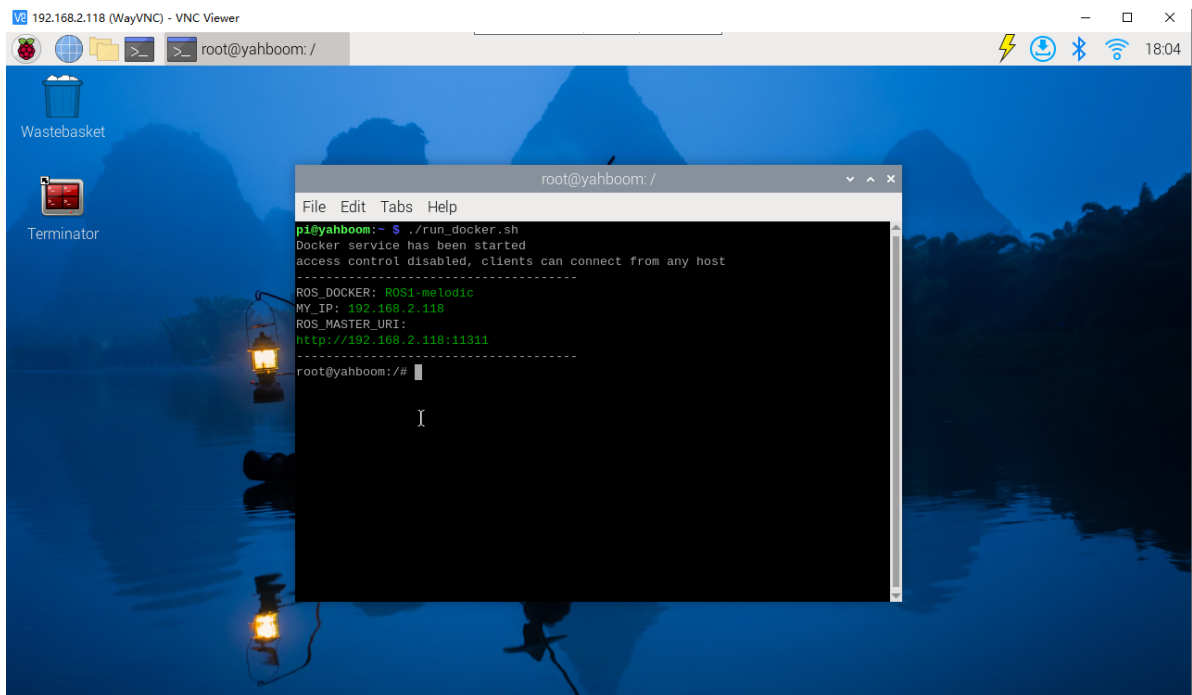

Precautions

If the hardware device is not connected correctly, starting docker may fail!

Example: USB camera

If the camera is not connected or the one identified is not /dev/video0, Docker may not be able to enter correctly or the camera case will report an error.

If we need to cancel the hardware mapping of the USB camera, we can delete the corresponding `--device=/dev/video0 \` information in the startup script.

```
#!/bin/bash
```

```
# wait for the Docker service to start
```

```
while true; do
    if systemctl is-active --quiet docker; then
        echo "Docker service has been started"
        break
    else
        echo "The Docker service has not started, waiting..."
        sleep 1
    fi
done
```

```
xhost +
docker run -it \
--net=host \
--env="DISPLAY" \
--env="QT_X11_NO_MITSHM=1" \
-v /tmp/.X11-unix:/tmp/.X11-unix \
--security-opt apparmor:unconfined \
-v /home/pi/temp:/root/temp \
--device=/dev/ttyAMA0 \
--device=/dev/input \
--device=/dev/video1 \
yahboomtechnology/ros-melodic:Transbot_Se_V1 /bin/bash
```