










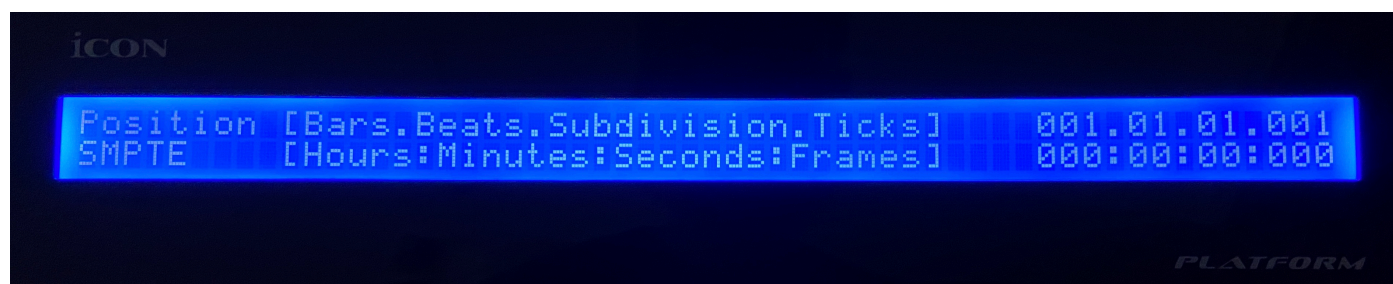


| Button | Function | Press Jog Dial Button | Shift |
|---|--------------------------|--|--------------------|
|  1 | | Assignment Mode Inputs/Outputs | |
|  2 | | Assignment Mode Sends | |
|  3 | | Assignment Mode Volume/Pan | |
|  4 | | Assignment Mode Plug-ins | |
|  5 | | Previous Page | |
|  6 | | Next Page | |
|  7 | | Toggle Returns | |
|  8 | | Toggle Track View/Time View (Position and SMPTE) | |
|  | Previous Channel | Punch In | Goto first Channel |
|  | Next Channel | Punch Out | Goto last Channel |
|  | Previous Bank | Set left Loop Point | Goto first Bank |
|  | Next Bank | Set right Loop Point | Goto last Bank |
|  | Previous Marker | Marker Home | |
|  | Next Marker | Marker End | |
|  | Play | Continue Play | Play Selection |
|  | Stop | Show Assignment Mode and Master Fader Assignment | |
|  | Loop | Set/Delete Marker | |
|  | Arrangement/Session View | View Browser | Focus |
|  | Return To Arrangement | View Detail | Focus |
|  | Zoom (see table below) | View Detail Subview | Focus |
|  1 | | Metronome | |
|  2 | | Follow Song | |
|  3 | | Draw | |
|  4 | | Shift | |
|  5 | | Control | |
|  6 | | Alt | |
|  7 | | Redo | |
|  8 | | Undo | |
| Touch Master Fader | | Toggle Fader: Master Volume/Cue Volume | |



Zoom button and Jog Dial behaviour

| Zoom | Cursor | Jog Dial | Session View |
|---|---|------------|---|
| | | Left/Right | Select Clip: 1 Turn = 1 Step (Cursor up/down) |
| |  | Left/Right | Select Track (Cursor left/right) |
| |  | Left/Right | Select Clip: 1 Turn = 1 Step (Cursor up/down) |
|  | | | Trigger clip + Shift : Stop clip + Ctrl : Add/remove Stop button + Alt : Trigger scene + Alt + Shift : Stop all clips |
| Zoom | Cursor | Jog Dial | Arrangement View |
| | | Left/Right | Play Position: Movement in 1/4 Press Jog Dial Button : Adjust Tempo Press Jog Dial Button + Shift : Adjust Tempo in small steps |
| |  | Left/Right | Play Position: Movement in 1/16 Press Jog Dial Button : Select time section |
| |  | Left/Right | Select Track (Cursor up/down) |
|  |  | Left/Right | Zoom Arrangement |
|  |  | Left/Right | Zoom Track Press Jog Dial Button : Zoom all Tracks |



Time Mode:



Additional functions:

- Pressing the two buttons  and  simultaneously flips Fader and Pots.
- Pressing the **Jog Dial Button** you can exclusive **Arm** and **Solo** tracks.
- You can select a track beyond the bank when using the mouse or keyboard. No need for the bank buttons of Platform M+.

Bug or feature in Platform M+:

Pressing the two buttons  and  simultaneously stops sending MIDI messages for these two buttons.