








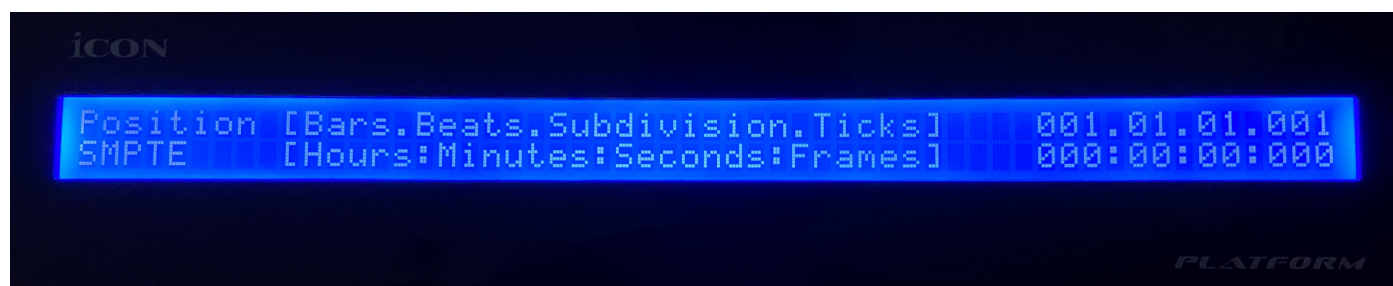


Button	Function	Press Jog Dial Button	Shift
 1		Assignment Mode Inputs/Outputs	
 2		Assignment Mode Sends	
 3		Assignment Mode Volume/Pan	
 4		Assignment Mode Plug-ins	
 5		Previous Page	
 6		Next Page	
 7		Toggle Returns	
 8		Toggle Track View/Time View (Position and SMPTE)	
 I<	Previous Channel	Punch In	Goto first Channel
 >I	Next Channel	Punch Out	Goto last Channel
 <<8	Previous Bank	Set left Loop Point	Goto first Bank
 8>>	Next Bank	Set right Loop Point	Goto last Bank
 <<	Previous Marker	Marker Home	
 >>	Next Marker	Marker End	
 >	Play	Continue Play	Play Selection
 □	Stop	Show Assignment Mode and Master Fader Assignment	
 ↺	Loop	Set/Delete Marker	
 MIX	Arrangement/Session View	View Browser	Focus
 R	Return To Arrangement	View Detail	Focus
 W	Zoom (see table below)	View Detail Subview	Focus
 SEL 1		Metronome	
 SEL 2		Follow Song	
 SEL 3		Draw	
 SEL 4		Shift	
 SEL 5		Control	
 SEL 6		Alt	
 SEL 7		Redo	
 SEL 8		Undo	
Touch Master Fader		Toggle Fader: Master Volume/Cue Volume	



Zoom button and Jog Dial behaviour

Zoom	Cursor	Jog Dial	Session View
		Left/Right	Select Clip: 1 Turn = 1 Step (Cursor up/down)
		Left/Right	Select Track (Cursor left/right)
		Left/Right	Select Clip: 1 Turn = 1 Step (Cursor up/down)
			Trigger clip + Shift : Stop clip + Ctrl : Add/remove Stop button + Alt : Trigger scene + Alt + Shift : Stop all clips
Zoom	Cursor	Jog Dial	Arrangement View
		Left/Right	Play Position: Movement in 1/4 Press Jog Dial Button : Adjust Tempo Press Jog Dial Button + Shift : Adjust Tempo in small steps
		Left/Right	Play Position: Movement in 1/16 Press Jog Dial Button : Select time section
		Left/Right	Select Track (Cursor up/down)
		Left/Right	Zoom Arrangement
		Left/Right	Zoom Track Press Jog Dial Button : Zoom all Tracks



Time View:



Additional functions:

- Pressing the two buttons  and  simultaneously flips Fader and Pots.
- Pressing the **Jog Dial Button** you can exclusive **Arm** and **Solo** tracks.
- You can select a track beyond the bank when using the mouse or keyboard. No need for the bank buttons of Platform M+.

Bug or feature in Platform M+:

Pressing the two buttons  and  simultaneously stops sending MIDI messages for these two buttons.