

➤ Virtual COM port (VCP)のインストール

1. Web サイト(<http://www.ftdichip.com/Drivers/VCP.htm>)にアクセスし、インストーラをダウンロードする。

Home
Products
Drivers
VCP Drivers
D2XX Drivers
D3XX Drivers
Firmware
Support
Android
EVE
MCU
Sales Network
Web Shop
Newsletter
Corporate
Contact Us

FTDI Chip NEW!
Range of Compact Dual/Quad Channel Hi-Speed USB Interface ICs

Virtual COM Port Drivers
This page contains the VCP drivers currently available for FTDI devices.
For D2XX Direct drivers, please click [here](#).
Installation guides are available from the [Installation Guides](#) page of the [Documents](#) section of this site for selected operating systems.


VCP Drivers
Virtual COM port (VCP) drivers cause the USB device to appear as an additional COM port available to the PC. Application software can access the USB device in the same way as it would access a standard COM port.
This software is provided by Future Technology Devices International Limited "as is" and any express or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose are disclaimed. In no event shall future technology devices international limited be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, whether in contract, strict liability, or tort (including negligence or otherwise) arising in any way out of the use of this software, even if advised of the possibility of such damage.
FTDI drivers may be used only in conjunction with products based on FTDI parts.
FTDI drivers may be distributed in any form as long as license information is not modified.
If a custom vendor ID and/or product ID or description string are used, it is the responsibility of the product manufacturer to maintain any changes and subsequent WHCK re-certification as a result of making these changes.
For more detail on FTDI Chip Driver licence terms, please [click here](#).

Currently Supported VCP Drivers:


Operating System	Release Date	Processor Architecture							Comments
		x86 (32-bit)	x64 (64-bit)	PPC	ARM	MIPSII	MIPSIV	SH4	
Windows*	2016-03-16	2.12.16	2.12.16	-	-	-	-	-	WHQL Certified. Includes VCP and D2XX. Available as a setup executable. Please read the Release Notes and Installation Guides.
Linux	2009-05-14	1.5.0	1.5.0						All FTDI devices now supported in Ubuntu 11.10, kernel 3.0.0-19

2. インストーラを実行し、ドライバと VCP をインストールする。


インストーラが起動したら「Extract」をクリック

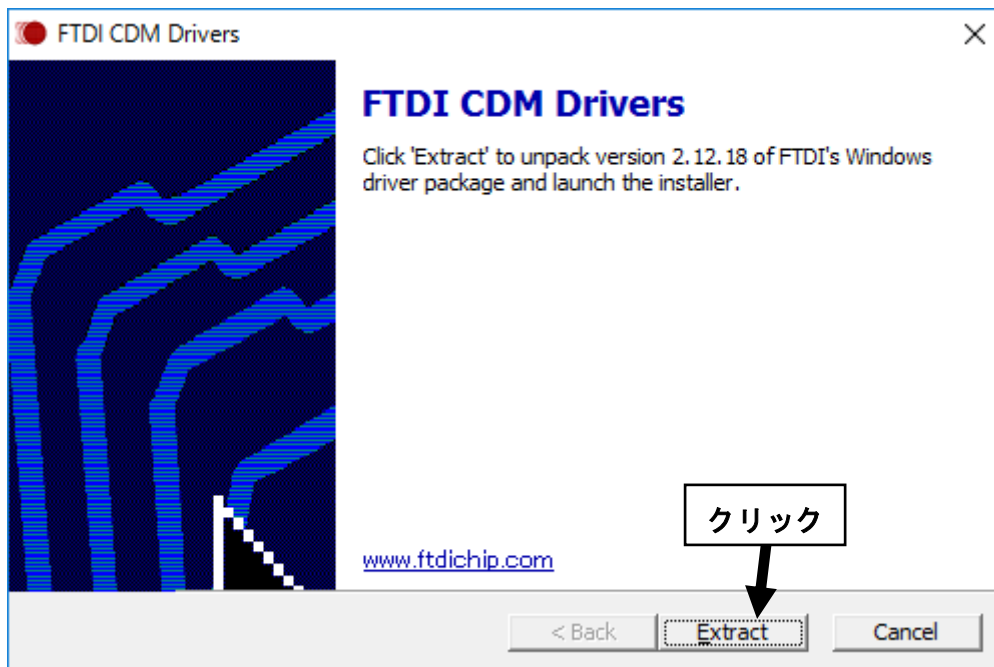

デバイスドライバのインストールウィザードが立ち上がったら、「次へ」を選択

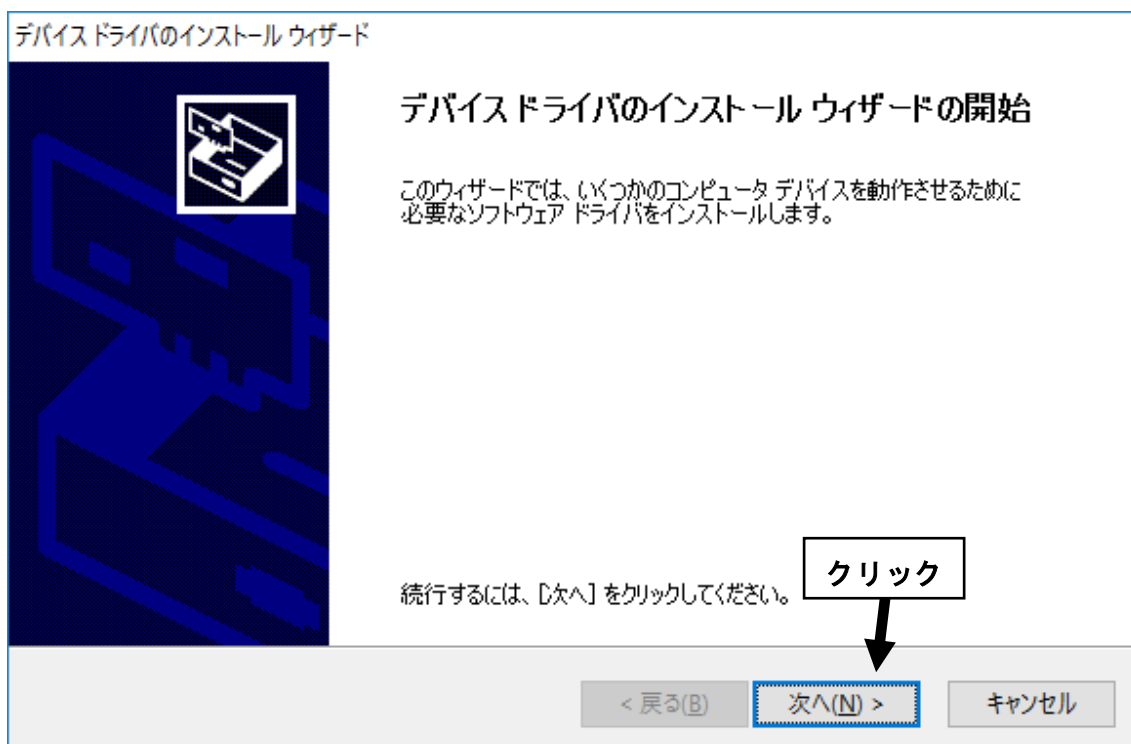

使用許諾契約に「同意」し、「次へ」をクリック

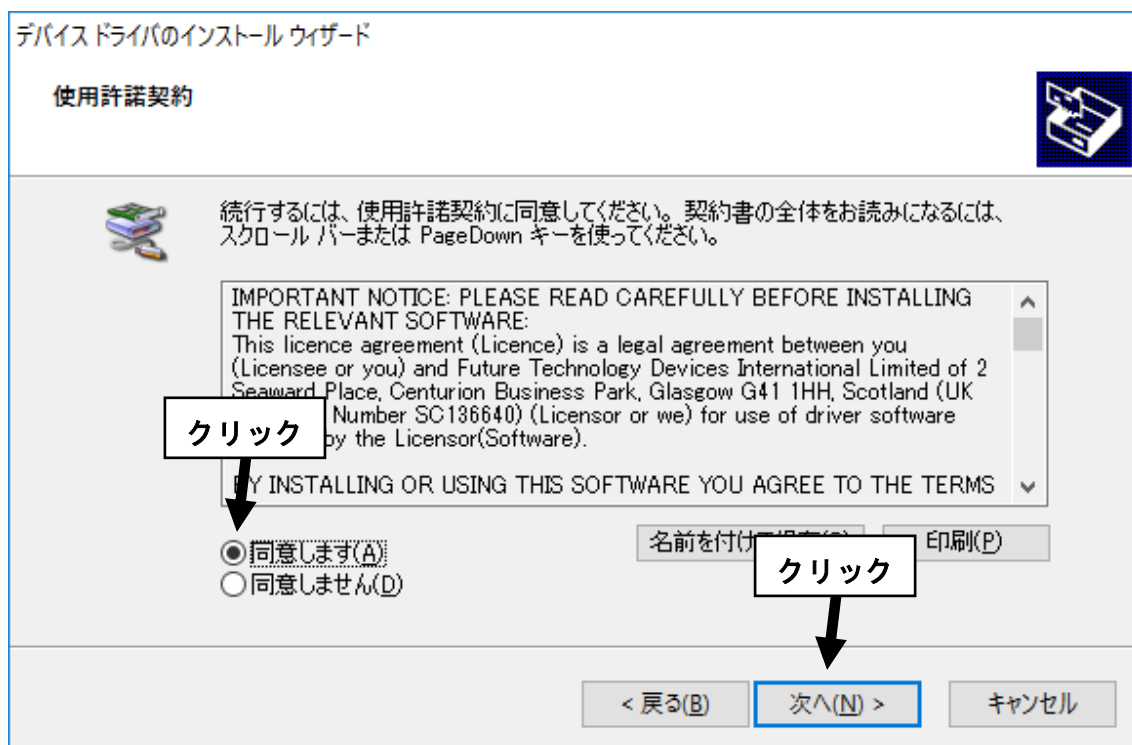

最後に「完了」をクリックし、インストール終了

