


Important tips

1. There are 5 ways to connect TV SPEAKER to TV audio output, But ONLY use ONE of the connections as shown below.
2. Make sure to use only one cable connection method at a time. When changing to another cable connection method, you MUST remove the previously connected cable.
3. If your TV has other audio devices in use, please remove it first.


1. Optical Cable

Connect TV SPEAKER to TV with optical cable
(Remove cap before inserting).

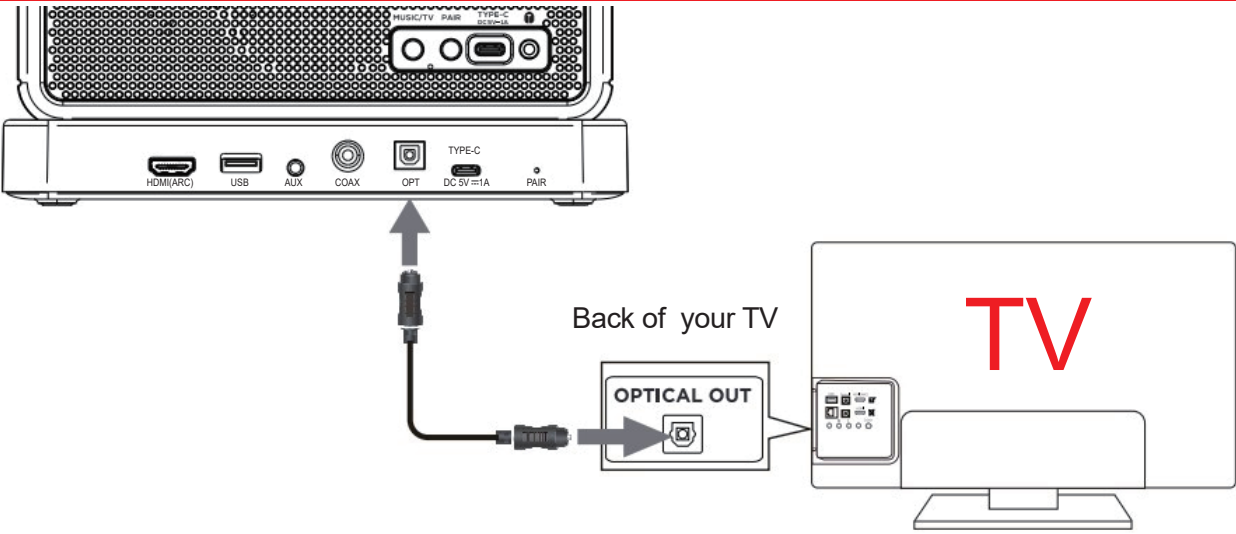


2. HDMI(ARC) Cable

Connect TV SPEAKER to TV with HDMI(ARC) Cable
(Insert TV HDMI OUTPUT port).

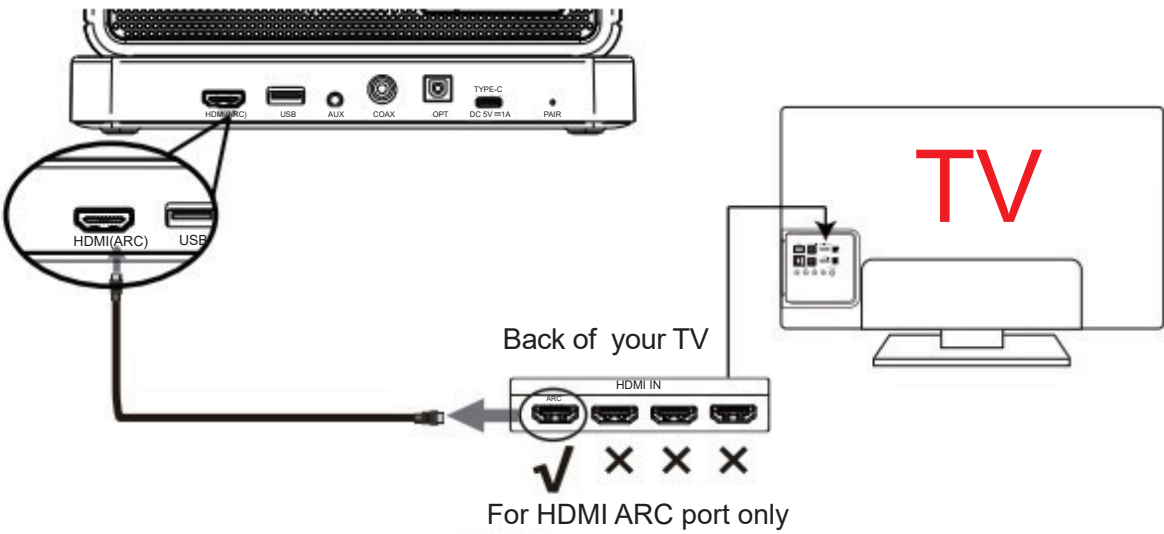


3. AUX Cable

Connect TV SPEAKER to TV with 3.5mm to 3.5mm audio cable
(Insert TV AUDIO OUTPUT port).

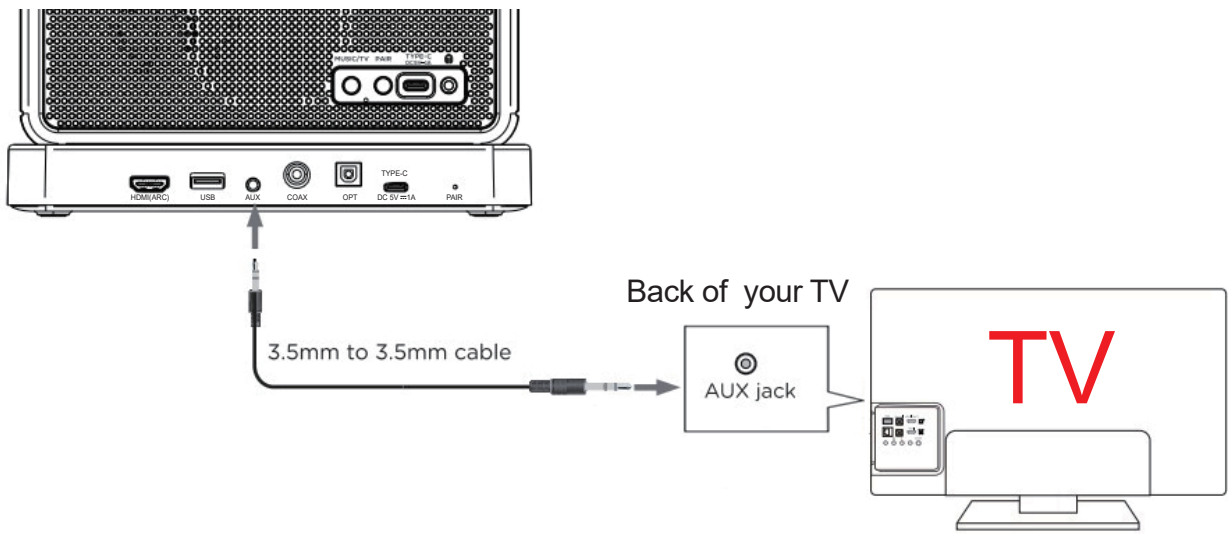

4. RCA Cable

Connect TV SPEAKER to TV with RCA& 3.5mm cable
(Insert TV RCA OUTPUT port).

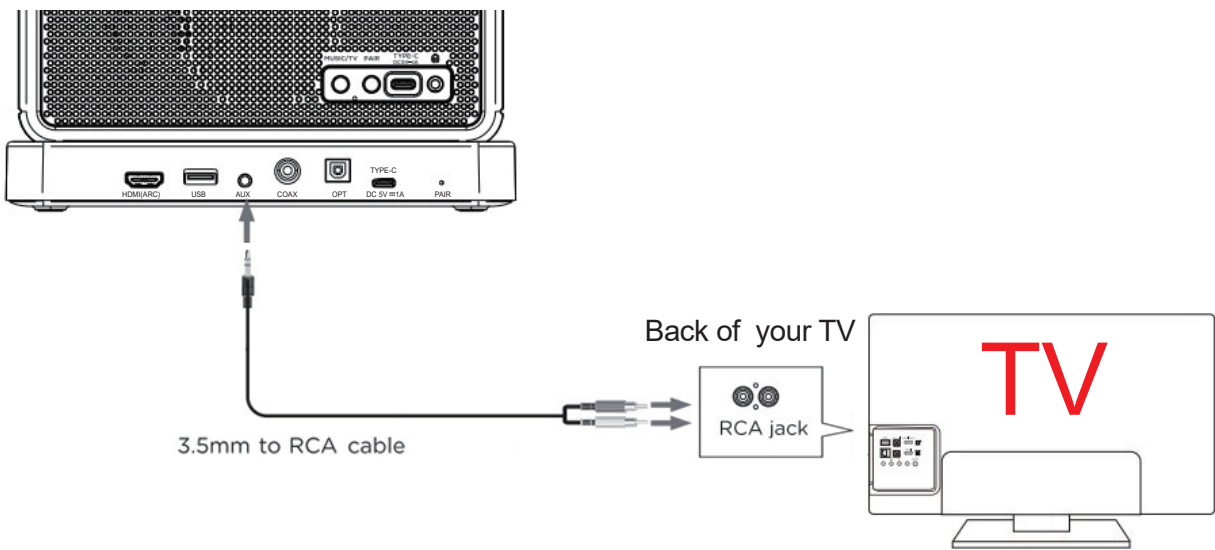

5. Coaxial Cable

Connect TV SPEAKER to TV with coaxial cable
(Insert TV COAXIAL OUTPUT port).

