







For PCB ANT (Default):
R42=0 Ohm, L7=6.2 nH, R43=0 ohm
DO NOT PLACE R44.

For External ANT:
R44=0 ohm;
DO NOT PLACE R42, L7, R43.