



ECP5™ Evaluation Board

User Guide

FPGA-EB-02017-1.3

April 2023

Disclaimers

Lattice makes no warranty, representation, or guarantee regarding the accuracy of information contained in this document or the suitability of its products for any particular purpose. All information herein is provided AS IS and with all faults, and all risk associated with such information is entirely with Buyer. Buyer shall not rely on any data and performance specifications or parameters provided herein. Products sold by Lattice have been subject to limited testing and it is the Buyer's responsibility to independently determine the suitability of any products and to test and verify the same. No Lattice products should be used in conjunction with mission- or safety-critical or any other application in which the failure of Lattice's product could create a situation where personal injury, death, severe property or environmental damage may occur. The information provided in this document is proprietary to Lattice Semiconductor, and Lattice reserves the right to make any changes to the information in this document or to any products at any time without notice.

Contents

Acronyms in This Document	6
1. Introduction	7
1.1. ECP5 Evaluation Board	7
1.2. Features	9
1.3. ECP5 Device	9
2. Applying Power to the Board	10
3. Programming and I ² C	11
3.1. JTAG Download Interface	11
3.2. Alternate JTAG Download Interface	11
3.3. JTAG to MSPI Pass-through Interface	12
3.4. SPI Flash Device Selection in Programmer	12
3.5. Other JTAG Configuration Pins	13
3.6. Configuration Modes	14
4. ECP5 Clock Sources	15
5. Headers and Test Connections	16
5.1. Versa Headers	16
5.2. Arduino Board GPIO Headers	18
5.3. Raspberry Pi Board GPIO Header	19
5.4. GPIO Headers	21
5.5. Microphone Expansion Header	24
5.6. PMOD Header	24
5.7. JTAG Header	24
5.8. Parallel Configuration Header	25
6. Control Buses - I ² C, I ³ C, UART, and SPI	26
6.1. I ² C and I ³ C Topology	26
6.2. UART Topology	27
6.3. SPI Topology	27
6.3.1. SPI Configuration	27
6.3.2. SPI Flash Access	27
7. LEDs and Switches	29
7.1. DIP Switch	29
7.2. Configuration Mode Switch	29
7.3. General Purpose Push Buttons	29
7.4. General Purpose LEDs	30
7.5. Indicator LEDs	30
8. Software Requirements	31
9. Storage and Handling	31
10. Ordering Information	31
Appendix A. ECP5 Evaluation Board Schematics	32
Appendix B. ECP5 Evaluation Board Bill of Materials	44
References	53
Lattice Semiconductor Documents	53
Technical Support Assistance	54
Revision History	55

Figures

Figure 1.1. Top View of ECP5 Evaluation Board.....	7
Figure 1.2. Bottom View of ECP5 Evaluation Board.....	8
Figure 1.3. Top View of ECP5 Evaluation Board – Jumper Locations.....	8
Figure 2.1. Board Power Supply.....	10
Figure 3.1. Configuration and I ² C Architecture.....	11
Figure 3.2. Edit Custom Device Dialog.....	12
Figure 3.3. Custom SPI Flash Device Dialog.....	13
Figure 3.4. SPI Flash Options.....	13
Figure 6.1. I ² C Architecture, I ³ C, and UART Options.....	26
Figure 6.2. SPI Interface.....	28
Figure A. 1. Title Page.....	32
Figure A. 2. Block Diagram.....	33
Figure A. 3. USB Interface.....	34
Figure A. 4. Arduino Header (BANK2).....	35
Figure A. 5. Raspberry Pi Header (BANK3).....	36
Figure A. 6. SERDES SMA.....	37
Figure A. 7. IO Breakout (BANK0, BANK1, BANK6).....	38
Figure A. 8. IO Breakout (BANK7, Differential Pairs).....	39
Figure A. 9. Configuration.....	40
Figure A. 10. Power Decoupling and LEDs.....	41
Figure A. 11. Power Hookup.....	42
Figure A. 12. Power Regulators.....	43

Tables

Table 2.1. ECP5 VCCIO Supply Options.....	10
Table 3.1. JTAG Connections.....	11
Table 3.2. Other JTAG Signals.....	13
Table 3.3. CFGMDN Mode Settings.....	14
Table 4.1. Clock Sources.....	15
Table 5.1. Versa J39 Header Pin Connections.....	16
Table 5.2. Versa J40 Header Pin Connections.....	17
Table 5.3. Arduino J6 Pin Connections.....	18
Table 5.4. Arduino J3 Pin Connections.....	18
Table 5.5. Arduino J7 Pin Connections.....	19
Table 5.6. Arduino J4 Pin Connections.....	19
Table 5.7. Raspberry Pi JP8 Header Pin Connections.....	19
Table 5.8. J5 Header Pin Connections.....	21
Table 5.9. J8 Header Pin Connections.....	22
Table 5.10. J32 Header Pin Connections.....	22
Table 5.11. J33 Header Pin Connections.....	23
Table 5.12. J30 Header Pin Connections.....	24
Table 5.13. J31 Header Pin Connections.....	24
Table 5.14. J1 Header Pin Connections.....	25
Table 5.15. J38 Header Pin Connections.....	25
Table 6.1. I ² C Global Bus Connections.....	26
Table 6.2. ECP5 SPI Connections.....	27
Table 7.1. Eight-Position DIP Switch Signals.....	29

Table 7.2. CFGMDN Switch Signals	29
Table 7.3. Push Button Switch Signals	29
Table 7.4. General Purpose LED Signals.....	30
Table 7.5. Various LED Signals	30
Table 10.1. Ordering Information	31

Acronyms in This Document

A list of acronyms used in this document.

Acronym	Definition
ASC	Analog Sense and Control
caBGA	Chip Array Ball Grid Array
CMOS	Complementary Metal-Oxide Semiconductor
DIP	Dual Inline Package
DNI	Do Not Install
ESD	Electro Static Discharge
FPGA	Field Programmable Logic Array
FTDI	Future Technology Devices International
GDDR	Graphics Double Data Rate
GPIO	General Purpose Input/Output
GUI	Graphical User Interface
I ² C	Inter-Integrated Circuit
I ³ C	Improved Inter-Integrated Circuit
JTAG	Joint Test Action Group
LVDS	Low-Voltage Differential Signaling
MDC	Microphone Daughter Card
MDP	Mobile Development Platform
PMOD	Peripheral Module
SCM	Serial Configuration Mode
SPCM	Slave Parallel Configuration Mode
SPI	Serial Peripheral Interface
UART	Universal Asynchronous Receiver Transmitter
USB	Universal Serial Bus

1. Introduction

The Lattice Semiconductor ECP5™ Evaluation Board allows designers to investigate and experiment with the features of the ECP5-5G Field Programmable Gate Array (FPGA). The features of the ECP5 Evaluation Board can assist engineers with the rapid prototyping and testing of their specific designs.

The ECP5 Evaluation Board is part of the ECP5 Evaluation Kit, which includes the following:

- ECP5 Evaluation Board pre-loaded with the demo design
- Mini USB cable
- Quick Start Guide

The contents of this user guide include top-level functional descriptions of the various portions of the development board, descriptions of the on-board headers, diodes and switches and a complete set of schematics.

1.1. ECP5 Evaluation Board

The ECP5 Evaluation Board features the ECP5-5G FPGA in the 381-ball caBGA package (LFE5UM5G-85F-8BG381) and the ability to expand the usability of the ECP5 with Arduino, Raspberry Pi, PMOD, MDC, and Versa headers, along with access to all SERDES channels. Over 170 I/Os and 20 differential pairs are available for user-defined applications.

Figure 1.1 shows the top view of the ECP5 Evaluation Board. Figure 1.2 shows the bottom view of the board. Figure 1.3 shows the jumper locations.

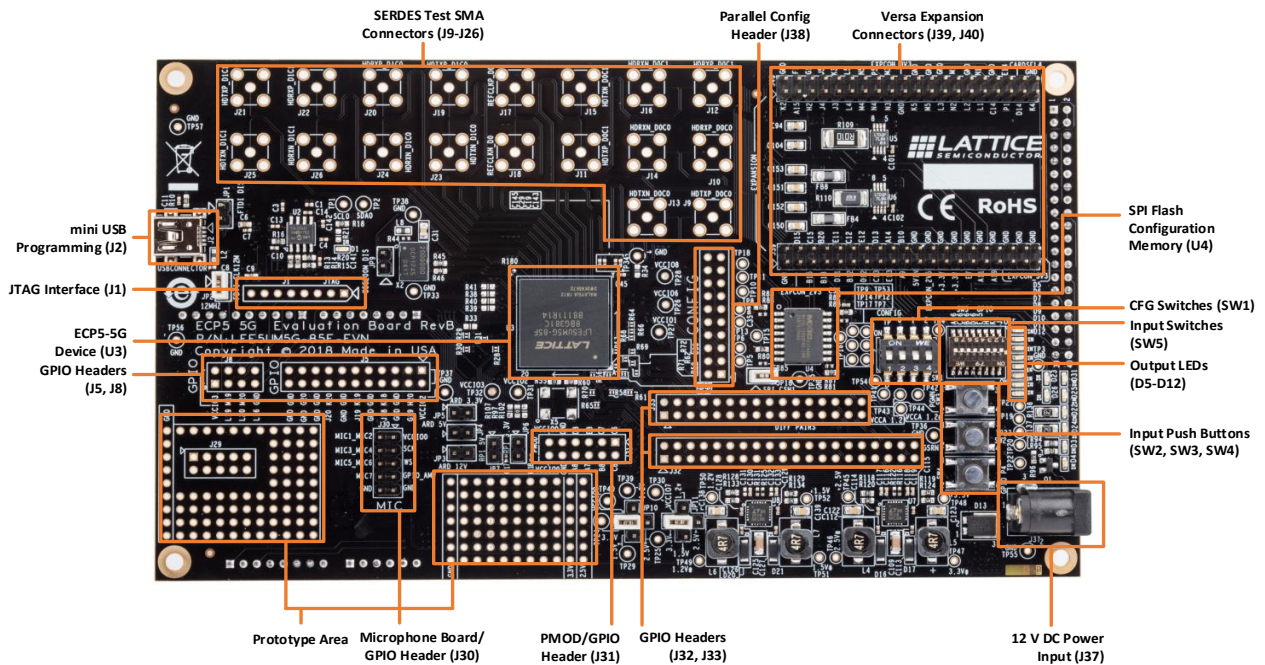


Figure 1.1. Top View of ECP5 Evaluation Board

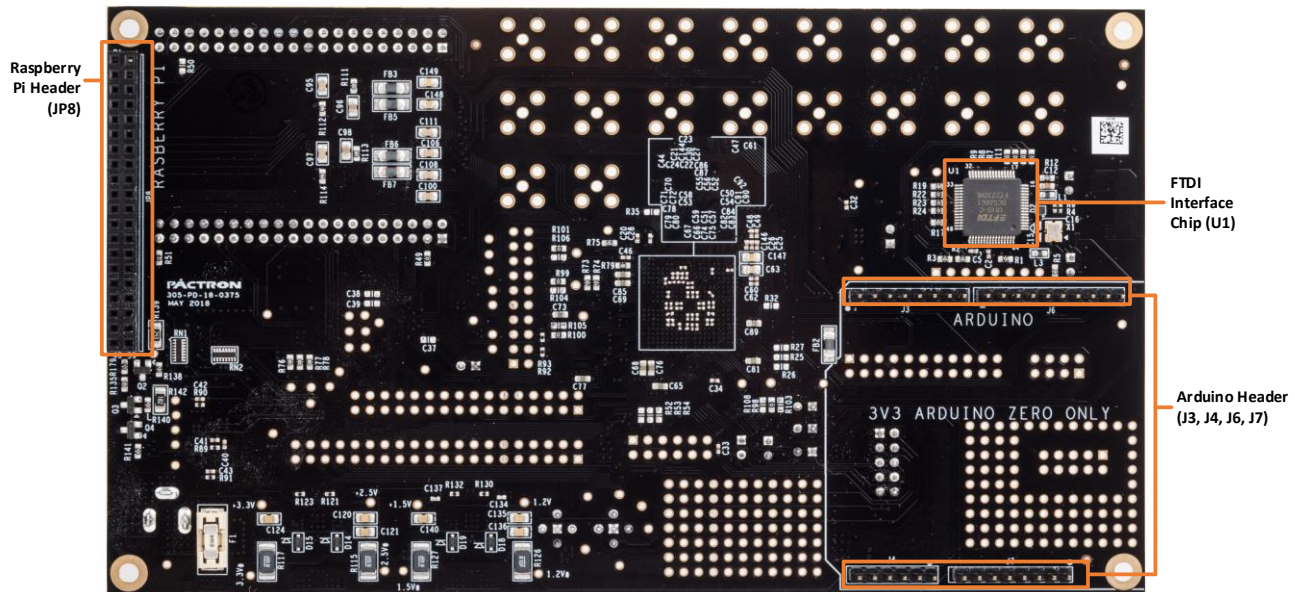


Figure 1.2. Bottom View of ECP5 Evaluation Board

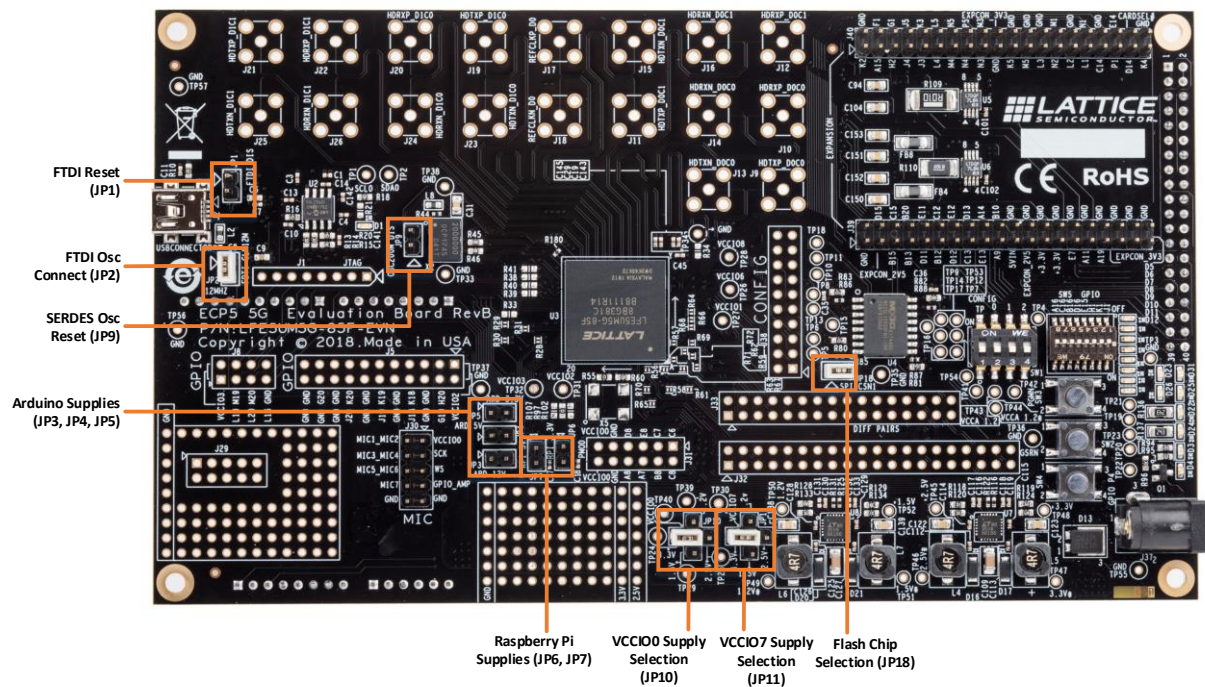


Figure 1.3. Top View of ECP5 Evaluation Board – Jumper Locations

1.2. Features

- ECP5-5G FPGA (LFE5UM5G-85F-8BG381)
- General Purpose Input/Output (GPIO) breakout with Arduino, Raspberry Pi, Versa, PMOD, and MDC board interconnect
- 178 General purpose I/O, 20 differential pair I/O with on board termination, four 5G SERDES channels
- USB-B connection for device programming and Inter-Integrated Circuit (I²C) utility and ability to support Improved Inter-Integrated Circuit (I³C)
- On-board Boot Flash – 128 Mbit Serial Peripheral Interface (SPI) Flash, with Quad read feature
- Eight input DIP switches, three push buttons, and eight LEDs for demo purposes
- Lattice Diamond® programming support
- Multiple reference clock sources

Caution: The ECP5 Evaluation Board contains ESD-sensitive components. ESD safe practices should be followed while handling and using the development board.

1.3. ECP5 Device

The ECP5 Evaluation Board features the ECP5-5G in a 381-ball caBGA package. This ECP5-5G device, also referred to as LFE5UM5G-85F-8BG381, features 84,000 LUTs and 3744 kbits of embedded block RAM. This device offers a variety of features and programmability. For more information on the capabilities of ECP5™, see [ECP5 and ECP5-5G Family Data Sheet \(FPGA-DS-02012\)](#).

2. Applying Power to the Board

The ECP5 Evaluation Board has most of its power supplied by onboard regulators powered by an external 12 V power. In addition, the USB connection supplies 5 V to some components, and off board supplies can be used to supply the Raspberry Pi and Arduino headers. Jumpers or resistor installation/removal can be used to achieve several different power supply configurations. Refer to [Appendix A. ECP5 Evaluation Board Schematics](#) to see the details of these power supply options. [Figure 2.1](#) shows the high-level power supply architecture of the board. [Table 2.1](#) shows the voltage options available for the various VCCIO supplies.

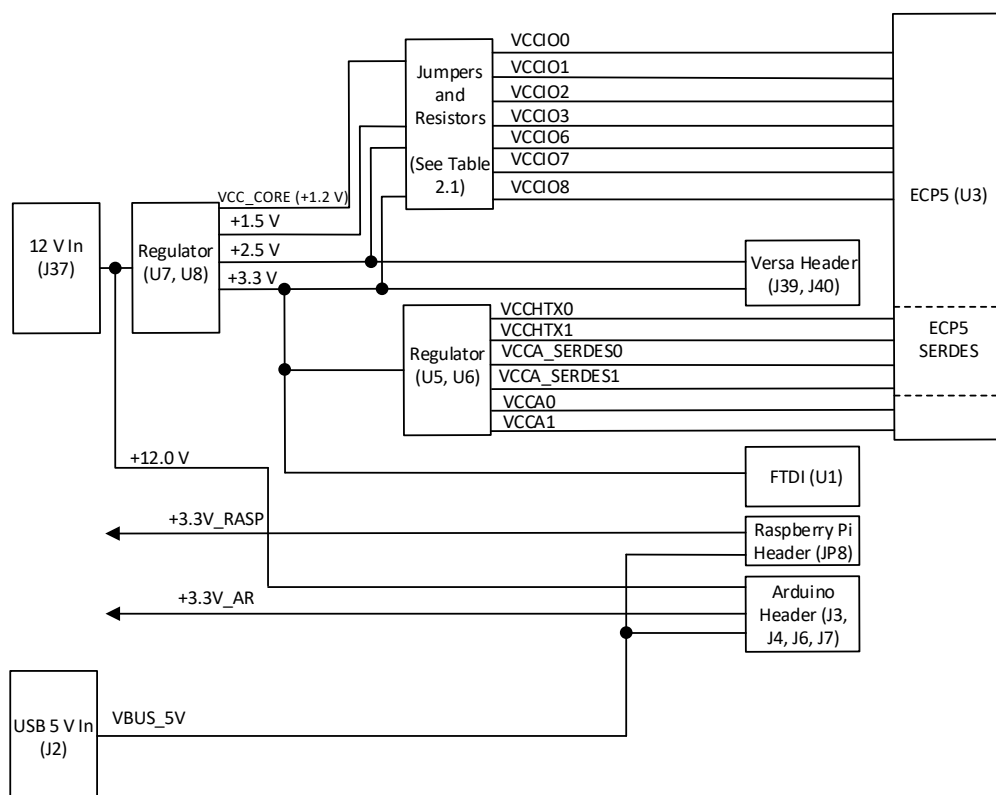


Figure 2.1. Board Power Supply

Table 2.1. ECP5 VCCIO Supply Options

VCCIO Bank	Selection	+3.3V	+2.5V	+3.3V_AR	+3.3V_RASP	+1.5V	VCC_CORE (+1.2V)
VCCIO0	Jumper (JP 10)	Default	Selectable	N/A	N/A	Selectable	Selectable
VCCIO1	Resistors	Selectable	Default	N/A	N/A	N/A	N/A
VCCIO2	Resistors	Default	Selectable	Selectable	N/A	N/A	N/A
VCCIO3	Resistors	Default	Selectable	N/A	Selectable	N/A	N/A
VCCIO6	Resistors	Default	Selectable	N/A	N/A	N/A	N/A
VCCIO7	Jumper (JP 11)	Default	Selectable	N/A	N/A	Selectable	Selectable
VCCIO8	Resistors	Default	Selectable	N/A	N/A	N/A	N/A

Warning: Only one option should be enabled for each ECP5 device I/O Bank. The implementation of these options can be found in [Figure A. 11](#).

3. Programming and I²C

The JTAG/SPI programming architecture and I²C interface of the ECP5 Evaluation Board is shown in [Figure 3.1](#).

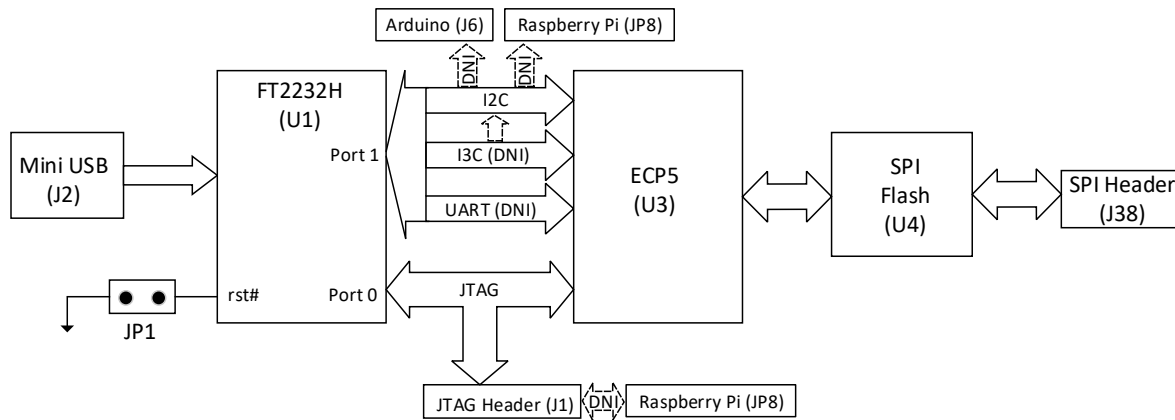


Figure 3.1. Configuration and I²C Architecture

3.1. JTAG Download Interface

The ECP5 Evaluation Board has a built-in download controller for programming the ECP5-5G device. It uses an FT2232H Future Technology Devices International (FTDI) part to convert USB to JTAG. To use the built-in download cable, connect the USB cable from the mini USB to your PC, with Diamond programming software installed. A mini USB to USB-A cable is included in the ECP5 Evaluation Kit. The USB hub on the PC detects the cable of the USB function on Port 0, making the built-in cable available for use with the Diamond programming software.

3.2. Alternate JTAG Download Interface

J1 is an 8-pin standalone JTAG header used with an external Lattice download cable that is available separately, when the FTDI part is disabled from the JTAG chain after setting the JP1 jumper. A USB download cable can be attached to the board using J1 to interface with the ECP5-5G. For details on the connection between the USB download cable and J1, refer to [Programming Cable User Guide \(FPGA-UG-02042\)](#).

J1 can also be used as the test point when USB to JTAG is working. Additionally, you can enable the JTAG access path through the Raspberry Pi header (JP8) for customer applications. This is done by connecting the JP8 header to the J1 header through some onboard resistors. The JTAG connections between J1 and JP8 are listed in [Table 3.1](#).

Table 3.1. JTAG Connections


J1 Pin Number	JTAG Signal Name	ECP5-5G Ball Location for JTAG	Raspberry Pi Header (JP8) Pin Number	J1 to JP8 Isolation (Assembly)	Raspberry Pi GPIO
1	VCCIO8	—	—	—	—
2	TDO	V4	10	R39 (DNI)	IO15
3	TDI	R5	11	R40 (DNI)	IO17
4	—	—	—	—	—
5	—	—	—	—	—
6	TMS	U5	12	R41 (DNI)	IO18
7	GND	—	—	—	—
8	TCK	T5	8	R38 (DNI)	IO14

3.3. JTAG to MSPI Pass-through Interface

The download controller can also access the JTAG to MSPI pass-through circuit that allows the slave SPI Flash to be erased, programmed, and read with Diamond Programmer.

3.4. SPI Flash Device Selection in Programmer

The Flash device on this board is a Macronix MX25L12833F one. This device is supported in Lattice Diamond 3.10 SP3 and later. If the Flash is to be programmed in an earlier version of Lattice Diamond, it needs to be added as a custom device. Follow the steps below to add a custom device to Lattice Diamond.

1. From Lattice Diamond main GUI, choose **Tools > Programmer**. Or click the **Programmer** icon () from the toolbar to invoke Lattice Diamond Programmer.
2. In **Programmer**, choose **Edit > Custom Devices**. The **Edit Custom Device** dialog pops up (Figure 3.2).

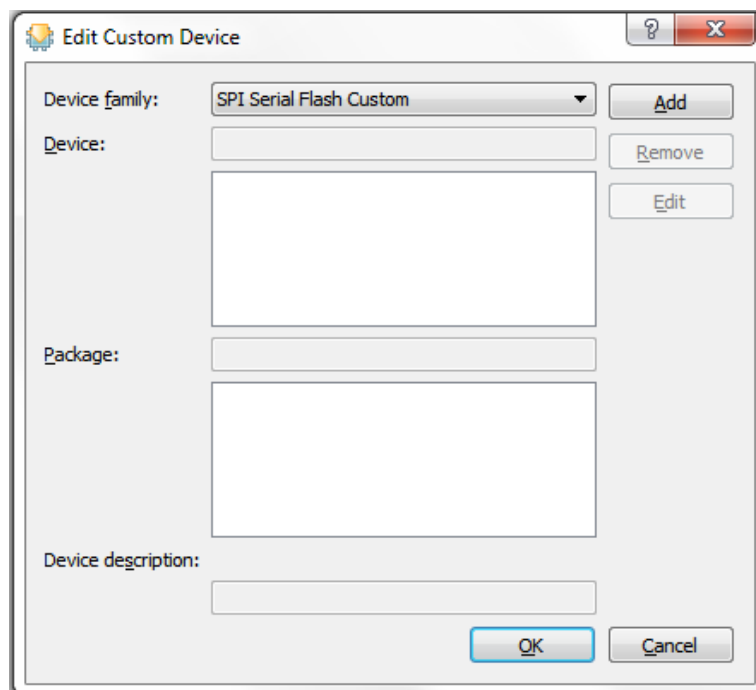


Figure 3.2. Edit Custom Device Dialog

3. Choose **SPI Serial Flash Custom** from the drop-down menu of the **Device family** area. Click **Add**.
4. In the pop-up **Custom SPI Flash Device** dialog, enter contents in the six fields, as shown in Figure 3.3. Check the **Protection options on** option. Click **OK**.

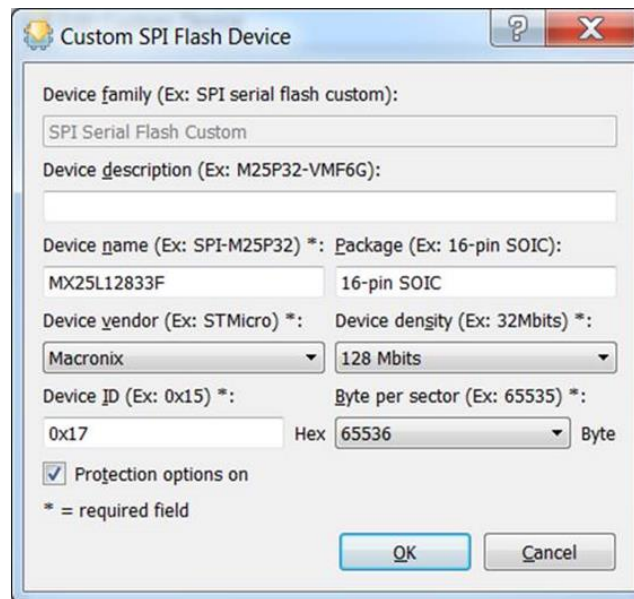


Figure 3.3. Custom SPI Flash Device Dialog

5. In **Programmer**, choose **Edit > Device Properties**.
6. From the pop-up **Device Properties** dialog, choose **SPI Serial Flash Custom** from the **Family:** field of the **SPI Flash Options** area (as shown in Figure 3.4). You can find the custom device added.

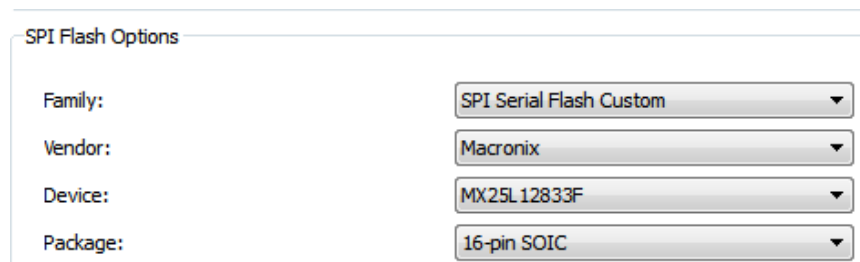


Figure 3.4. SPI Flash Options

You can proceed the Flash device programming as instructed in [ECP5 and ECP5-5G sysCONFIG Usage Guide \(FPGA-TN-02039\)](#).

3.5. Other JTAG Configuration Pins

The ECP5 Evaluation Board provides test points for other JTAG configuration pins, as shown in [Table 3.2](#).

Table 3.2. Other JTAG Signals

Signal Name	ECP5-5G Ball Location	Test Point
PROGRAMN	W3	TP21
INITN	V3	TP20
DONE	Y3	TP22

For more information on ECP5 JTAG and SPI programming, refer to [ECP5 and ECP5-5G sysCONFIG Usage Guide \(FPGA-TN-02039\)](#).

3.6. Configuration Modes

The ECP5 can be configured in Master SPI, Slave SPI, SCM, JTAG, and SPCM modes. These modes can be selected using the CFGMDN switches provided on the board (detailed in the [DIP Switch](#) section and [ECP5 and ECP5-5G sysCONFIG Usage Guide \(FPGA-TN-02039\)](#). [Table 3.3](#) below details the CFGMDN settings that are used to select individual configuration modes.

Table 3.3. CFGMDN Mode Settings

Configuration Mode	Bus Size	Options	Clock	CFGMDN2	CFGMDN1	CFGMDN0
SSPI	1	—	CCLK	0	0	1
MSPI	1	Serial (SPI_Serial)	MCLK	0	1	0
	2	Dual (SPI_Dual)				
	4	Quad (SPI_Quad)				
	1, 2, 4	Dual-Boot				
	1, 2, 4	Multi-Boot				
SCM (Slave_Serial)	1	—	CCLK	1	0	1
SPCM (Slave_Parallel)	8	—	CCLK	1	1	1

4. ECP5 Clock Sources

The ECP5 Evaluation Board has three options for the ECP5-5G clock sources:

- 12 MHz from U1 FTDI Chip.
- 200 MHz SERDES clock from X2 Differential Oscillator. For different user applications, the X2 footprint accepts commonly-available devices of different frequencies.
- X5 oscillator for LVDS source sync clock. X5 is not populated by default. For convenience, a 50 MHz device is specified in the [ECP5 Evaluation Board Bill of Materials](#) section, Item 127. Other frequency devices may be mounted as desired.

The 12 MHz clock from the FT2232H FTDI device requires JP2 to be installed to connect the 12 MHz clock signal to the ECP5 device I/O. JP1 should not be installed to enable U1.

Table 4.1. Clock Sources

Clock Frequency	Signal Name	ECP5 Ball Location	Clock Source	Comments
12 MHz ¹	12 MHz	A10	U1	JP2 installed. JP1 removed.
200 MHz	200 MHz/200 MHz_n	Y19/ W20	X2	JP9 added to disable.
50 MHz	50 MHz_OSC	B11	X5 (DNI)	50 MHz_OSC_EN (C11) to enable/disable.

Note:

1. The 12 MHz clock can only function when the USB cable is connected to the board.

5. Headers and Test Connections

This section describes the ECP5 Evaluation Board headers and test connections.

5.1. Versa Headers

The board provides two headers – J39 and J40 which can be used for expansion or as general purpose I/O connections.

Table 5.1. Versa J39 Header Pin Connections

J39 Pin Number	Signal Name	ECP5-5G-85 Ball
1	GND	—
2	NC	—
3	EXPCON_2V5 ¹	—
4	D15	D15
5	B15	B15
6	C15	C15
7	B13	B13
8	B20	B20
9	D11	D11
10	E11	E11
11	B12	B12
12	C12	C12
13	D12	D12
14	E12	E12
15	C13	C13
16	D13	D13
17	E13	E13
18	A14	A14
19	A9	A9
20	B10	B10
21	5VIN	—
22	GND	—
23	EXPCON_2V5 ¹	—
24	GND	—
25	+3.3V	—
26	GND	—
27	+3.3V	—
28	GND	—
29	E7	—
30	GND	—
31	A11	A11
32	GND	—
33	A19	A19
34	GND	—
35	EXPCON_3V3 ¹	—
36	GND	—

J39 Pin Number	Signal Name	ECP5-5G-85 Ball
37	EXPCON_3V3 ¹	—
38	GND	—
39	EXPCON_3V3 ¹	—
40	GND	—

Note:

1. Signal is connected to power source through removable resistor.

Table 5.2. Versa J40 Header Pin Connections

J40 Pin Number	Signal Name	ECP5-5G-85 Ball
1	K2	K2
2	GND	—
3	A15	A15
4	F1	F1
5	H2	H2
6	G1	G1
7	J4	J4
8	J5	J5
9	J3	J3
10	K3	K3
11	L4	L4
12	L5	L5
13	M4	M4
14	N5	N5
15	N4	N4
16	P5	P5
17	N3	N3
18	M3	M3
19	GND	—
20	EXPCON_3V3 ¹	—
21	K5	K5
22	GND	—
23	M5	M5
24	GND	—
25	L3	L3
26	GND	—
27	N2	N2
28	M1	M1
29	L2	L2
30	GND	—
31	L1	L1
32	N1	N1
33	C14	C14
34	GND	—
35	P1	P1

J40 Pin Number	Signal Name	ECP5-5G-85 Ball
36	E14	E14
37	D14	D14
38	CARDSEL# ¹	—
39	K4	K4
40	GND	—

Note:

1. Signal is connected to power source through removable resistor.

5.2. Arduino Board GPIO Headers

The board provides four headers – J3, J4, J6 and J7 for Arduino Zero board adaption or as general purpose I/O connections.

Table 5.3. Arduino J6 Pin Connections

J6 Pin Number	Signal Name	Arduino ZERO Board Signal	ECP5-5G-85 Ball	Comments
1	AR_IO8	8	K16	—
2	AR_IO9	9	J16	—
3	AR_SS_IO10	10	H17	—
4	AR_MOSI_IO11	11	J17	—
5	AR_MISO_IO12	12	H18	—
6	AR_SCK_IO13	13	H16	—
7	GND	GND	—	—
8	AR_AREF	AREF	G18	AR_AREF connection to AREF through R27, DNI by default.
9	AR_SDA	SDA	G16	Optional connection to SDA0 through R26, DNI by default.
10	AR_SCL	SCL	F17	Optional connection to SCL0 through R25, DNI by default.

Table 5.4. Arduino J3 Pin Connections

J3 Pin Number	Signal Name	Arduino ZERO Board Signal	ECP5-5G-85 Ball	Comments
1	AR_IO0	RX <- 0	F19	—
2	AR_IO1	TX -> 1	F20	—
3	AR_IO2	2	E20	—
4	AR_IO3	3	E19	—
5	AR_IO4	4	D19	—
6	AR_IO5	5	D20	—
7	AR_IO6	6	C20	—
8	AR_IO7	7	K17	—

Table 5.5. Arduino J7 Pin Connections

J7 Pin Number	Signal Name	Arduino ZERO Board Signal	ECP5-5G-85 Ball	Comments
1	AR_IO14	ATN	C18	—
2	NC	IOREF	—	—
3	AR_RESET	RESET	D17	Pin D17 should be set high by default. Avoid Arduino ZERO board in Reset status when connected.
4	+3.3V_AR	3.3 V	—	Jumper to 3.3 V power supply from Arduino ZERO board
5	VBUS_5V	5 V	—	Jumper to 5 V USB power
6	GND	GND	—	—
7	GND	GND	—	—
8	+12.0V	VIN	—	Jumper to +12.0V power supply from Arduino ZERO board

Table 5.6. Arduino J4 Pin Connections

J4 Pin Number	Signal Name	Arduino ZERO Board Signal	ECP5-5G-85 Ball	Comments
1	AR_AD0	A0	F18	Used as GPIO in digital mode
2	AR_AD1	A1	E17	Used as GPIO in digital mode
3	AR_AD2	A2	E18	Used as GPIO in digital mode
4	AR_AD3	A3	D18	Used as GPIO in digital mode
5	AR_AD4	A4	F16	Used as GPIO in digital mode
6	AR_AD5	A5	E16	Used as GPIO in digital mode

Note: For [Table 5.3](#), [Table 5.4](#), [Table 5.5](#), and [Table 5.6](#), if the jumper to VBUS_5V is installed, a 5 V power can be supplied from either the Arduino board or the ECP5 Evaluation Board. With the jumper removed, both boards need their own 5 V power.

5.3. Raspberry Pi Board GPIO Header

The ECP5 Evaluation Board provides a 40-pin receptacle which is compatible with the GPIO header of Raspberry Pi 2/3 serial models, or can be used for general purpose I/O.

Table 5.7. Raspberry Pi JP8 Header Pin Connections

JP8 Pin Number	Signal Name	ECP5-5G-85 Ball
1	+3.3V_RASP ¹	—
2	RASP_5V ²	—
3	RASP_IO02	T17
4	RASP_5V ²	—
5	RASP_IO03	U16
6	GND	—
7	RASP_IO04	U17
8	RASP_IO14	P18
9	GND	—
10	RASP_IO15	N20
11	RASP_IO17	N19
12	RASP_IO18	T16

JP8 Pin Number	Signal Name	ECP5-5G-85 Ball
13	RASP_IO27	M18
14	GND	—
15	RASP_IO22	N17
16	RASP_IO23	P17
17	3.3V_RASP ¹	—
18	RASP_IO24	M17
19	RASP_IO10	U20
20	GND	—
21	RASP_IO09	T19
22	RASP_IO25	N18
23	RASP_IO11	R20
24	RASP_IO08	U19
25	GND	—
26	RASP_IO07	R18
27	RASP_ID_SD	L18
28	RASP_ID_SC	L17
29	RASP_IO05	U18
30	GND	—
31	RASP_IO06	T18
32	RASP_IO12	T20
33	RASP_IO13	P20
34	GND	—
35	RASP_IO19	R17
36	RASP_IO16	P19
37	RASP_IO26	N16
38	RASP_IO20	P16
39	GND	—
40	RASP_IO21	R16

Notes:

1. A 3.3 V power is supplied from Raspberry Pi board.
2. A 5 V power can come from either the Raspberry Pi board or the ECP Evaluation Board (via USB) when jumper JP7 is installed. When jumper JP7 is not installed, both boards need their own 5 V power.

When connecting directly to a Raspberry Pi board, depending on the individual setup, there may need to be an adapter to avoid mechanical interference between the two boards. A generic 40-pin (2×20), 100-mil spacing header extender serves this function. Alternately, the two boards can be connected by a length of ribbon cable with 2×20 connectors on either end.

5.4. GPIO Headers

There are two types of general purpose I/O headers: simple general purpose headers, and differential general purpose headers. The differential headers have associated termination resistors for each differential I/O pair.

Table 5.8. J5 Header Pin Connections

J5 Pin Number	Signal Name	ECP5-5G-85 Ball	Differential Pair
1	VCCIO2	—	—
2	VCCIO2	—	—
3	H20	H20	H20/G19
4	G19	G19	H20/G19
5	GND	—	—
6	GND	—	—
7	K18	K18	K18/J18
8	J18	J18	K18/J18
9	GND	—	—
10	GND	—	—
11	K19	K19	K19/J19
12	J19	J19	K19/J19
13	GND	—	—
14	GND	—	—
15	K20	K20	K20/J20
16	J20	J20	K20/J20
17	GND	—	—
18	GND	—	—
19	G20	G20	—
20	GND	—	—
21	GND	—	—
22	GND	—	—

Table 5.9. J8 Header Pin Connections

J8 Pin Number	Signal Name	ECP5-5G-85 Ball
1	VCCIO3	—
2	VCCIO3	—
3	L19	L19
4	M19	M19
5	L20	L20
6	M20	M20
7	L16	L16
8	GND	—

Table 5.10. J32 Header Pin Connections

J32 Pin Number	Signal Name	ECP5-5G-85 Ball	Differential Pair
1	NC	—	—
2	VCCIO7	—	—
3	GND	—	—
4	GND	—	—
5	A5	A5	A5/A4
6	A4	A4	A5/A4
7	GND	—	—
8	GND	—	—
9	C5	C5	C5/B5
10	B5	B5	C5/B5
11	GND	—	—
12	GND	—	—
13	B4	B4	B4/C4
14	C4	C4	B4/C4
15	GND	—	—
16	GND	—	—
17	B3	B3	B3/A3
18	A3	A3	B3/A3
19	GND	—	—
20	GND	—	—
21	D5	D5	D5/E4
22	E4	E4	D5/E4
23	GND	—	—
24	GND	—	—
25	D3	D3	D3/C3
26	C3	C3	D3/C3
27	GND	—	—
28	GND	—	—
29	E3	E3	E3/F4
30	F4	F4	E3/F4
31	GND	—	—

J32 Pin Number	Signal Name	ECP5-5G-85 Ball	Differential Pair
32	GND	—	—
33	F5	F5	F5/E5
34	E5	E5	F5/E5
35	GND	—	—
36	GND	—	—
37	B1	B1	B1/A2
38	A2	A2	B1/A2
39	GND	—	—
40	GND	—	—

Table 5.11. J33 Header Pin Connections

J33 Pin Number	Signal Name	ECP5-5G-85 Ball	Differential Pair
1	NC	—	—
2	VCCIO7	—	—
3	GND	—	—
4	GND	—	—
5	C2	C2	C2/B2
6	B2	B2	C2/B2
7	GND	—	—
8	GND	—	—
9	D1	D1	D1/C1
10	C1	C1	D1/C1
11	GND	—	—
12	GND	—	—
13	E1	E1	E1/D2
14	D2	D2	E1/D2
15	GND	—	—
16	GND	—	—
17	G5	G5	G5/H4
18	H4	H4	G5/H4
19	GND	—	—
20	GND	—	—
21	H3	H3	H3/H5
22	H5	H5	H3/H5
23	GND	—	—
24	GND	—	—
25	F3	F3	F3/G3
26	G3	G3	F3/G3
27	GND	—	—
28	GND	—	—
29	E2	E2	E2/F2
30	F2	F2	E2/F2
31	GND	—	—

J33 Pin Number	Signal Name	ECP5-5G-85 Ball	Differential Pair
32	GND	—	—

5.5. Microphone Expansion Header

The J30 header can be used as GPIO, or can mate to the 8:1 Microphone Aggregator Board. It is placed with a non-connected header in close proximity to allow the physical pairing of the boards.

Table 5.12. J30 Header Pin Connections

J30 Pin Number	Signal Name	ECP5-5G-85 Ball
1	VCCIO0	—
2	I2S_SD_mic1_mic2_card_B6	B6
3	I2S_SCK_mic_D9	D9
4	I2S_SD_mic3_mic4_C9	C9
5	I2S_WS_mic_E9	E9
6	I2S_SD_mic5_mic6_D10	D10
7	GPIO_amp_A6	A6
8	I2S_SD_mic7_E10	E10
9	GND	—
10	GND	—

5.6. PMOD Header

The J31 header can be used as GPIO or as a connector to a PMOD interface.

Table 5.13. J31 Header Pin Connections

J31 Pin Number	Signal Name	ECP5-5G-85 Ball
1	C6	C6
2	C7	C7
3	E8	E8
4	D8	D8
5	GND	—
6	VCCIO0	—
7	C8	C8
8	B8	B8
9	A7	A7
10	A8	A8
11	GND	—
12	VCCIO0	—

5.7. JTAG Header

The J1 header is used to access the JTAG port of the ECP5 or the Raspberry Pi interface.

Table 5.14. J1 Header Pin Connections

J1 Pin Number	Signal Name	ECP5-5G-85 Ball
1	VCCIO8	—
2	TDO	V4
3	TDI	R5
4	NC	—
5	NC	—
6	TMS	U5
7	GND	—
8	TCK	T5

5.8. Parallel Configuration Header

The J38 header is used to access the SPI port of the ECP5 or the Raspberry Pi interface.

Table 5.15. J38 Header Pin Connections

J38 Pin Number	Signal Name	ECP5-5G-85 Ball
1	PROGRAMN	W3
2	FLASH_CS	R2 (with jumper)
3	WRITEN	T3
4	DONE	Y3
5	DQ7	R1
6	INITN	V3
7	DQ6	T1
8	DQ1_MISO	V2
9	DQ5_MISO2	U1
10	DQ0_MOSI	W2
11	DQ4_MOSI2	V1
12	CSN	T2
13	DQ3	W1
14	CS1N	U2
15	DQ2	Y2
16	BUSY_CSSPIN	R2
17	CCLK_MCLK_SCK	U3
18	DOUT_CSON	R3
19	GND	—
20	VCCIO8	—

6. Control Buses - I²C, I³C, UART, and SPI

This section describes the topology of the various configuration and communication buses.

6.1. I²C and I³C Topology

The ECP5 Evaluation Board uses the I²C bus to support ECP5 configuration, and optionally to support Arduino and Raspberry Pi communication. The global I²C bus has the signal names SDA0 and SCL0 and they are routed close to the devices and headers as shown in Figure 3.1 and in more detail in Figure 6.1.

To support the Arduino and Raspberry Pi, each header or device is connected to a dedicated ECP5 GPIO bank with a direct local I²C bus. Each local I²C bus can optionally connect to the global I²C bus through resistors. The local I²C connections are summarized in Table 6.1.

Table 6.1. I²C Global Bus Connections

ECP5 Bank	Component (Reference)	Header Pin	ECP5-5G-85 Ball	Local Signal Name (Global I ² C Signal)	Resistor
2	Arduino header (J6)	9	G16	AR_SDA (SDA0)	R26 (DNI)
		10	F17	AR_SCL (SCL0)	R25 (DNI)
3	Raspberry Pi header (JP8)	27	L18	RASP_ID_SD (SDA0)	R33 (DNI)
		28	L17	RASP_ID_SC (SCL0)	R32 (DNI)

The board also has the option to switch to an I³C interface by removing the installed 2.2 kΩ I²C pull-up resistors (R18 and R19) and installing I³C resistors (R52 at 2.2 kΩ, R53 at 100 kΩ, or R54 at 100 kΩ), as shown in Figure 6.1.

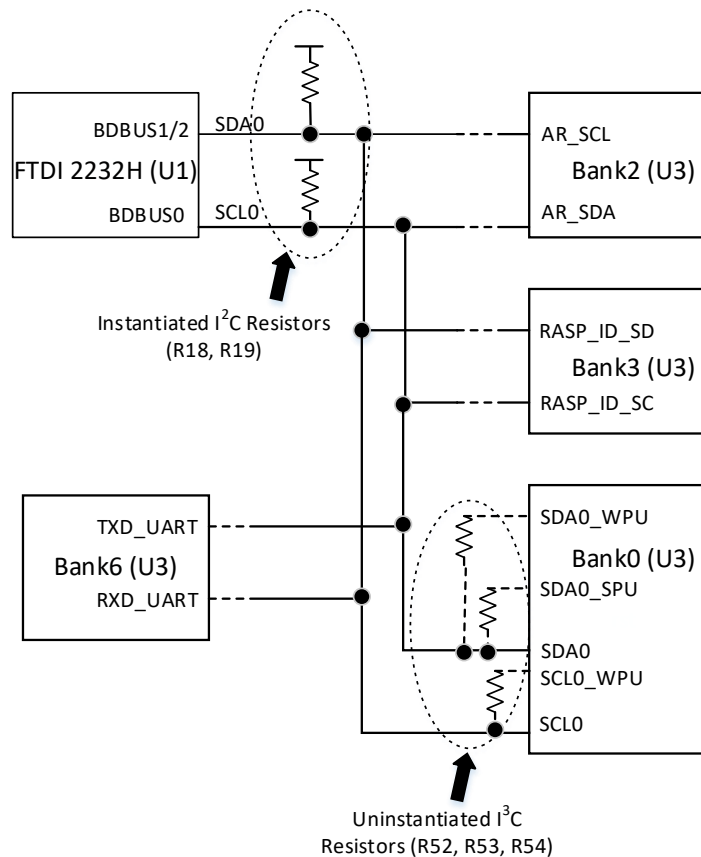


Figure 6.1. I²C Architecture, I³C, and UART Options

6.2. UART Topology

The board provides support for UART configuration by providing an uninstalled connection between the FTDI and ECP5. Two 0 Ω resistors (R34 and R35) can be installed to connect Port 1 to two general purpose I/Os (PL92A/P2 and PL92C/P3) in Bank 6, as shown in [Figure 6.1](#).

6.3. SPI Topology

6.3.1. SPI Configuration


One of the major functions of SPI connections on the board is to support ECP5 configuration from the SPI Flash or the Parallel Configuration Header. The ECP5 Evaluation Board can support both Master SPI (MSPI) and Slave SPI (SSPI) modes for ECP5 configuration. [Figure 6.2](#) from the schematics show the connections between the header, Flash chip, and FPGA.

Table 6.2. ECP5 SPI Connections

Signal Name	ECP5-5G-85 Ball	Parallel Configuration Header Pin	MSPI Mode Direction	SSPI Mode Direction
CCLK_MCLK_SCK	U3	17	Output	Input
DQ0_MOSI	W2	10	Output	Input
DQ1_MISO	V2	8	Input	Output
BUSY_CSSPIN	R2	16	Output	Not used
DQ2	Y2	15	Input	Not used
DQ3	W1	13	Input	Not used

6.3.2. SPI Flash Access

Onboard SPI Flash memory can be used to store the ECP5 configuration data in either External or Dual Boot mode. It can also store customer data in certain applications. The ECP5 device includes the JTAG to MSPI pass-through circuit that allows the slave SPI Flash to be erased, programmed, and read with Diamond Programmer. For detailed information on JTAG to MSPI pass-through for slave SPI Flash access, refer to [ECP5 and ECP5-5G sysCONFIG Usage Guide \(FPGA-TN-02039\)](#).

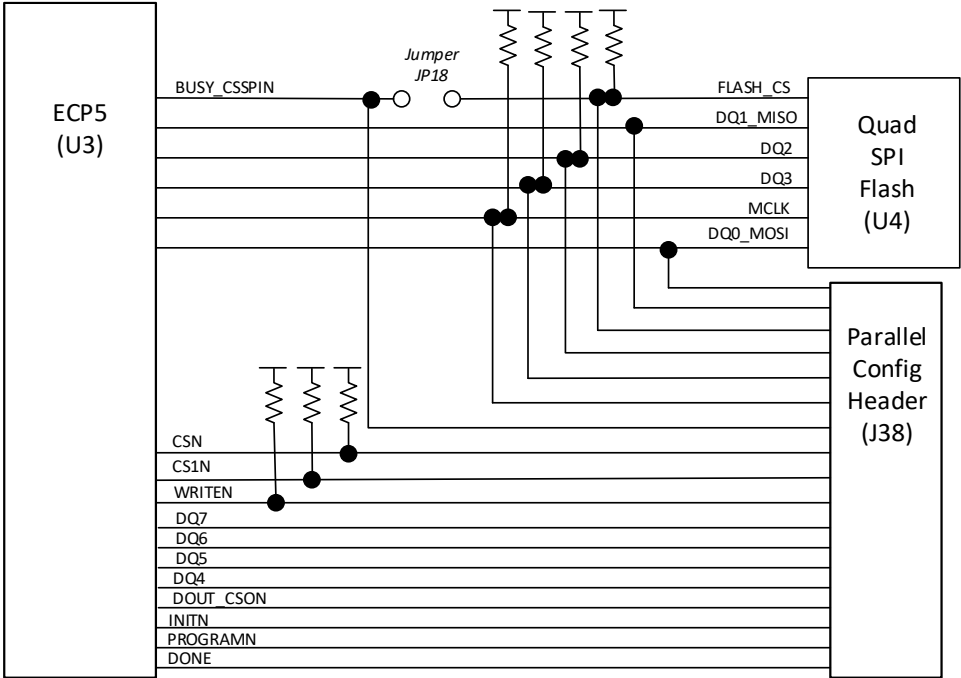

Note: See schematics for complete INITN, PROGRAMN, and DONE connections.

Figure 6.2. SPI Interface

7. LEDs and Switches

This section describes the ECP5 Evaluation Board LEDs and switches that can be used in demo and customer designs.

7.1. DIP Switch

Eight ECP5 pins are connected to the SW5 DIP switch to allow for manually actuated inputs to the FPGA. One side of each switch is connected to GPIOs within the VCCIO6 and VCCIO1 bank and pulled up through 4.7 kΩ resistors. The other side is grounded. The designated pins are connected as shown in [Table 7.1](#).

Table 7.1. Eight-Position DIP Switch Signals

Signal Name	ECP5-5G-85 Ball	ECP5-5G-85 Bank	SW5 DIP Switch Position
SWITCH1	J1	6	1
SWITCH2	H1	6	2
SWITCH3	K1	6	3
SWITCH4	E15	1	4
SWITCH5	D16	1	5
SWITCH6	B16	1	6
SWITCH7	C16	1	7
SWITCH8	A16	1	8

Note: Silkscreen for SWITCH2 and SWITCH3 may be swapped on some boards. Mapping shown in the table is correct.

7.2. Configuration Mode Switch

A DIP switch is provided to allow the selection of the configuration mode between SSPI, MSPI, SCM, and SPCM as specified in [ECP5 and ECP5-5G sysCONFIG Usage Guide \(FPGA-TN-02039\)](#). [Table 7.2](#) lists the connectivity of this switch (SW1).

Table 7.2. CFGMDN Switch Signals

Signal Name	Functional Name	ECP5-5G-85 Ball	ECP5-5G-85 Bank	SW1 DIP Switch Position
CFG0	CFGMDN0	U4	6	2
CFG1	CFGMDN1	T4	6	3
CFG2	CFGMDN2	R4	6	4

7.3. General Purpose Push Buttons

The ECP5 Evaluation Board provides three push button switches – SW2, SW3 and SW4 for demos and user applications. Two of the buttons control pre-defined functional pins, and the third is generic. Pressing these buttons drives a logic level “0” to the corresponding I/O pins.

Table 7.3. Push Button Switch Signals

Signal Name	ECP5-5G-85 Ball	Push Button Reference	Logic Level at Button Pressed
GSRN	G2	SW2	0
PROGRAMN	W3	SW3	0
BUTTON_1	P4	SW4	0

SW3 is used as a PROGRAMN push button to trigger the configuration process without power cycle. For detailed information on PROGRAMN, refer to [ECP5 and ECP5-5G sysCONFIG Usage Guide \(FPGA-TN-02039\)](#). SW2 is intended to be used as a global set/reset pin when active low, but can be substituted for another function if the user desires. SW4 can be used as a generic input.

7.4. General Purpose LEDs

The ECP5 Evaluation Board provides eight red LEDs that are connected to I/Os within Bank 1. The LEDs are lighted when the output is driven LOW.

Table 7.4. General Purpose LED Signals

Signal Name	ECP5-5G-85 Ball	ECP5-5G-85 Bank
LED0	A13	1
LED1	A12	1
LED2	B19	1
LED3	A18	1
LED4	B18	1
LED5	C17	1
LED6	A17	1
LED7	B17	1

7.5. Indicator LEDs

Table 7.5 lists various LEDs and describes their purpose.

Table 7.5. Various LED Signals

LEDs	Signal Name	ECP5-5G-85 Ball	Color	Purpose
D1	UART_ACT	P3	Green	If installed, lights in UART mode
D3	INITN	V3	Red	Lights if configuration error
D4	DONE	Y3	Green	Lights if successful configuration
D22	VCCA0	—	Green	Lights if voltage present
D23	+1.5V	—	Green	Lights if voltage present
D24	+1.2V/VCC_CORE	—	Green	Lights if voltage present
D25	+3.3V	—	Green	Lights if voltage present
D26	+12.0V	—	Blue	Lights if voltage present (external connection)
D31	+2.5V	—	Green	Lights if voltage present

8. Software Requirements

The following software versions are required to develop designs for the ECP5 Evaluation Board:

- Diamond 3.10
- Diamond Programmer 3.10
- LatticeMico System Development Tools


9. Storage and Handling

Static electricity can shorten the life span of electronic components. Observe these tips to prevent damage that can occur from electrostatic discharge:


- Use antistatic precautions such as operating on an antistatic mat and wearing an antistatic wristband.
- Store the development board in the provided packaging.
- Touch a metal USB housing to equalize voltage potential between you and the board.

10. Ordering Information

Table 10.1. Ordering Information

Description	Ordering Part Number	China RoHS Environment-Friendly Use Period (EFUP)
ECP5 Evaluation Board	LFE5UM5G-85F-EVN	

<h1>ECP5-5G Evaluation Board</h1>	
<h2>Rev - B</h2>	
01 - Title page	
02 - Block diagram	
03 - USB Interface	
04 - Arduino Header (BANK2)	
05 - Raspberry Pi (BANK3)	
06 - SERDES SMA	
07 - IO Breakout (BANK0, 1, 6)	
08 - IO Breakout (BANK7, Differential Pairs)	
09 - Configuration	
10 - Power Decoupling and LEDs	
11 - Power Hookup	
12 - Power Regulators	



Lattice Semiconductor Applications
Email: techsupport@latticesemi.com
Phone (503) 268-8001 -or- (800) LATTICE

Title		
Title page		
Size B	Project ECP5-5G Evaluation Board	Schematic Rev 0.1
Date: Wednesday, May 16, 2018	Sheet 1	of 12

32

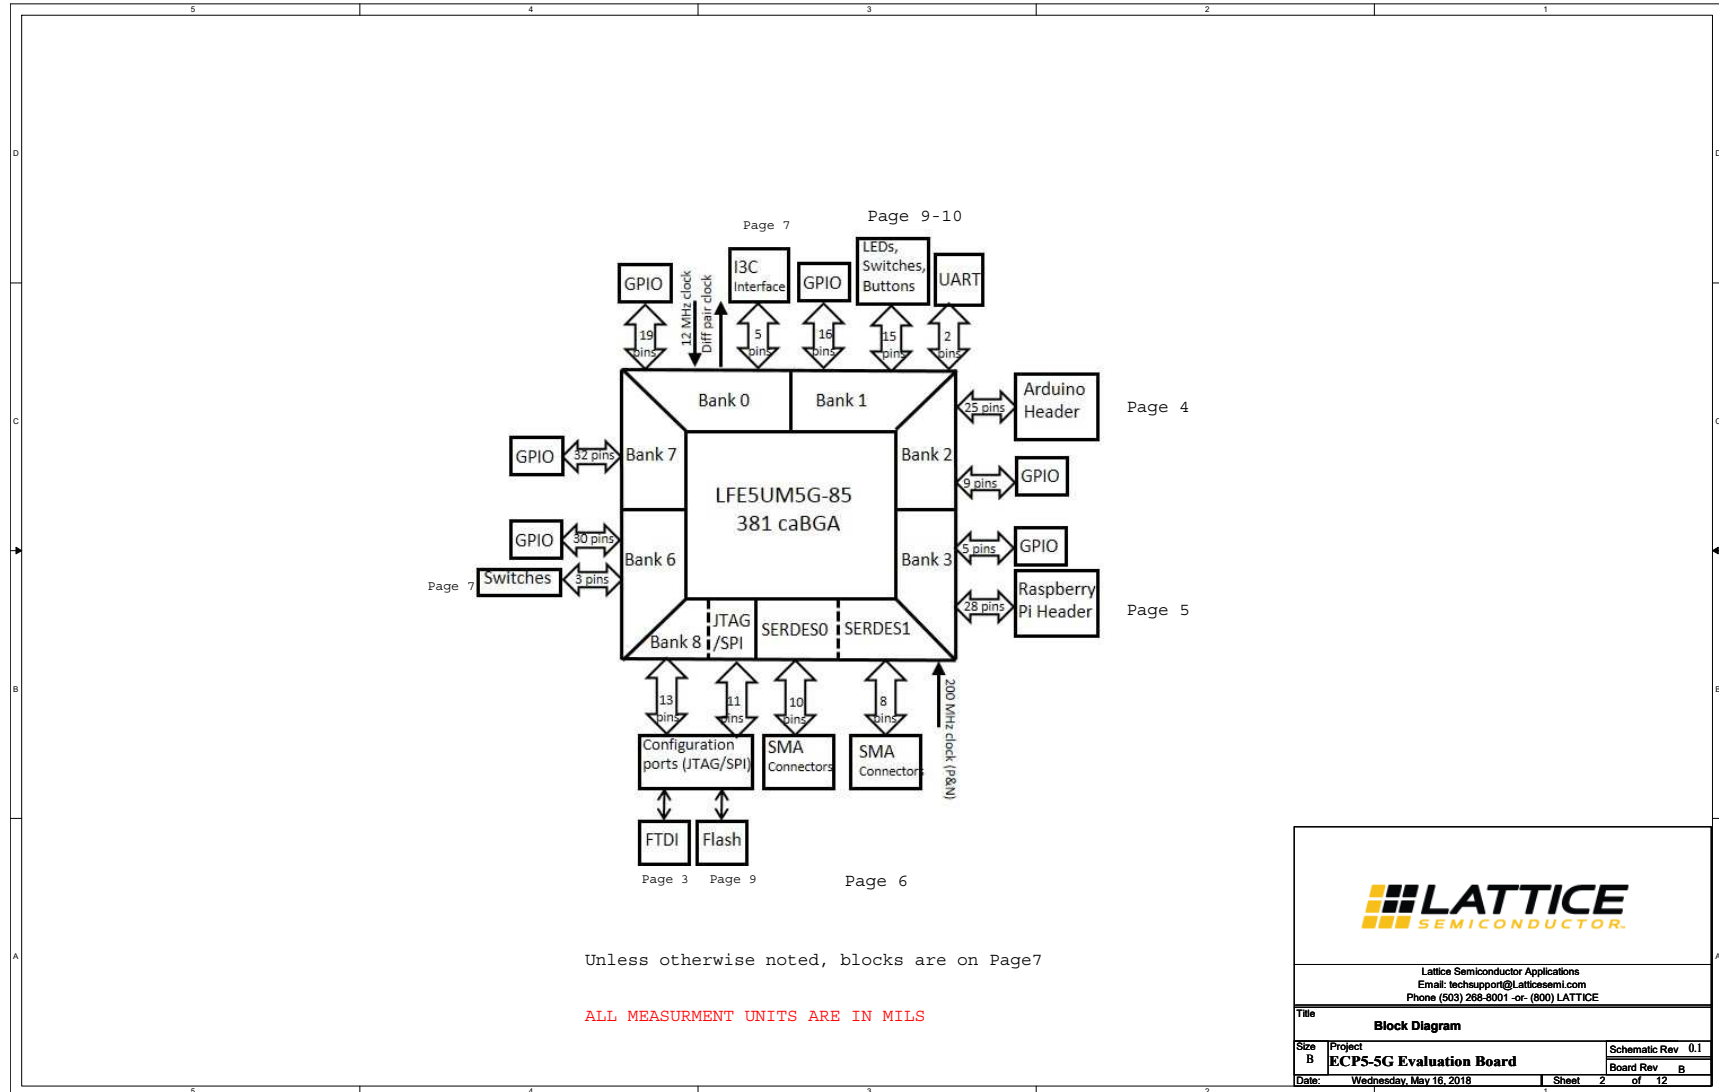


Figure A. 2. Block Diagram

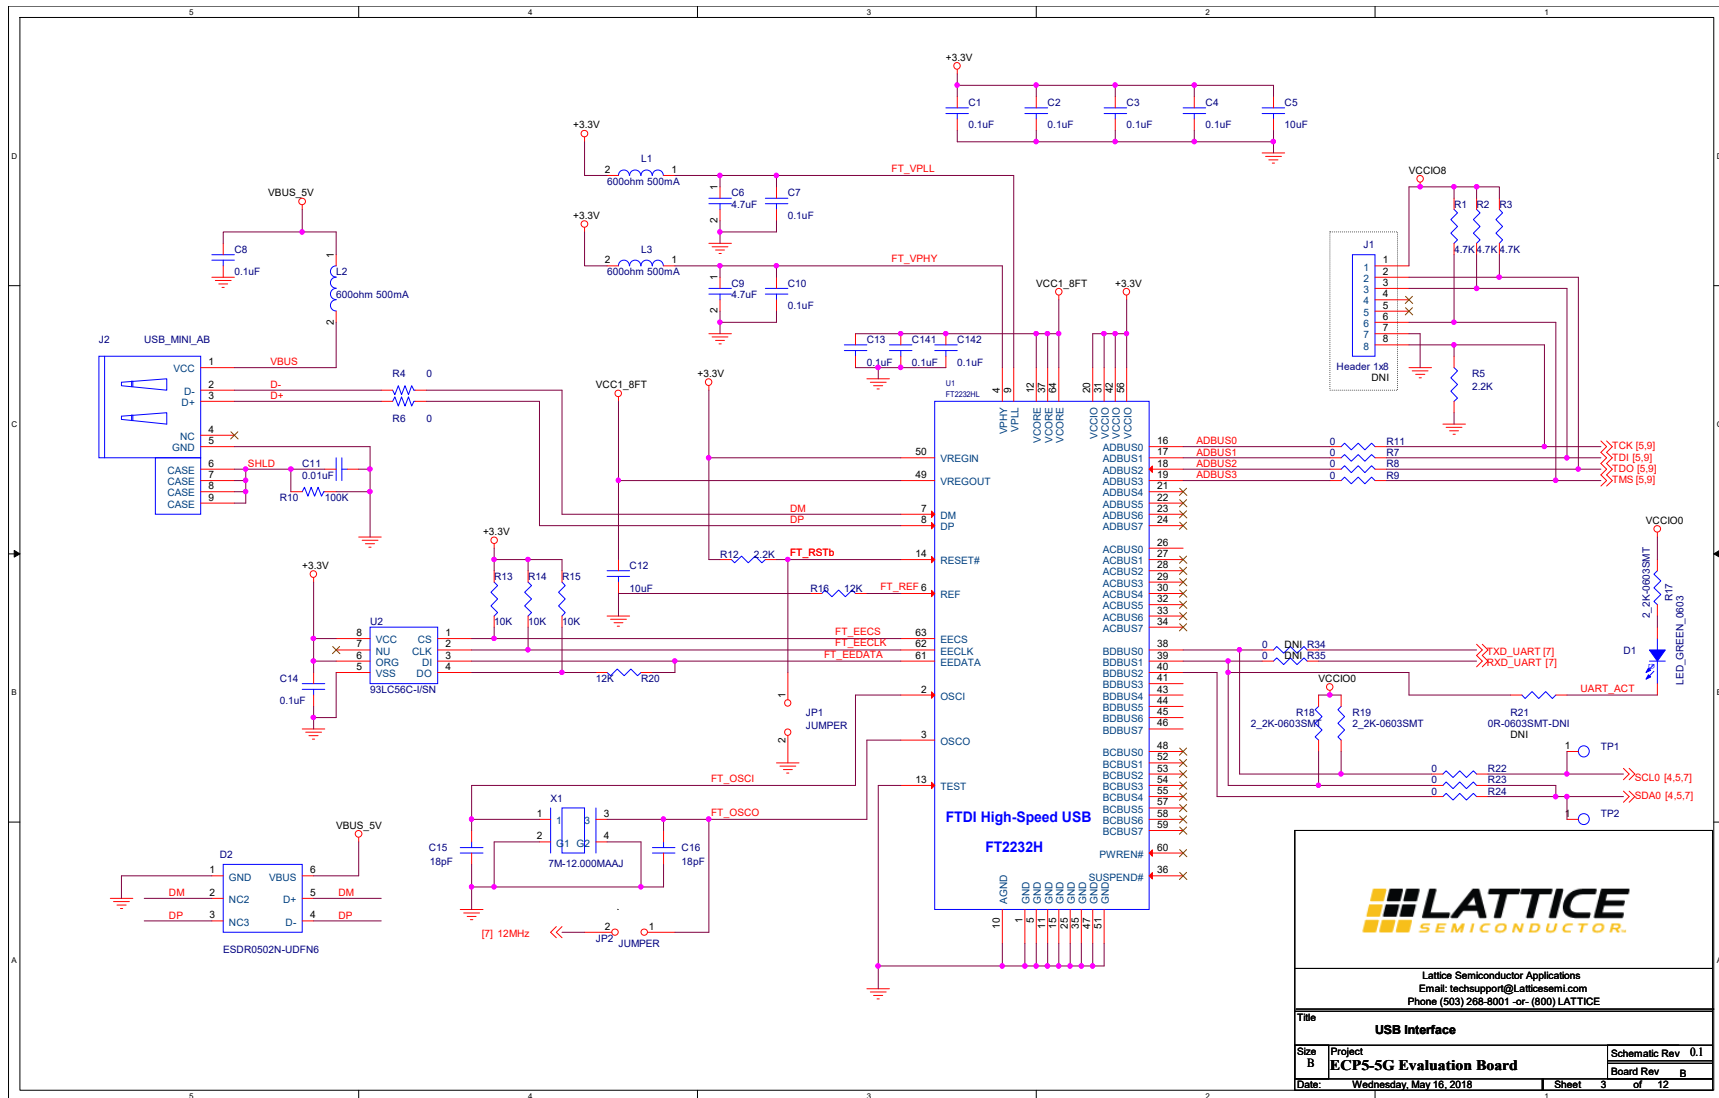


Figure A. 3. USB Interface

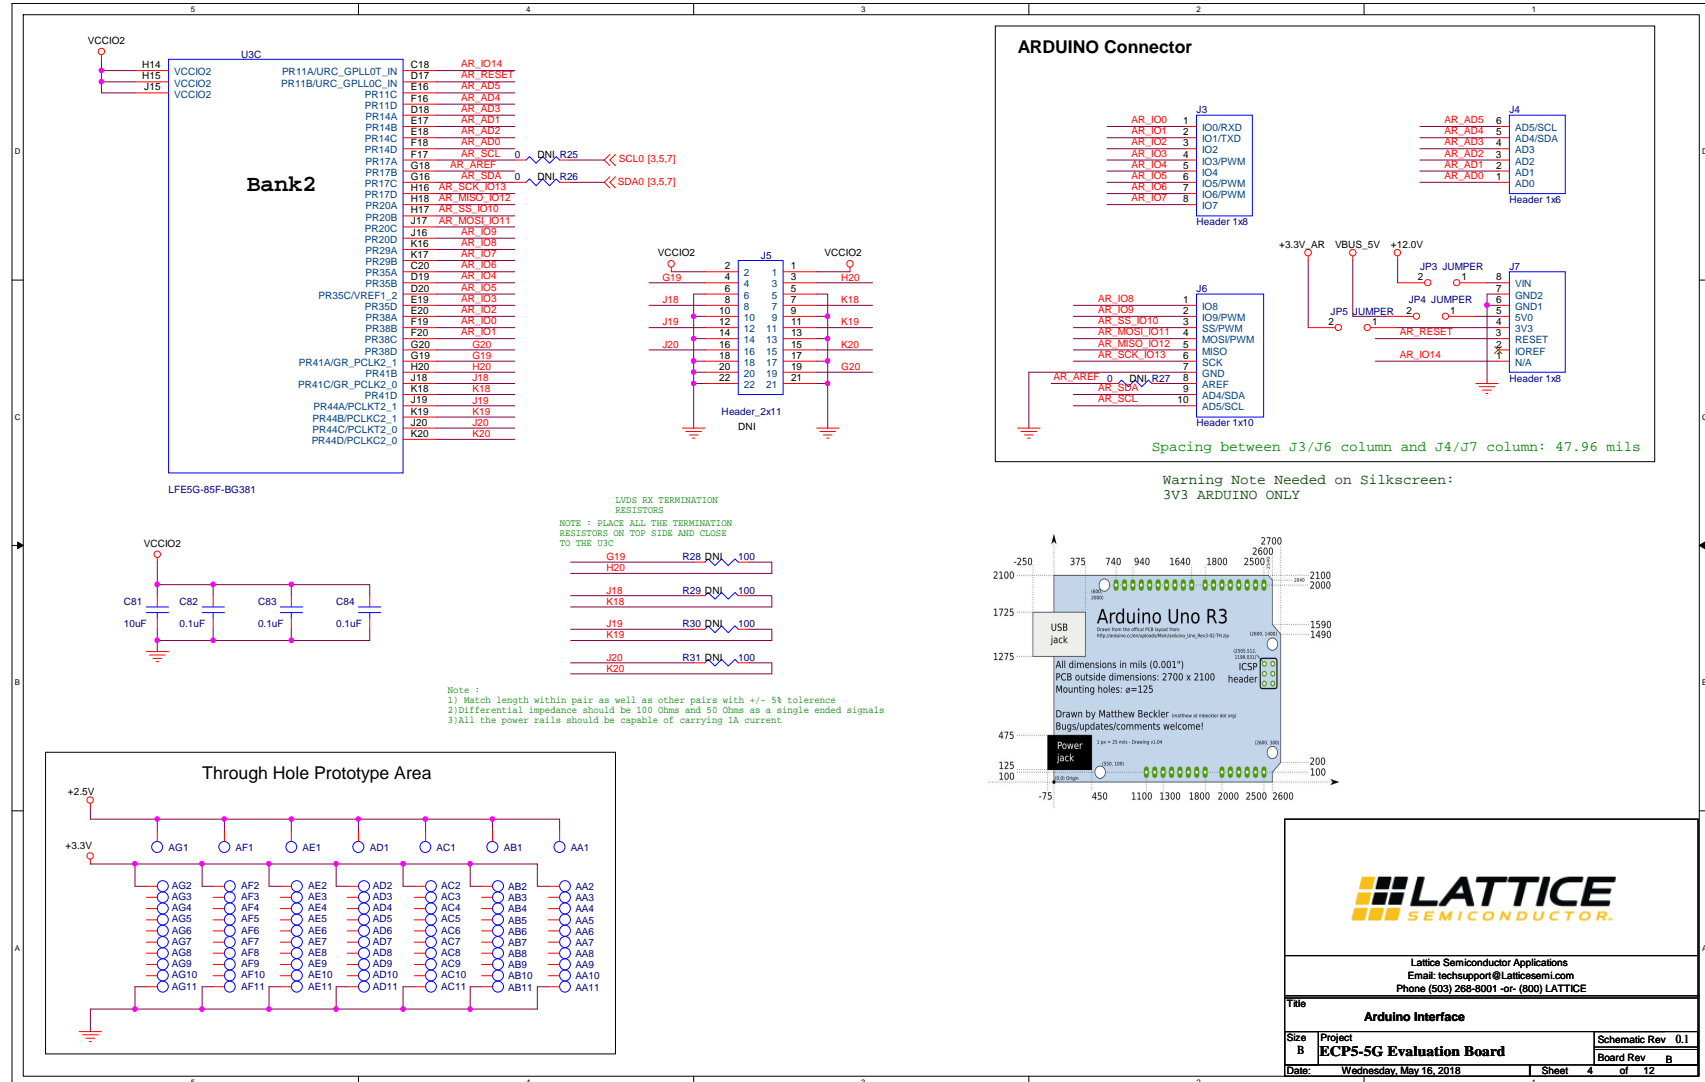



Figure A. 4 Arduino Header (BANK2)

 



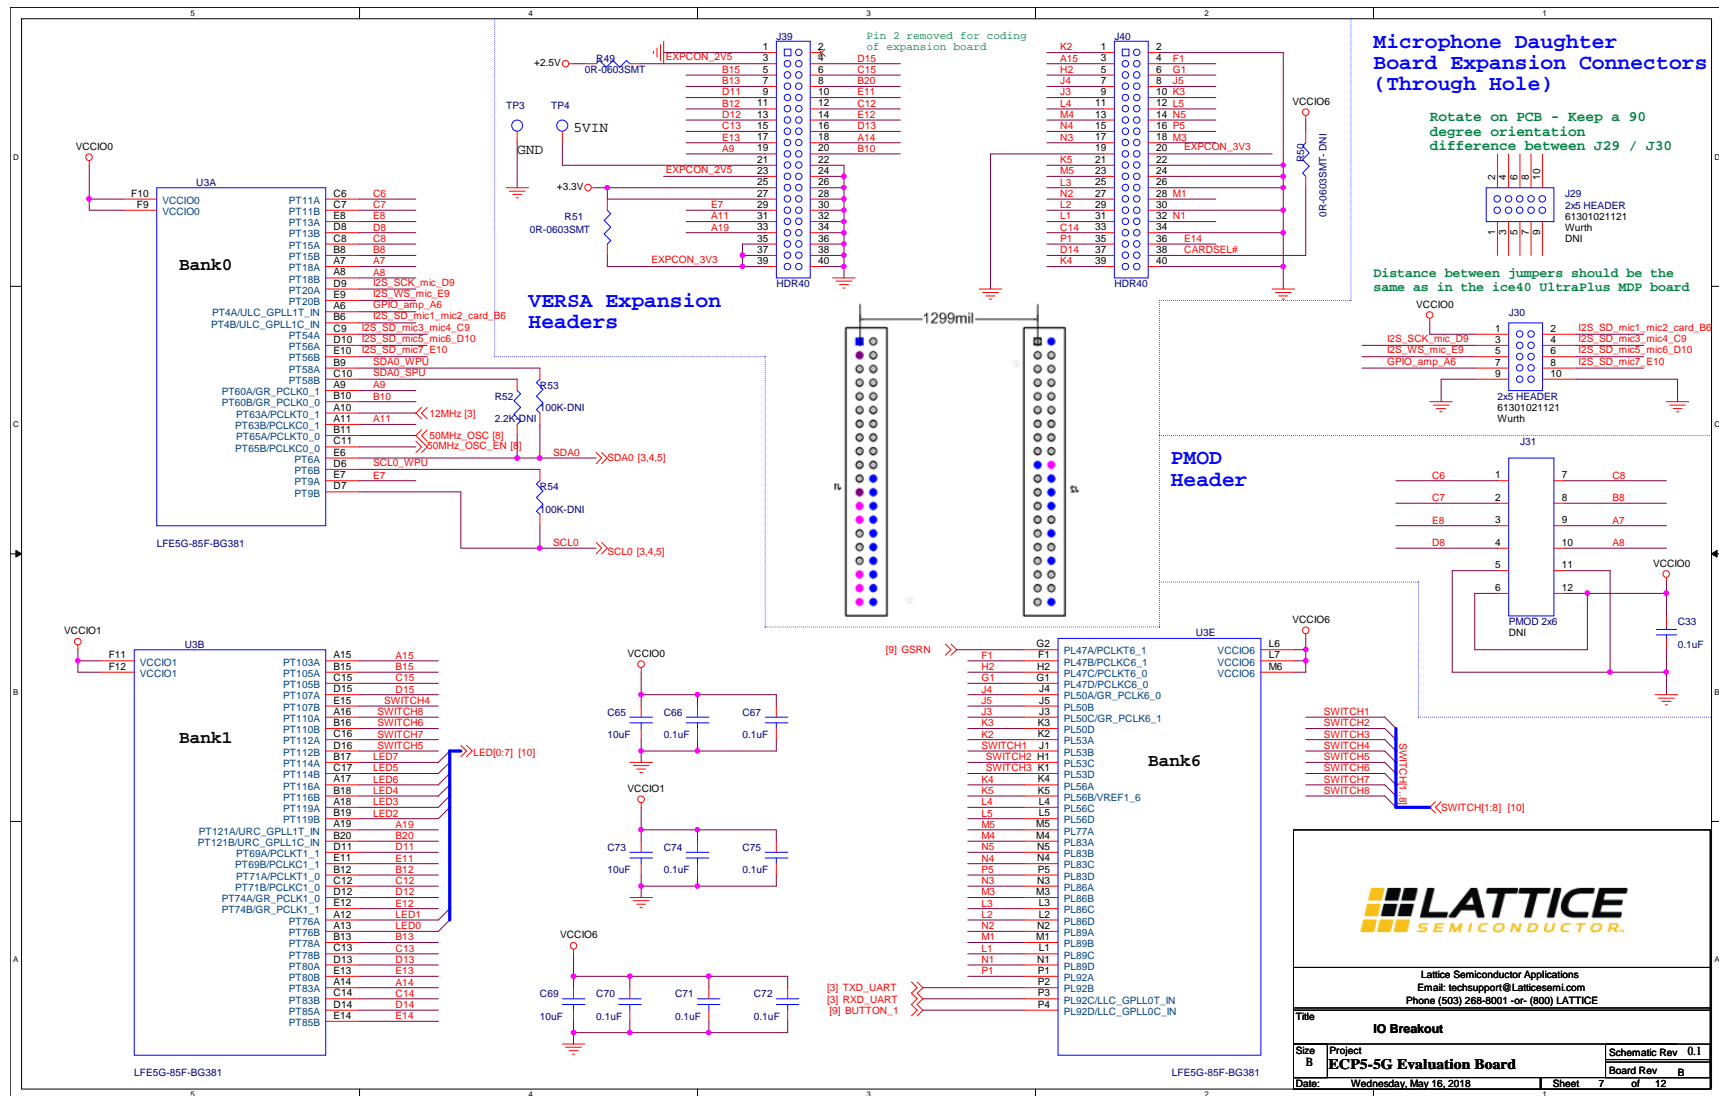


Figure A. 7. IO Breakout (BANK0, BANK1, BANK6)

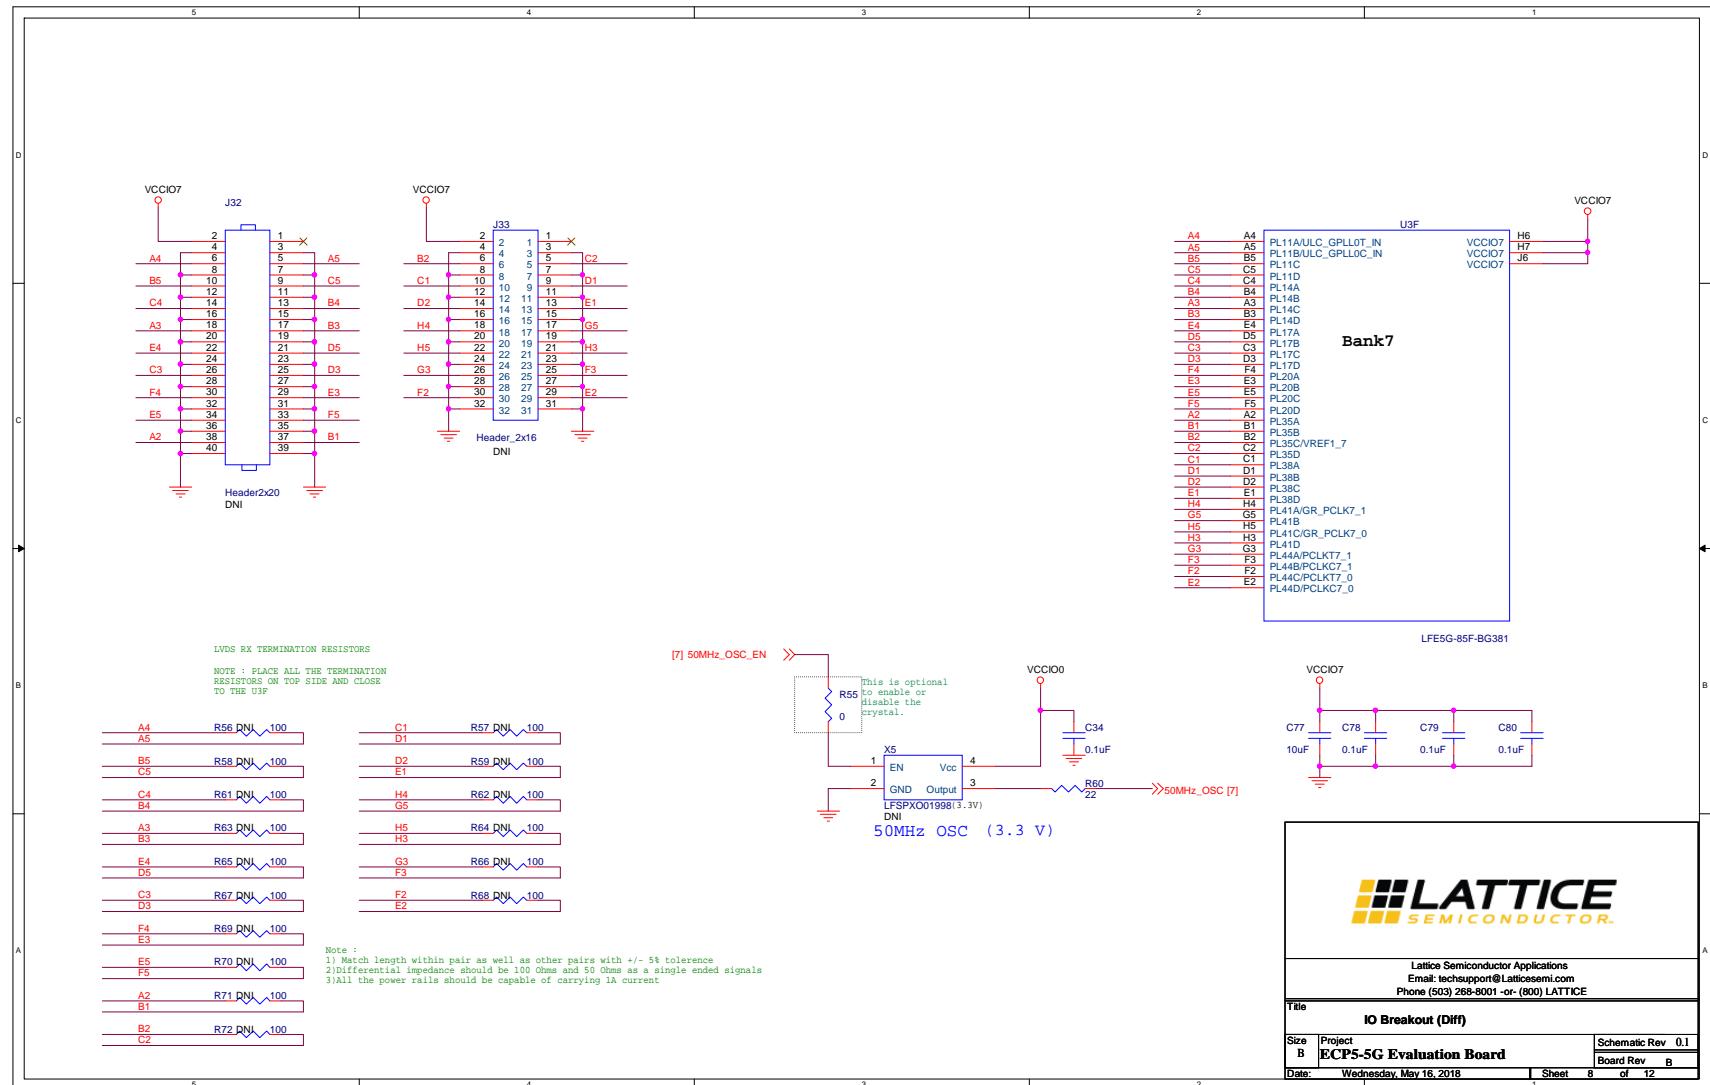
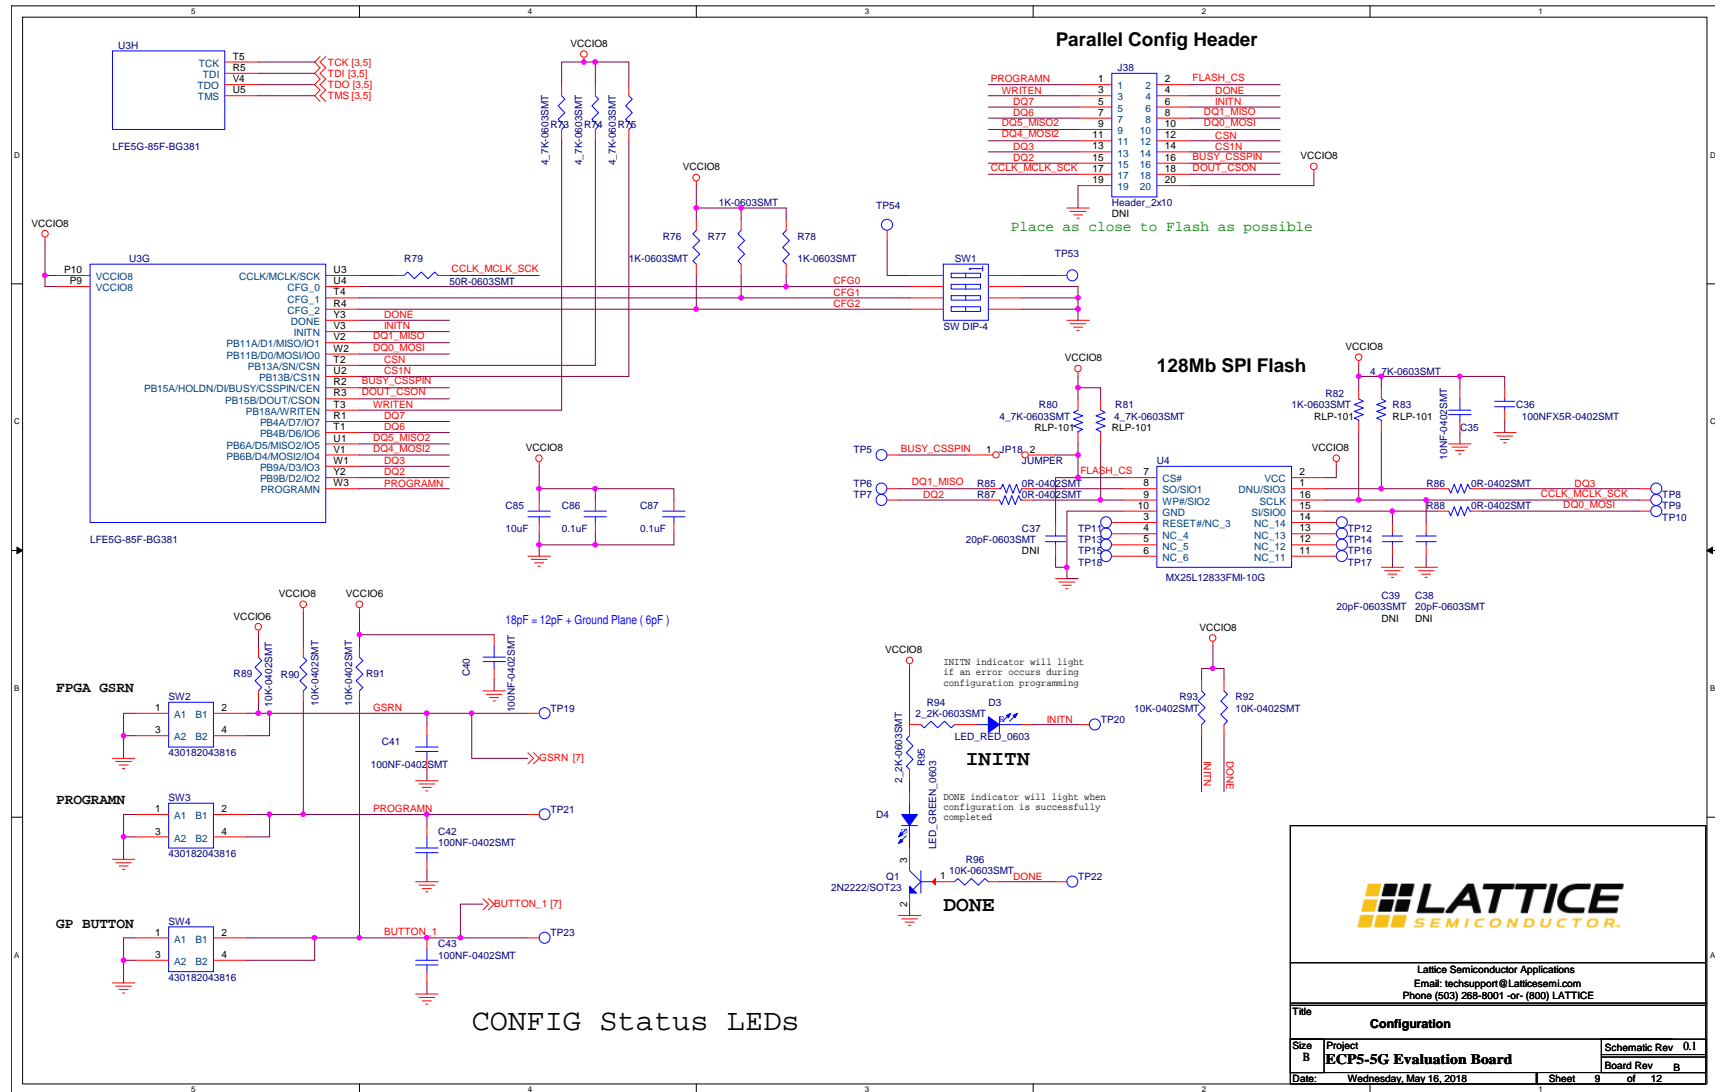


Figure A. 8. IO Breakout (BANK7, Differential Pairs)





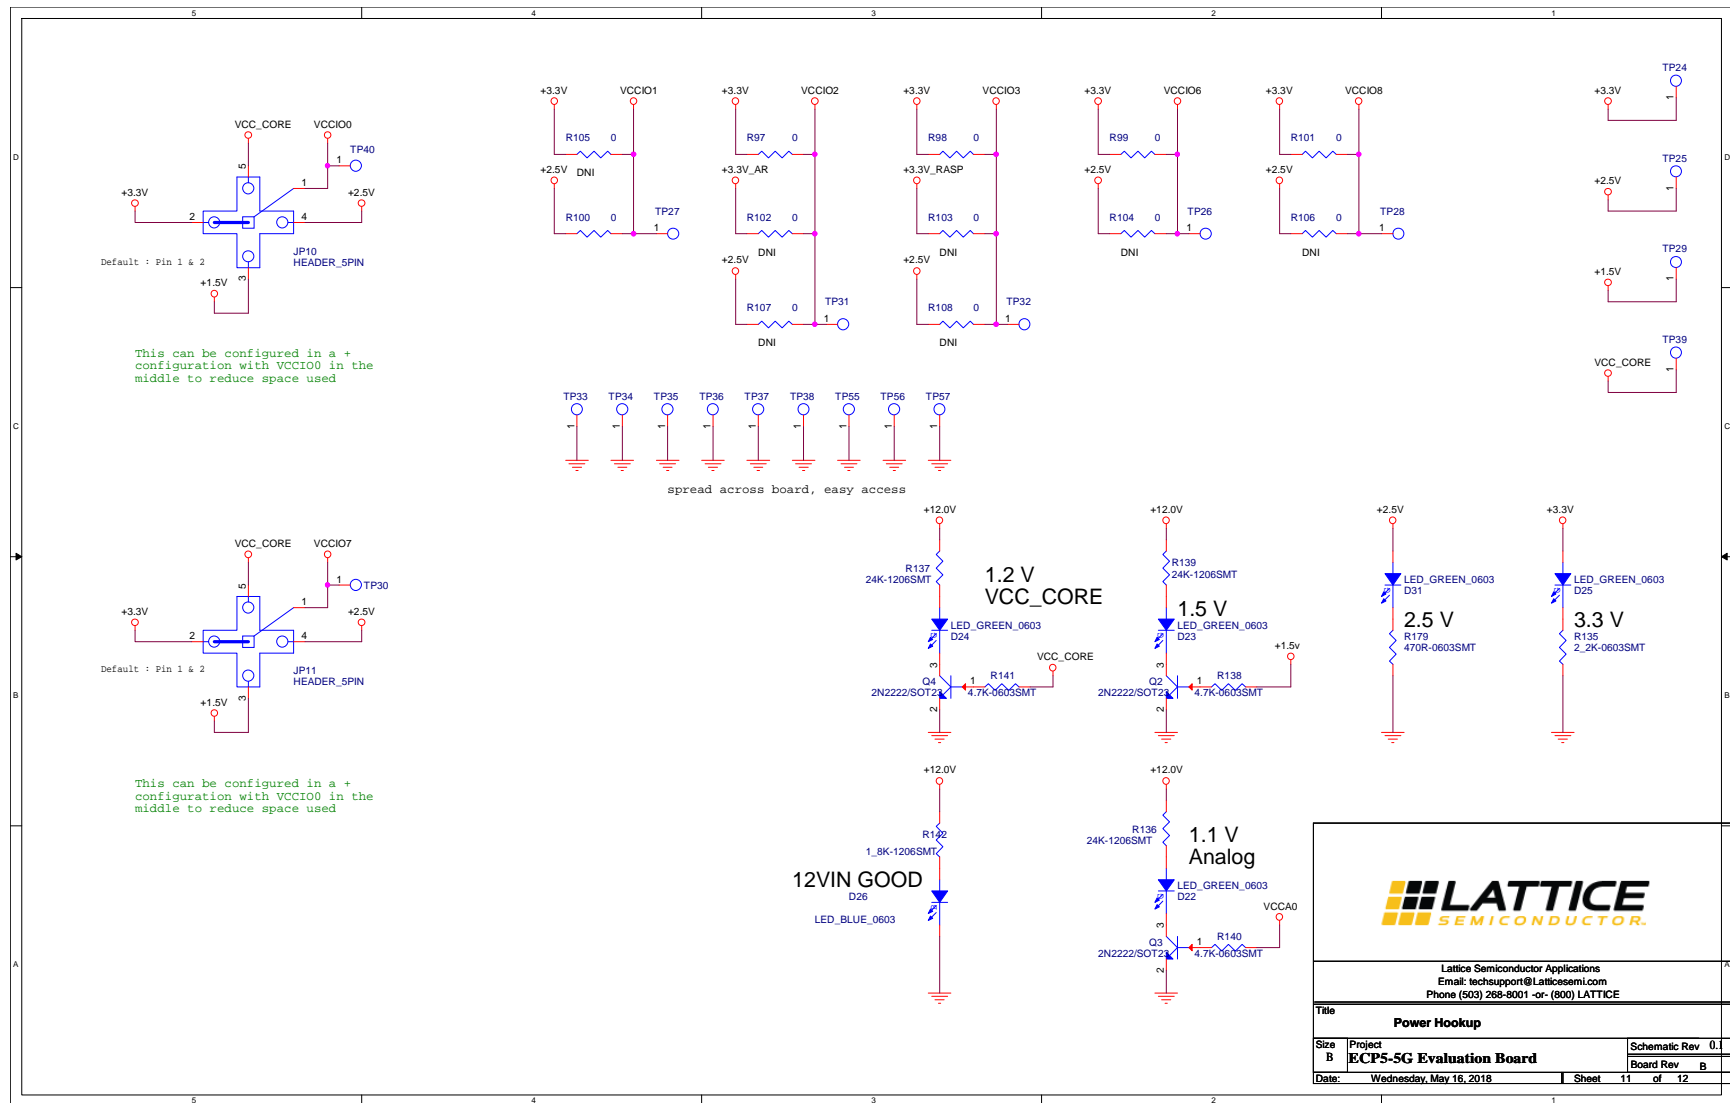


Figure A. 11. Power Hookup



Appendix B. ECP5 Evaluation Board Bill of Materials

Item	Reference	Qty	Part	PCB Footprint	Comments	Part Number	Manufacturer	Description
1	AG1,AF1,AE1,AD1,AC1,AB1,AA1,AG2,AF2,AE2,AD2,AC2,AB2,AA2,AG3,AF3,AE3,AD3,AC3,AB3,AA3,AG4,AF4,AE4,AD4,AC4,AB4,AA4,AG5,AF5,AE5,AD5,AC5,AB5,AA5,AG6,AF6,AE6,AD6,AC6,AB6,AA6,AG7,AF7,AE7,AD7,AC7,AB7,AA7,AG8,AF8,AE8,AD8,AC8,AB8,AA8,AG9,AF9,AE9,AD9,AC9,AB9,AA9,AG10,AF10,AE10,AD10,AC10,AB10,AA10,AG11,AF11,AE11,AD11,AC11,AB11,AA11	77	T POINT R	TP	DNL	—	—	—
2	C1,C2,C3,C4,C7,C8,C10,C13,C14,C141,C142	11	0.1uF	C0402	—	CL05B104K A5NNNC	Samsung	CAP CER 0.1UF 25V 10% X7R 0402
3	C5	1	10uF	C0402	—	CL05A106 MP8NUB8	Samsung	CAP CER 10UF 10V X5R 0402
4	C6,C9	2	4.7uF	C0603	—	CL10A475K A8NQNC	Samsung	CAP CER 4.7UF 25V X5R 0603
5	C11	1	0.01uF	C0402	—	CL05B103K A5NNNC	Samsung	CAP CER 10000PF 25V X7R 0402
6	C12	1	10uF	C0603	—	CL10A106K O8NNNC	Samsung	CAP CER 10UF 10V X5R 0603
7	C15,C16	2	18pF	C0402	—	CL05C180J A5NNNC	Samsung	CAP CER 18PF 25V 10% NP0 0402
8	C17,C18	2	0.1uF	C0402	—	CL05B104K A5NNNC	Samsung	CAP CER 0.1UF 25V 10% X7R 0402
9	C19,C20,C25,C26,C28,C29,C32,C40,C41,C42,C43,C46,C48,C60,C62	15	100NF-0402SMT	RLP-130-A	—	CL05B104K A5NNNC	Samsung	CAP CER 0.1UF 25V 10% X7R 0402
10	C21,C22,C23,C24,C27,C30,C44,C47,C50,C51,C52,C53,C54,C55,C56,C57,C58,C59,C61	19	100NF-0201SMT	C0201	—	C0603X5R1 C104K030B C	TDK	CAP CER 0.1UF 16V 10% X5R 0201
11	C31,C63,C94,C95,C97,C100,C104,C106,C108,C111	10	1UF-16V-0805SMT	RLP-133	—	CL21B105K OFNNNG	Samsung	CAP CER 1UF 16V X7R 0805
12	C33	1	0.1uF	cc0402	—	CL05B104K A5NNNC	Samsung	CAP CER 0.1UF 25V 10% X7R 0402
13	C34	1	0.1uF	cc0402	—	CL05B104K A5NNNC	Samsung	CAP CER 0.1UF 25V 10% X7R 0402

Item	Reference	Qty	Part	PCB Footprint	Comments	Part Number	Manufacturer	Description
14	C35	1	10NF-0402SMT	RLP-130-A	—	CL05B103K A5NNNC	Samsung	CAP CER 10000PF 25V X7R 0402
15	C36	1	100NFX5R-0402SMT	RLP-130-A	—	CL05A104 MP5NNNC	Samsung	CAP CER 0.1UF 10V X5R 0402
16	C37,C38,C39	3	20pF-0603SMT	RLP-132	DNL	—	—	—
17	C45,C49	2	1UF-0402SMT	RLP-130-A	—	GRM152R6 0J105ME15 D	Murata	CAP CER 1UF 6.3V X5R 0402
18	C65,C68,C69,C73,C76,C77,C81,C85,C89	9	10uF	C0603	—	LMK107BJ1 06MALTD	Taiyo Yuden	CAP CER 10UF 10V X5R 20% 0603
19	C66,C67,C70,C71,C72,C74,C75,C78,C79,C80,C82,C83,C84,C86,C87,C90,C91,C92	18	0.1uF	C0201	—	C0603X5R1 C104K030B C	TDK	CAP CER 0.1UF 16V 10% X5R 0201
20	C96,C98	2	10uF-6.3V-0805SMT	RLP-133	—	CL21A106K PFNNNE	Samsung	CAP CER 10UF 10V X5R 0805
21	C101,C102	2	10NFX5R-0402SMT	RLP-130-A	—	GRM155R6 1C103KA01 D	Murata	CAP CER 10000PF 16V X5R 0402
22	C109,C125	2	10uF,25V-1206SMT	RLP-134	—	TMK316B7 106KL-TD	Taiyo Yuden	CAP CER 10UF 25V X7R 1206
23	C112,C113,C126,C127	4	220NF-0402SMT	RLP-130-A	—	CL05A224K O5NNNC	Samsung	CAP CER 0.22UF 16V X5R 0402
24	C114,C115,C128,C129	4	1000pF-0402SMT	RLP-130-A	—	CL05B102K B5NFNC	Samsung	CAP CER 1000PF 50V X7R 0402
25	C116,C119,C130,C133	4	330pF-0402SMT	RLP-130-A	—	CL05B331K B5NNNC	Samsung	CAP CER 330PF 50V X7R 0402
26	C117,C118,C134,C137	4	10pF-0402SMT	RLP-130-A	—	CL05C100C B5NNNC	Samsung	CAP CER 10PF 50V COG/NPO 0402
27	C120,C121,C122,C123,C124,C135,C136,C138,C139,C140	10	22uF,6.3V-0805SMT	RLP-133	—	CL21A226 MQQNNNE	Samsung	CAP CER 22UF 6.3V X5R 0805
28	C131,C132	2	10pF-0402SMT	RLP-130-A	DNL	—	—	—
29	C143,C145,C146	3	1UF-16V-0805SMT	RLP-130-A	—	CL21B105K OFNNNG	Samsung	CAP CER 1UF 16V X7R 0805
30	C144	1	1UF-10V-0201SMT	C0201	—	GRM033R6 1A105ME1 5D	Murata	CAP CER 1UF 10V X5R 0201

Item	Reference	Qty	Part	PCB Footprint	Comments	Part Number	Manufacturer	Description
31	C147,C148,C149,C150,C151,C152,C153	7	22uF-6.3V-0805SMT	RLP-133	—	CL21A226MQQNNNE	Samsung	CAP CER 22UF 6.3V X5R 0805
32	D1,D4,D5,D6,D7,D8,D9,D10,D11,D12,D22,D23,D24,D25,D31	15	LED_GREEN_0603	APT1608	—	150060GS75000	Würth	LED GREEN CLEAR 0603 SMD
33	D2	1	ESDR0502N-UDFN6	UDFN6_040	—	ESDR0502N MUTBG	ON semi	TVS DIODE 5.5VWM 6UDFN
34	D3	1	LED_RED_0603	APT1608	—	150060RS75000	Würth	LED RED CLEAR 0603 SMD
35	D13	1	SCHOTTKY /VISHAY-V12P10	V12P10	—	V12P10-M3/86A	Vishay	DIODE SCHOTTKY 100V 12A TO277A
36	D14,D15,D18,D19	4	1N4448W	1N4448W	—	1N4448WS	On Semi	DIODE GEN PURP 75V 150MA SOD323F
37	D16,D17,D20,D21	4	DFLS220L	DFLS220L	—	DFLS220L-7	Diodes Incorporated	DIODE SCHOTTKY 20V 2A POWERDI123
38	D26	1	LED_BLUE_0603	APT1608	—	150060BS75000	Würth	LED BLUE CLEAR 0603 SMD
39	FB2,FB3,FB4,FB5,FB6,FB7,FB8	7	BLM31KN121SN1L	BLM41P	—	BLM31KN121SN1L	Murata	FERRITE BEAD 120 OHM IMPEDANCE
40	F1	1	F1251CT-ND	154010	—	0154010.DR	Littelfuse Inc.	FUSE BRD MNT 10A 125VAC/VDC SMD
41	JP1,JP2,JP3,JP4,JP5,JP6,JP7,JP9,JP18	9	JUMPER	Header_1x2	—	61300211121	Würth	CONN HEADER 2 POS 2.54
42	JP8	1	Receptacle 20X2	HDR254-2X20_socket	—	PPTC202LFBN-RC	Sullins	CONN HEADER FEM 40POS .1" DL TIN
43	JP10,JP11	2	HEADER_5PIN	HEADER_5	—	61300511121	Würth	CONN HEADER 5 POS 2.54
44	J1	1	Header 1x8	hdr_amp_87220_8_1x8_100	DNL	22284081	Molex	CONN HEADER 8POS .100 VERT TIN
45	J2	1	USB_MINI_AB	usb2-0-rec-240-0001-9	—	651305142821	Würth	CONN RCPT USB MINI AB R/A SMT
46	J3,J7	2	Header 1x8	CONF1X8-254P_2104X240X850H_TH	—	61300811121	Würth	CONN HEADER 8 POS 2.54

Item	Reference	Qty	Part	PCB Footprint	Comments	Part Number	Manufacturer	Description
47	J4	1	Header 1x6	CONF1X6-254P_1596 X240X850H_TH	—	613006111 21	Würth	CONN HEADER 6 POS 2.54
48	J5	1	Header_2 x11	Header_2x 11	DNL	613022211 21	Würth	CONN HEADER VERT DUAL 22POS 2.54
49	J6	1	Header 1x10	CONF1X10-254P_2612 X240X850H_TH	—	613010111 21	Würth	CONN HEADER 10POS PIN 2.54MM
50	J8	1	Header_2 x4	Header_2x 4	DNL	613008211 21	Würth	CONN HEADER VERT DUAL 8POS 2.54
51	J9,J10,J11,J12,J13,J14,J15,J16, J17,J18,J19,J20,J21,J22,J23,J24, J25,J26	18	SMA	73391-0060	DNL	73391-0060	Molex	CONN SMA RCPT STR 50 OHM PCB
52	J29	1	2x5 HEADER	613010211 21	DNL	613010211 21	Würth	CONN HEADER 10POS DL PIN 2.54MM
53	J30	1	2x5 HEADER	613010211 21	—	613010211 21	Würth	CONN HEADER 10POS DL PIN 2.54MM
54	J31	1	PMOD 2x6	skt_sullins_pppc062_2 x6_100	DNL	PPPC062LF BN-RC	Sullins	CONN HEADER FMAL 12PS.1" DL GOLD
55	J32	1	Header2x 20	hdr_samtec_mtsw_2x2 0_100	DNL	613040211 21	Würth	CONN HEADER VERT 40POS 2.54
56	J33	1	Header_2 x16	Header_2x 16	DNL	613032211 21	Würth	CONN HEADER VERT DUAL 32POS 2.54
57	J37	1	PJ-002A	pj_002a_3p	—	694106301 002	Würth	CONN PWR JACK 2X5.5MM SOLDER
58	J38	1	Header_2 x10	Header_2x 10	DNL	613020211 21	Würth	CONN HEADER VERT DUAL 20POS 2.54
59	J39,J40	2	HDR40	HDR-20x2	—	613040211 21	Würth	CONN HEADER VERT 40POS 2.54
60	L1,L2,L3,L8	4	600ohm 500mA	fb0603	—	BLM18AG6 01SN1D	Murata	FERRITE CHIP 600 OHM 500MA 0603
61	L4,L5,L6,L7	4	4.7uH-SPD62R-472M	SPD62R	—	SPD62R-472M	API Delevan Inc.	FIXED IND 4.7UH 2A 150 MOHM SMD

Item	Reference	Qty	Part	PCB Footprint	Comments	Part Number	Manufacturer	Description
62	Q1,Q2,Q3,Q4	4	2N2222/SOT23	MMBT2222 ALT-1	—	MMBT2222 ALT1G	ON Semiconductor	TRANS NPN 40V 0.6A SOT23
63	RN1	1	EXB-2HV102JV	EXB-2HV	—	EXB-2HV102JV	Panasonic	RES ARRAY 8 RES 1K OHM 1506
64	RN2	1	EXB2HV472JV	EXB-2HV	—	EXB2HV472 JV	Panasonic	RES ARRAY 8 RES 4.7K OHM 1506
65	R1,R2,R3	3	4.7K	R0603	—	RC0603FR-074K7L	yageo	RES 4.70K OHM 1/10W 1% 0603 SMD
66	R4,R6	2	0	R0402	—	RC0402FR-070RL	yageo	RES SMD 0 OHM JUMPER 1/16W 0402
67	R5,R12	2	2.2K	R0603	—	RC0603FR-072K2L	yageo	RES SMD 2.2K OHM 1% 1/10W 0603
68	R7,R8,R9,R11,R22,R23,R24	7	0	R0603	—	RC0603FR-070RL	yageo	RES SMD 0 OHM JUMPER 1/10W 0603
69	R10	1	100K	R0603	—	RC0603FR-07100KL	yageo	RES SMD 100K OHM 1% 1/10W 0603
70	R13,R14,R15	3	10K	R0603	—	RC0603FR-0710KL	Yageo	RES SMD 10K OHM 1% 1/10W 0603
71	R16,R20	2	12K	R0603	—	RC0603FR-0712KL	yageo	RES SMD 12K OHM 1/10W 1% 0603
72	R17,R18,R19,R94,R95,R135	6	2_2K-0603SMT	RLP-101	—	RC0603FR-072K2L	yageo	RES SMD 2.2K OHM 1% 1/10W 0603
73	R21	1	0R-0603SMT-DNI	RLP-101	DNL	—	—	—
74	R25,R26,R27,R34,R35	5	0	R0603	DNL	RC0603FR-070RL	yageo	RES SMD 0 OHM JUMPER 1/10W 0603
75	R28,R29,R30,R31,R56,R57,R58,R59,R61,R62,R63,R64,R65,R66,R67,R68,R69,R70,R71,R72	20	100	cr0201	DNL	RC0201JR-07100RL	Yageo	RES SMD 100 OHM 5% 1/20W 0201
76	R32,R33,R38,R39,R40,R41	6	0	R0603	DNL	RC0603JR-070RL	Yageo	RES 0.0 OHM 1/10W JUMP 0603 SMD
77	R44,R89,R90,R91,R92,R93	6	10K-0402SMT	RLP-100	—	RC0402FR-0710KL	Yageo	RES SMD 10K OHM 1% 1/16W 0402
78	R45,R46	2	10	R0603	—	RC0603FR-0710RL	yageo	RES SMD 10 OHM 1% 1/10W 0603

Item	Reference	Qty	Part	PCB Footprint	Comments	Part Number	Manufacturer	Description
79	R60	1	22	R0603	—	RC0603FR-0722RL	yageo	RES SMD 22 OHM 1% 1/10W 0603
80	R49,R51	2	0R-0603SMT	RLP-101	—	RC0603FR-070RL	yageo	RES SMD 0 OHM JUMPER 1/10W 0603
81	R50	1	0R-0603SMT-DNI	RLP-101	DNL	—	—	—
82	R52	1	2.2K-DNI	R0603	DNL	RC0603FR-072K2L	yageo	RES SMD 2.2K OHM 1% 1/10W 0603
83	R53,R54	2	100K-DNI	R0603	DNL	RC0603FR-07100KL	yageo	RES SMD 100K OHM 1% 1/10W 0603
84	R55	1	0	cr0603	—	RC0603FR-070RL	yageo	RES SMD 0 OHM JUMPER 1/10W 0603
85	R73,R74,R75,R80,R81,R83	6	4_7K-0603SMT	RLP-101	—	RC0603FR-074K7L	yageo	RES 4.70K OHM 1/10W 1% 0603 SMD
86	R76,R77,R78,R82	4	1K-0603SMT	RLP-101	—	RC0603FR-071KL	yageo	RES SMD 1K OHM 1/10W 1% 0603
87	R79	1	50R-0603SMT	RLP-101	—	RC0603FR-0749R9L	yageo	RES SMD 49.9 OHM 1% 1/10W 0603
88	R85,R86,R87,R88	4	0R-0402SMT	RLP-100	—	RC0402FR-070RL	yageo	RES SMD 0 OHM JUMPER 1/16W 0402
89	R94	1	2_2K-0603SMT	RLP-101	—	RC0603FR-072K2L	yageo	RES SMD 2.2K OHM 1% 1/10W 0603
90	R95,R135	2	2_2K-0603SMT	RLP-101	—	RC0603FR-072K2L	yageo	RES SMD 2.2K OHM 1% 1/10W 0603
91	R96,R120,R133	3	10K-0603SMT	RLP-101	—	RC0603FR-0710KL	Yageo	RES SMD 10K OHM 1% 1/10W 0603
92	R97,R98,R99,R100,R101	5	0	R0603	—	RC0603JR-070RL	Yageo	RES SMD 0 OHM JUMPER 1/10W 0603
93	R102,R103,R104,R105,R106,R107,R108	7	0	R0603	DNL	RC0603JR-070RL	Yageo	RES SMD 0 OHM JUMPER 1/10W 0603
94	R109	1	0.01	cr2512_alt 1	—	PE2512FKE7W0R01L	Yageo	RES 0.01 OHM 1% 2W 2512

Item	Reference	Qty	Part	PCB Footprint	Comments	Part Number	Manufacturer	Description
95	R110,R115,R117,R126,R127	5	0.1	cr2010_alt 1	—	WSL2010R1 000FEA	Vishay Dale	RES 0.1 OHM 1% 1/2W 2010
96	R111,R113	2	1K	R0603	—	RC0603FR-071KL	yageo	RES SMD 1K OHM 1/10W 1% 0603
97	R112,R114	2	121K-0603SMT	RLP-101	—	RC0603FR-07121KL	yageo	RES SMD 121K OHM 1% 1/10W 0603
98	R116,R121,R123,R125	4	51K-0402SMT	RLP-100	—	RC0402FR-0751KL	yageo	RES SMD 51K OHM 1% 1/16W 0402
99	R118	1	21_5K-0603SMT	RLP-101	—	RC0603FR-0721K5L	yageo	RES SMD 21.5K OHM 1% 1/10W 0603
100	R119	1	10_7K-0603SMT	RLP-101	—	RC0603FR-0710K7L	yageo	RES SMD 10.7K OHM 1% 1/10W 0603
101	R122	1	34K-0402SMT	RLP-100	—	RC0402FR-0734KL	yageo	RES SMD 34K OHM 1% 1/16W 0402
102	R124	1	3_4K-0603SMT	RLP-101	—	RC0603FR-073K4L	yageo	RES SMD 3.4K OHM 1% 1/10W 0603
103	R128	1	5_11K-0603SMT	RLP-101	—	RC0603FR-075K11L	yageo	RES SMD 5.11K OHM 1% 1/10W 0603
104	R129	1	15K-0603SMT	RLP-101	—	RC0603FR-0715KL	yageo	RES SMD 15K OHM 1% 1/10W 0603
105	R130	1	30_1K-0402SMT	RLP-100	—	ERJ-2RKF3012X	Panasonic	RES SMD 30.1K OHM 1% 1/10W 0402
106	R131	1	63_4K-0402SMT	RLP-100	—	ERJ-2RKF6342X	Panasonic	RES SMD 63.4K OHM 1% 1/10W 0402
107	R132	1	20K-0402SMT	RLP-100	—	ERJ-2RKF2002X	Panasonic	RES SMD 20K OHM 1% 1/10W 0402
108	R134	1	16_9K-0603SMT	RLP-101	—	RC0603FR-0716K9L	yageo	RES SMD 16.9K OHM 1% 1/10W 0603
109	R136,R137,R139	3	24K-1206SMT	RLP-103	—	RC1206JR-0724KL	Panasonic	RES SMD 24K OHM 5% 1/4W 1206
110	R138,R140,R141	3	4.7K-0603SMT	RLP-101	—	RC0603FR-074K7L	yageo	RES SMD 4.7K OHM 1% 1/10W 0603
111	R142	1	1_8K-1206SMT	RLP-103	—	RC1206JR-071K8L	Yageo	RES SMD 1.8K OHM 5% 1/4W 1206

Item	Reference	Qty	Part	PCB Footprint	Comments	Part Number	Manufacturer	Description
112	R179	1	470R-0603SMT	RLP-101	—	RC0603FR-07470RL	yageo	RES SMD 470 OHM 1% 1/10W 0603
113	R180	1	100	R0402	—	ERJ-2RKF1000X	Panasonic	RES SMD 100 OHM 1% 1/10W 0402
114	SW1	1	SW DIP-4	418121270 804	—	418121270 804	Würth	SWITCH SLIDE DIP SPST 25MA 24V
115	SW2,SW3,SW4	3	43018204 3816	sw_sp_st_c k_pts645_s m	—	430182043 816	Würth	SWITCH TACTILE SPST-NO 0.05A 12V
116	SW5	1	TDA DIP-8	TDA08H0SB 1	—	416131160 808	Würth	SWITCH SLIDE DIP SPST 25MA 24V
117	TP1,TP2,TP24,TP25,TP26,TP27, TP28,TP29,TP30,TP31,TP32, TP33,TP34,TP35,TP36,TP37, TP38,TP39,TP40,TP55,TP56, TP57	22	TP_S_40_63	TP	DNL	—	—	Square test point, 40mil inner diameter, 63mil outer diameter
118	TP3,TP4,TP5,TP6,TP7,TP8,TP9, TP10,TP11,TP12,TP13,TP14, TP15,TP16,TP17,TP18,TP19, TP20,TP21,TP22,TP23,TP41, TP42,TP43,TP44,TP45,TP46, TP47,TP48,TP49,TP50,TP51, TP52,TP53,TP54	35	TestPoint	TP50	DNL	—	—	—
119	U1	1	FT2232HL	tqfp64_0p5 _12p2x12p 2_h1p6	—	FT2232HL- REEL	FTDI	IC USB HS DUAL UART/FIFO 64-LQFP
120	U2	1	93LC56C- I/SN	so8_50_24 4	—	93LC56C- I/SN	Microchip Technology	IC EEPROM 2KBIT 3MHZ 8SOIC
121	U3	1	LFE5G- 85F- BG381	LFE5G-85F- BG381	—	LFE5UM5G- 85F- 8BG381	Lattice	83.6K LUTS, 205 /O, 1.1V, -8 SPE
122	U4	1	MX25L12 833FMI- 10G	SO16W	—	MX25L1283 3FMI-10G	Macronix International	IC FLASH 128MBIT 133MHZ 16SOIC
123	U5,U6	2	LT3085	msop8_26_198_ep	—	LT3085IMS 8E#PBF	Linear Technology/An alog Devices	IC REG LIN POS ADJ 500MA 8MSOP
124	U7,U8	2	LT3508EU F	LT3508EUF	—	LT3508EUF #PBF	Linear Technology/An alog Devices	IC REG BUCK ADJ 1.4A DL 24QFN
125	X1	1	7M- 12.000MA AJ	xtal_4p_7m	—	7M- 12.000MAA J-T	TXC	CRYSTAL 12MHZ 18PF SMD
126	X2	1	200_00M Hz_LVDS	DSC1123AE 2	—	DSC1123AE 2-200.0000	Microchip Technology	OSC MEMS 200.000MHZ LVDS SMD

Item	Reference	Qty	Part	PCB Footprint	Comments	Part Number	Manufacturer	Description
127	X5	1	LFSPX001998	osc_4p_cb3lv	DNL	LFSPX0019987Reel	IQD	OSC XO 50.000MHZ HCMOS TTL SMD
128	Shorting-Jumper	4	Shorting-Jumper	—	—	929957-08	3M	SHORTING JUMPERS GOLD PLATED GRN
129	ECP5 EVALUATION BOARD REV A PCB	1	—	—	—	305-PD-18-0078	PACTRON	—

References

Lattice Semiconductor Documents

Related documents available from your Lattice Semiconductor sales representative are listed on the table below.

Document	Title
FPGA-UG-02042	Programming Cables
FPGA-DS-02012	ECP5 and ECP5-5G Family Data Sheet
FPGA-TN-02039	ECP5 and ECP5-5G sysCONFIG Usage Guide
EB103	ECP5-5G Versa Development Board User Guide
FPGA-EB-02004	MachXO3-9400 Development Board User Guide

Technical Support Assistance

Submit a technical support case through www.latticesemi.com/techsupport.

For frequently asked questions, please refer to the Lattice Answer Database at www.latticesemi.com/Support/AnswerDatabase.

Revision History

Revision 1.3, April 2023

Section	Change Summary
LEDs and Switches	Added the following note for Table 7.1. Eight-Position DIP Switch Signals : <i>Silkscreen for SWITCH2 and SWITCH3 may be swapped on some boards. Mapping shown in the table is correct.</i>
Technical Support Assistance	Added the link to the Lattice Answer Database at www.latticesemi.com/Support/AnswerDatabase .

Revision 1.2, August 2021

Section	Change Summary
All	Added disclaimer to the document.
ECP5 Clock Sources	Added note 1 to Table. 4.1. Clock Sources.

Revision 1.1, August 2018

Section	Change Summary
Introduction	Changed MCD to MDC in the ECP5 Evaluation Board section.
Programming and I2C	Added the SPI Flash Device Selection in Programmer section.
Headers and Test Connections	<ul style="list-style-type: none"> Added description under Table 5.7. Raspberry Pi JP8 Header Pin Connections in the Raspberry Pi Board GPIO Header section. Removed ~ from Table 5.3. Arduino J6 Pin Connections and Table 5.4. Arduino J3 Pin Connections.
Control Buses – I2C, I3C, UART, and SPI	Updated Figure 6.1. I2C Architecture, I3C, and UART Options adding missing dots on pullups and crooked lines.
LEDs and Switches	Changed SW3 to SW4 in the description under Table 7.3. Push Button Switch Signals.

Revision 1.0, July 2018

Section	Change Summary
All	Initial release.



www.latticesemi.com