



# **Perform basic infrastructure checks**

## **ONTAP 9**

NetApp  
November 04, 2021

# Table of Contents

- Perform basic infrastructure checks . . . . . 1
  - Check protocol settings on the storage system . . . . . 1
  - Check the network settings on the data switches . . . . . 3
  - Check the MTU network setting on the storage system. . . . . 3
  - Check disk throughput and latency . . . . . 4
  - Check throughput and latency between nodes . . . . . 5

# Perform basic infrastructure checks

## Check protocol settings on the storage system

### Check the NFS TCP maximum transfer size

For NFS, you can check whether the TCP maximum transfer size for reads and writes might be causing a performance issue. If you think the size is slowing performance, you can increase it.

#### What you'll need

- You must have cluster administrator privileges to perform this task.
- You must use advanced privilege level commands for this task.

#### Steps

1. Change to the advanced privilege level:

```
set -privilege advanced
```

2. Check the TCP maximum transfer size:

```
vserver nfs show -vserver vserver_name -instance
```

3. If the TCP maximum transfer size is too small, increase the size:

```
vserver nfs modify -vserver vserver_name -tcp-max-xfer-size integer
```

4. Return to the administrative privilege level:

```
set -privilege admin
```

#### Example

The following example changes the TCP maximum transfer size of SVM1 to 1048576:

```
cluster1::*> vserver nfs modify -vserver SVM1 -tcp-max-xfer-size 1048576
```

### Check the iSCSI TCP read/write size

For iSCSI, you can check the TCP read/write size to determine if the size setting is creating a performance issue. If the size is the source of an issue, you can correct it.

#### What you'll need

Advanced privilege level commands are required for this task.

#### Steps

1. Change to advanced privilege level:

```
set -privilege advanced
```

2. Check the TCP window size setting:

```
vserver iscsi show -vserver vserver_name -instance
```

3. Modify the TCP window size setting:

```
vserver iscsi modify -vserver vserver_name -tcp-window-size integer
```

4. Return to administrative privilege:

```
set -privilege admin
```

### Example

The following example changes the TCP window size of SVM1 to 131,400 bytes:

```
cluster1::*> vserver iscsi modify -vserver vs1 -tcp-window-size 131400
```

## Check the CIFS multiplex settings

If slow CIFS network performance causes a performance issue, you can modify the multiplex settings to improve and correct it.

### Steps

1. Check the CIFS multiplex setting:

```
vserver cifs options show -vserver -vserver_name -instance
```

2. Modify the CIFS multiplex setting:

```
vserver cifs options modify -vserver -vserver_name -max-mpx integer
```

### Example

The following example changes the maximum multiplex count on SVM1 to 255:

```
cluster1::> vserver cifs options modify -vserver SVM1 -max-mpx 255
```

## Check the FC adapter port speed

The adapter target port speed should match the speed of the device to which it connects, to optimize performance. If the port is set to autonegotiation, it can take longer to reconnect after a takeover and giveback or other interruption.

### What you'll need

All LIFs that use this adapter as their home port must be offline.

## Steps

1. Take the adapter offline:

```
network fcp adapter modify -node nodename -adapter adapter -state down
```

2. Check the maximum speed of the port adapter:

```
fcp adapter show -instance
```

3. Change the port speed, if necessary:

```
network fcp adapter modify -node nodename -adapter adapter -speed  
{1|2|4|8|10|16|auto}
```

4. Bring the adapter online:

```
network fcp adapter modify -node nodename -adapter adapter -state up
```

5. Bring all the LIFs on the adapter online:

```
network interface modify -vserver * -lif * { -home-node node1 -home-port e0c }  
-status-admin up
```

## Example

The following example changes the port speed of adapter 0d on node1 to 2 Gbps:

```
cluster1::> network fcp adapter modify -node node1 -adapter 0d -speed 2
```

## Check the network settings on the data switches

You must maintain the same network settings on your clients, storage systems, and switches to ensure that performance is not impacted. All components in the network must have the same MTU setting for best performance.

### Step

1. For data switches, check that the MTU size is set to 9000.

For more information, see the switch vendor documentation.

## Check the MTU network setting on the storage system

You can change the network settings on the storage system if they are not the same as on the client or data switches. Whereas the management network MTU setting is set to 1500, the data network MTU size should be 9000.

## About this task

All ports within a broadcast-domain have the same MTU size, with the exception of the e0M port handling management traffic. If the port is part of a broadcast-domain, use the `broadcast-domain modify` command to change the MTU for all ports within the modified broadcast-domain. For more information, and to complete this task using System Manager, see the [System Manager documentation](#).

### Steps

1. Check the MTU port setting on the storage system:

```
network port show -instance
```

2. Change the MTU port setting to 9000:

```
network port modify -node nodename -port port -mtu 9000
```

### Example

The following example changes the MTU port setting for e0a to 9000:

```
cluster1::*> network port modify -node node0 -port e0a -mtu 9000
```

## Check disk throughput and latency

You can check the disk throughput and latency metrics for cluster nodes to assist you in troubleshooting.

### About this task

Advanced privilege level commands are required for this task.

### Steps

1. Change to advanced privilege level:

```
set -privilege advanced
```

2. Check the disk throughput and latency metrics:

```
statistics disk show -sort-key latency
```

### Example

The following example displays the totals in each user read or write operation for node2 on cluster1:

```
::*> statistics disk show -sort-key latency
cluster1 : 8/24/2015 12:44:15
```

Disk	Node	Busy (%)	Total Ops	Read Ops	Write Ops	Read (Bps)	Write (Bps)	*Latency (us)
1.10.20	node2	4	5	3	2	95232	367616	23806
1.10.8	node2	4	5	3	2	138240	386048	22113
1.10.6	node2	3	4	2	2	48128	371712	19113
1.10.19	node2	4	6	3	2	102400	443392	19106
1.10.11	node2	4	4	2	2	122880	408576	17713

## Check throughput and latency between nodes

You can use the `network test-path` command to identify network bottlenecks, or to prequalify network paths between nodes. You can run the command between intercluster nodes or intracluster nodes.

### What you'll need

- You must be a cluster administrator to perform this task.
- Advanced privilege level commands are required for this task.
- For an intercluster path, the source and destination clusters must be peered.

### About this task

Occasionally, network performance between nodes may not meet expectations for your path configuration. A 1 Gbps transmission rate for the kind of large data transfers seen in SnapMirror replication operations, for example, would not be consistent with a 10 GbE link between the source and destination clusters.

You can use the `network test-path` command to measure throughput and latency between nodes. You can run the command between intercluster nodes or intracluster nodes.



The test saturates the network path with data, so you should run the command when the system is not busy and when network traffic between nodes is not excessive. The test times out after ten seconds. The command can be run only between ONTAP 9 nodes.

The `session-type` option identifies the type of operation you are running over the network path—for example, "AsyncMirrorRemote" for SnapMirror replication to a remote destination. The type dictates the amount of data used in the test. The following table defines the session types:

Session Type	Description
Default	SnapMirror replication between nodes in different clusters

Session Type	Description
AsyncMirrorLocal	SnapMirror replication between nodes in the same cluster
AsyncMirrorRemote	SnapMirror replication between nodes in different clusters
SyncMirrorRemote	SyncMirror replication between nodes in different clusters
RemoteDataTransfer	Data transfer between nodes in the same cluster (for example, an NFS request to a node for a file stored in a volume on a different node)

## Steps

1. Change to advanced privilege level:

```
set -privilege advanced
```

2. Measure throughput and latency between nodes:

```
network test-path -source-node source_nodename |local -destination-cluster
destination_clustername -destination-node destination_nodename -session-type
Default|AsyncMirrorLocal|AsyncMirrorRemote|SyncMirrorRemote|RemoteDataTransfer
```

The source node must be in the local cluster. The destination node can be in the local cluster or in a peered cluster. A value of "local" for `-source-node` specifies the node on which you are running the command.

The following command measures throughput and latency for SnapMirror-type replication operations between `node1` on the local cluster and `node3` on `cluster2`:

```
cluster1::> network test-path -source-node node1 -destination-cluster
cluster2 -destination-node node3 -session-type AsyncMirrorRemote
Test Duration:      10.88 secs
Send Throughput:    18.23 MB/sec
Receive Throughput: 18.23 MB/sec
MB sent:            198.31
MB received:        198.31
Avg latency in ms:  2301.47
Min latency in ms:  61.14
Max latency in ms:  3056.86
```

3. Return to administrative privilege:

```
set -privilege admin
```



**After you finish**

If performance does not meet expectations for the path configuration, you should check node performance statistics, use available tools to isolate the problem in the network, check switch settings, and so forth.

## Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

## Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.