


## NGP RM18/RM24 PCB


This PCB can be controlled by a Raspberry (Sunray firmware with SERIAL\_ROBOT\_DRIVER) via serial port. The STM32 has to be flashed for this:

Firmware: <https://github.com/Ardumower/Sunray/blob/master/alfred/>

### Serial

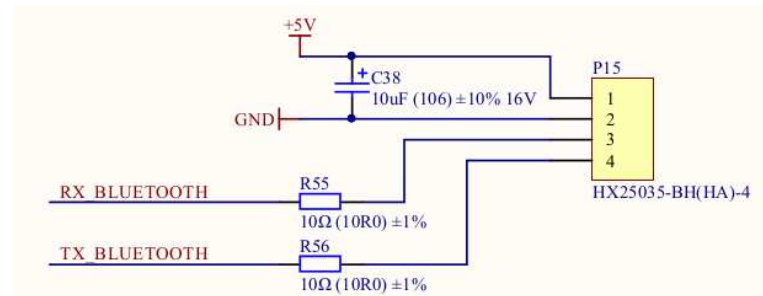

HardwareSerial mSerial2(pinBluetoothRX, pinBluetoothTX); // rx, tx - UART available at NGP PCB

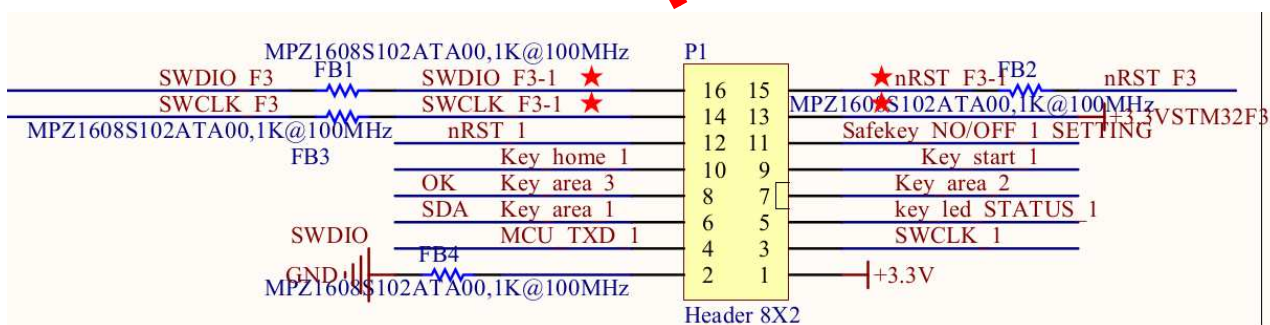

### STM32

MCU1 (main/F1): STM32F103VET 512K flash/64K SRAM  
flash size 0x80000

bootloader start 0x8000000

MCU2 (perimeter/F3): STM32F302xB-xC/  
STM32F303xB-xC (Cortex-M4, 256 KB)

### Serial

SoftwareSerial mSerial(pinKeyArea3, pinKeyArea1); // rx, tx - SoftUART available at display panel