



IMU MODULE v0.1


Designer: Alvaro Ferrán

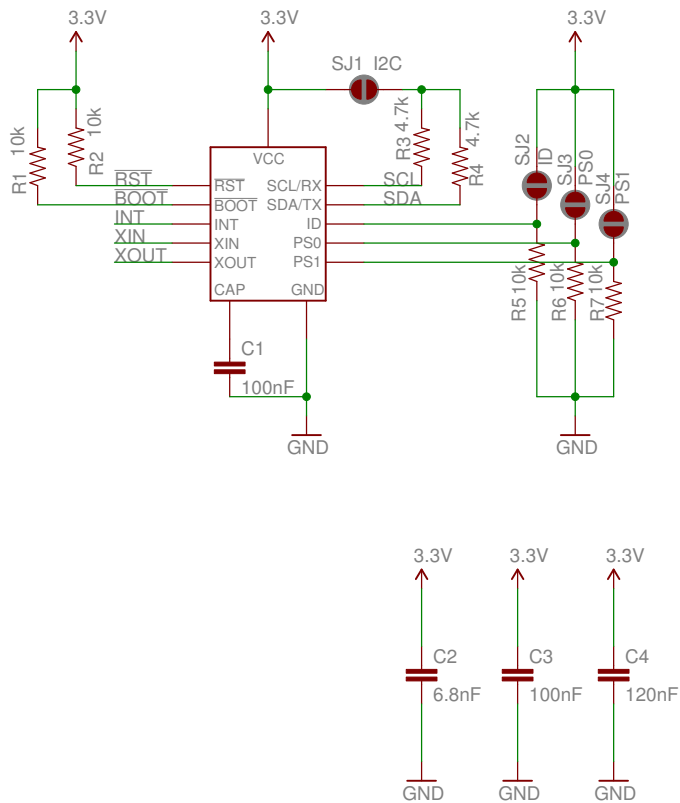

IMU

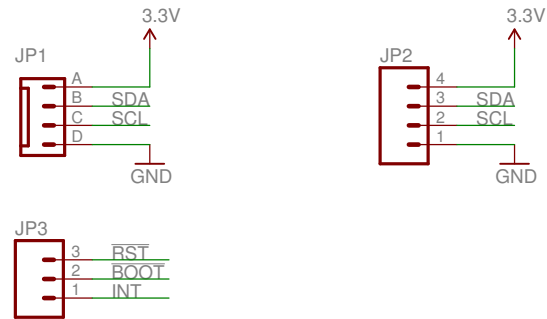

CONNECTORS

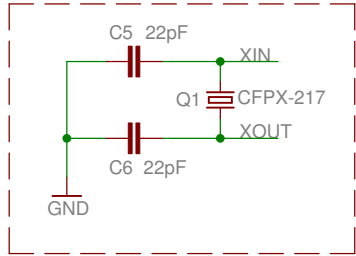

OSCILLATOR

OPTIONAL:
By default the internal oscillator is selected, in order to use it with an external one the CLK_SEL bit must be set in the SYSTEM_TRIGGER register.

TITLE: Sensor

Document Number:

REV:

Date: 26/8/15 19:24

Sheet: 1/1

