 


AIR COOLER

User Guide

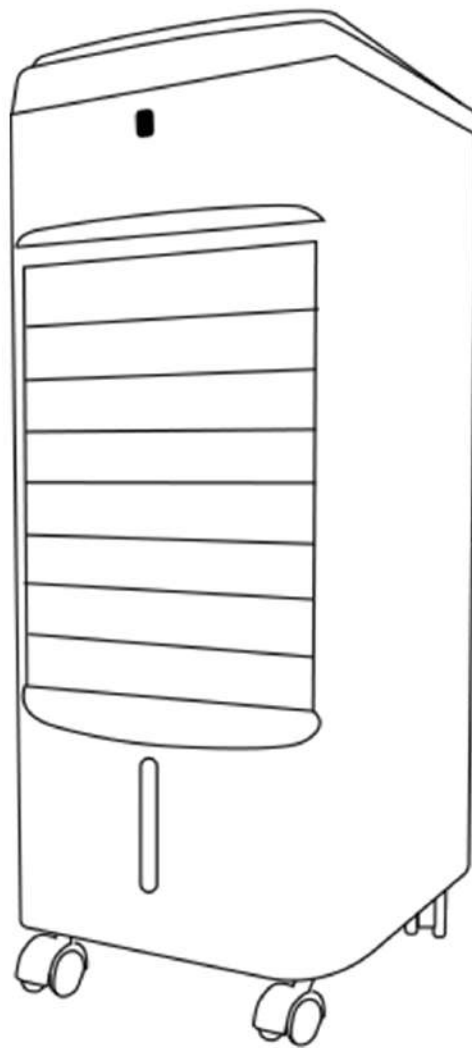

MODEL NO.:JDAC66R
✉ **Aftermarket311@gmail.com**

Thank you for Choosing us!

Your support means the world to us.
We hope you enjoy our product as much
as we did creating it.



READ AND SAVE THESE INSTRUCTIONS

READ CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE OR MAINTAIN THE PRODUCT DESCRIBED.

PROTECT YOURSELF AND OTHERS BY OBSERVING ALL SAFETY INFORMATION. FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE!

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

Working Principle

Evaporative cooling operates based on the principle of heat absorption through moisture evaporation. In simple terms, as water evaporates, heat is extracted from the air. You experience this phenomenon when you emerge from a swimming pool or shower and feel the coolness as water evaporates from your skin's surface.

Your evaporative cooler functions following the same principle. The fan draws in hot outside air and passes it through the moist cooling pads, where the air undergoes evaporation and subsequently gets discharged from the cooler, now cooled.

CONTENTS



IMPORTANT SAFETY INSTRUCTIONS

1-3



CLEANING AND MAINTENANCE

11



TROUBLE- SHOOTING

12

2

**KNOWING
YOUR
AIR COOLER**

4-5

3

**USING YOUR
AIR COOLER**

5-10

6

**CUSTOMER
CARE**

13

IMPORTANT INSTRUCTIONS

WARNING: When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

 
1. Please read all instructions before use.
2. This fan is for household use only.
3. Before using for the first time, please check that your voltage is in accordance with the product nameplate requirements.
4. Please check the power cord and plug for any damage before use.
5. Always turn the fan off and unplug it from the electrical outlet when not in use.
6. Caution is necessary when the appliance is used near children. Children should be supervised to ensure that they do not play with the appliance. Children under 8 should not operate the fan.
7. After the machine is filled with water, place or move it without tilting or colliding it. When moving the machine, please push it slowly to prevent the water from overflowing. Using this machine is strictly prohibited to overturn and place it on a sloping ground to prevent accidents.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
9. Do not place heavy objects on the top of the machine, and do not obstruct the airflow with any objects or place anything inside the fan opening.
10. Use the fan in a well-ventilated area. When in use, place the fan at least 8 inches from any walls to ensure proper air flow. The fan must not be located immediately below or beside a curtain. Do not use in areas where curtains could be sucked in.
11. Do not immerse the machine in water or rinse it under the faucet.
12. To reduce the risk of fire or electrical shock, do not expose electrical connections to water.
13. Only place the fan on a hard, flat, dry floor.
14. Do not use in extreme temperatures, humidity, or dusty environments.
15. Do not operate the fan in the presence of explosive and/or flammable fumes.
16. This machine has a strong humidification effect. Please do not use it in a closed environment. If you use it in a closed environment, please turn off the cold air function.
17. Avoid contact with moving fan parts. Do not insert or allow foreign objects to enter the air outlet, as this may cause equipment damage or create danger.
18. Do not place the fan directly below a power outlet or you risk the cord being sucked in.
19. When the fan is oscillating do not manually turn the fan to avoid damage.
20. Always turn off the power supply before unplugging the power cord from the electrical outlet to prevent a short circuit, fire or electric shock.
21. Do not twist or pull the power cord.

22. Do not unplug the fan if your hands are wet, there is danger of electric shock.
23. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and or repair.
24. If the power cord is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department or similar departments.
25. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
26. Ensure that the fan is switched off from the supply mains before removing the guard.
27. To reduce the risk of fire or electric shock, do not use this fan with any solid state speed control device.
28. Please unplug or disconnect the appliance from the power supply before servicing.
29. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and /or repair.
30. CAUTION : This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature. To do so could result in an electric shock hazard.

READ AND SAVE THESE INSTRUCTIONS

USER SERVICING INSTRUCTIONS (TO CHANGE THE FUSE)

This appliance features a fused safety plug that protects against overload or short-circuit situations. If the fuse blows, please cut off power and follow the below instructions or consult a qualified electrician.

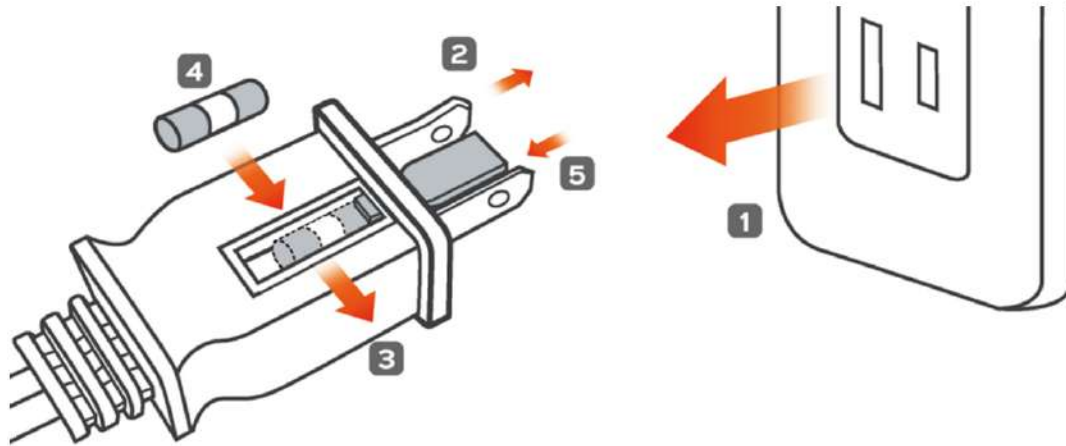

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.

2. Open fuse cover Slide open fuse access cover on top of attachment plug towards blades.

 
3. Remove fuse carefully. Push the fuse from the other side to remove the fuse.

4. Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse.

5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.

WARNING: Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

PRODUCT OVERVIEW

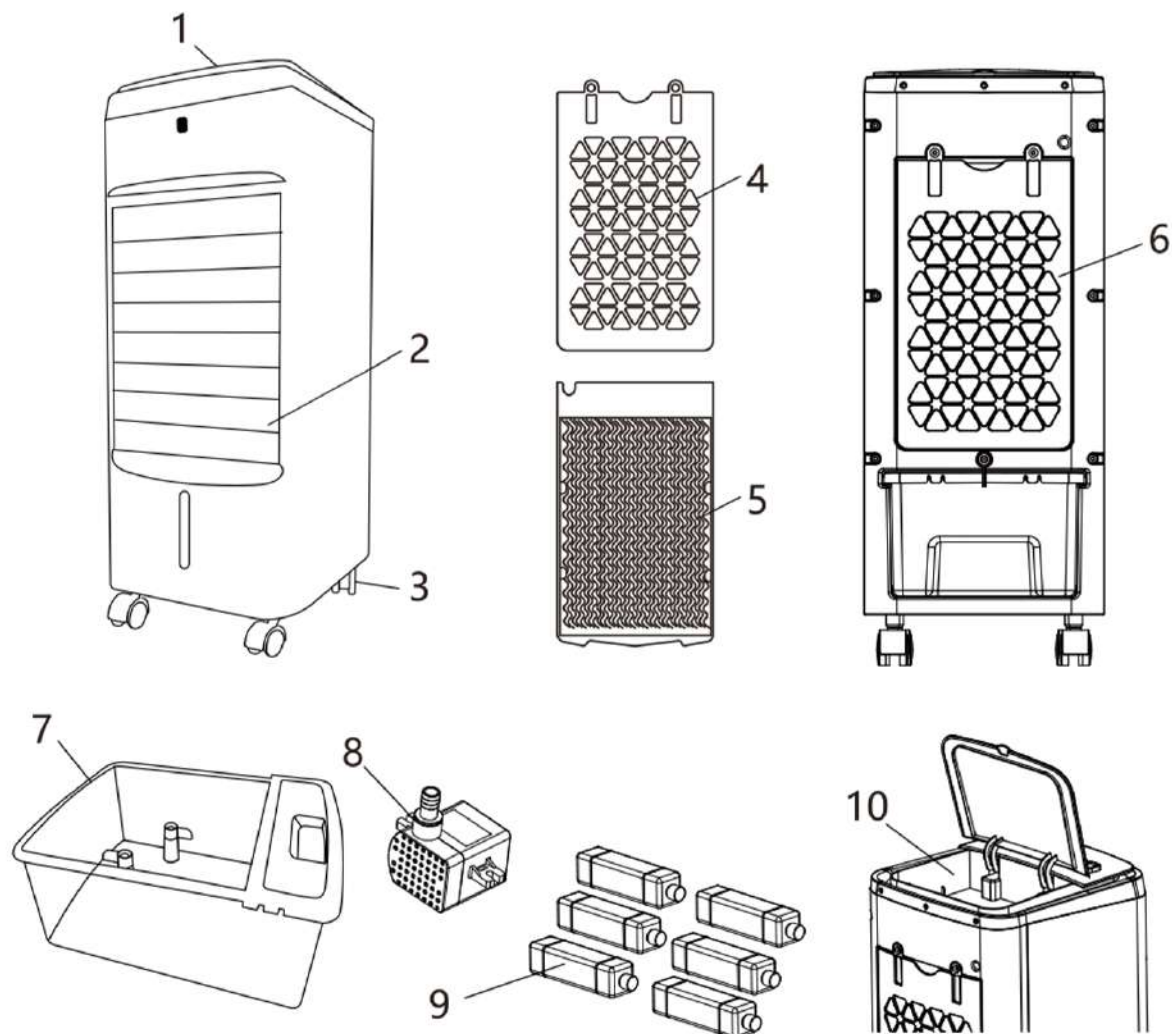

1. Control panel

2. Air outlet

3. Swivel caster

4. Air filter

5. Wet curtain paper

6. Back/Air inlet

7. Water tank

8. Water pump

9. Ice box*6

10. Upper water tank

SPECIFICATIONS

Mode No	JDAC66R
Rated power	60w
Rated voltage	AC 120V
Product size	10.43*9.25*22.05inch
Net weight	9.02lbs
Wire length	6 Feet
Frequency	60HZ

 
 
NOTE:As a result of continual improvements,the design and specifications of the product within may differ slightly to the unit illustratedon the packaging.

USING YOUR AIR COOLER

3


ASSEMBLY INSTRUCTIONS

Align the connecting shaft of the wheel with the connecting hole at the bottom of the product, insert it firmly, and repeat it four times.

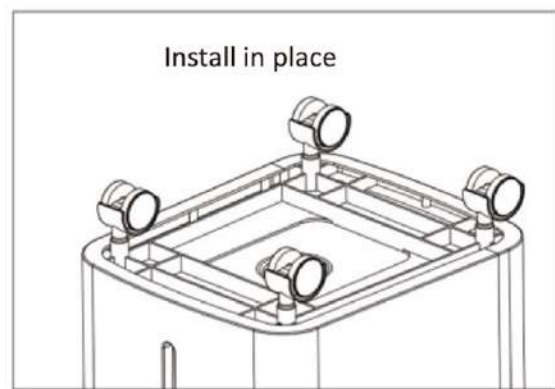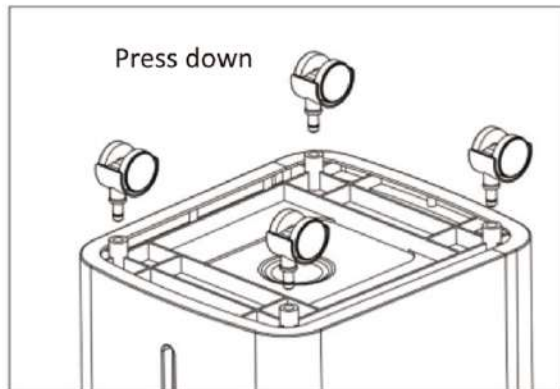

OPEN THE AIR OUTLET

 Before starting the machine, be sure to manually open the horizontal louvers (as shown in the figure below) and adjust it to the desired position.

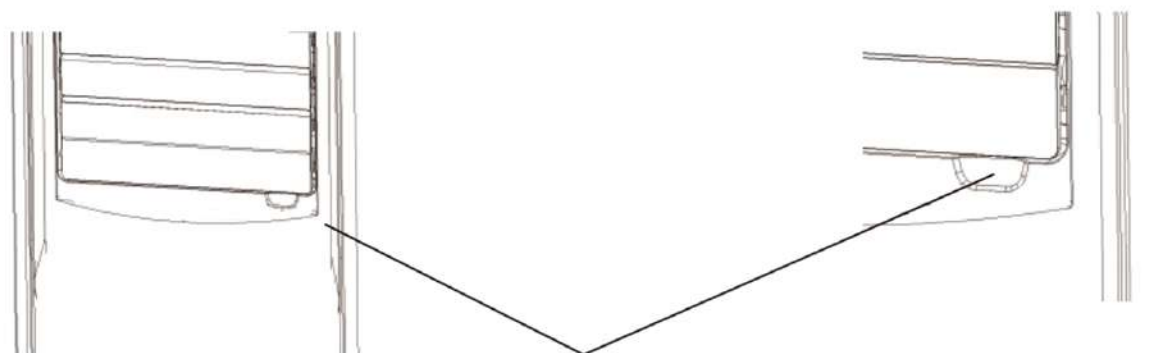

Use your fingers to buckle up the tuyere horizontal louvers from here, and adjust the position of the tuyere up and down

HOW TO ADD WATER

1. Before adding water to the water tank, be sure to disconnect the mains plug from the socket.
2. Turn the small rotary knob (see figure A).
3. Pull out the water tank, fill clear water into the tank (see figure B) and make sure that the small knob on the water pump is firmly seated.
4. The change of water level can be observed carefully through the water level window, so as to ensure that the amount of water added is higher than the minimum water level and does not exceed the highest water level (after adding ice cubes or ice boxes) (see Figure C).
5. You can also fill water via the upper water tank.

Notes:

1. Only clear water may be poured into the water tank and it is strictly forbidden to pour in other liquids.
2. The appliance should be placed horizontally and should not be tilted or shaken to prevent water from splashing into the motor and surrounding parts and causing a leakage accident.
3. The water in the water tank in the hot and summer season is easy to deteriorate and produce odor. Please pay attention to update the water.

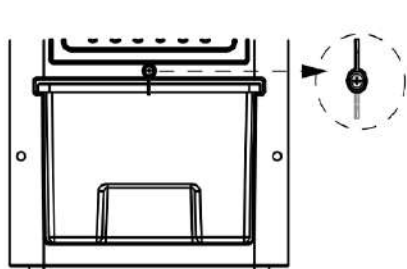 


Figure A



Figure B

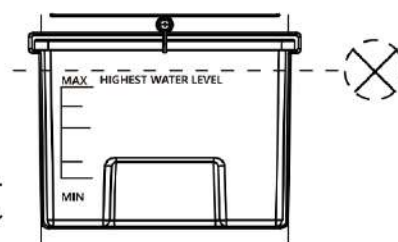 


Figure C

USE OF THE ICE CRYSTAL BOX

The ice crystal box can keep cool and slowly absorb the heat in the water. This lowers the water temperature in the water tank and the blowing wind becomes cooler until the heat absorption capacity of the ice crystal box is saturated.

1.If you are using the ice crystal box for the first time: Open the lid, fill with water to the maximum level and then close the lid again (see figure A).

2.Place the ice crystal box in the freezer compartment of the refrigerator and freeze it for at least four hours until it is completely frozen.

3.Remove the already frozen ice crystal container and place it in the water tank to lower the water temperature (see figure B).

4.The ice crystal box can be reused. Over time, the cooling effect of the ice crystal box gradually diminishes. At this point, the ice crystal box can be placed back in the freezer compartment of the refrigerator to restore the cooling effect.

Notes: It is forbidden to eat the ice crystals in the ice crystal box! Do not use the ice crystal box as a children's toy to prevent children from accidentally eating it!



Figure A


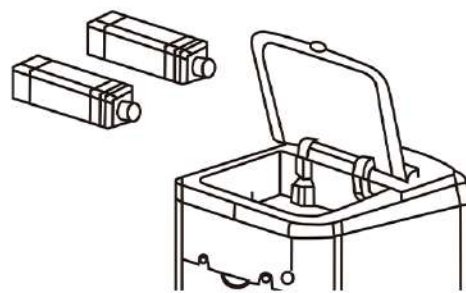 



Figure B

DISASSEMBLY/INSTALLATION/CLEANING OF WATER TANK

 1. Disconnect the mains plug.
2. Pull out the water tank and turn the two small knobs next to the water pump (as shown in the illustration).
3. Remove the water tank and drain the water.
4. Use a clean towel and a neutral detergent to remove the limescale in the water tank and then rinse it out with clean water.
5. Return the water tank to its original position and screw the rotary knob onto the water pump (as shown in the illustration).

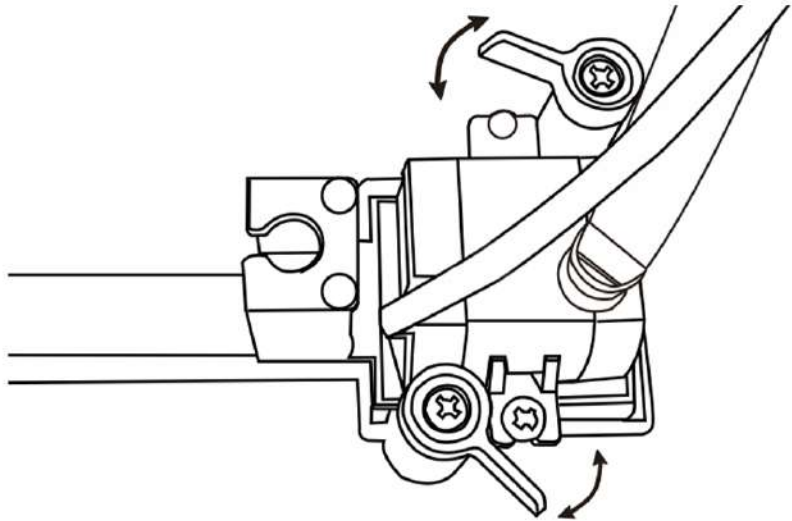

PANEL CONTROL

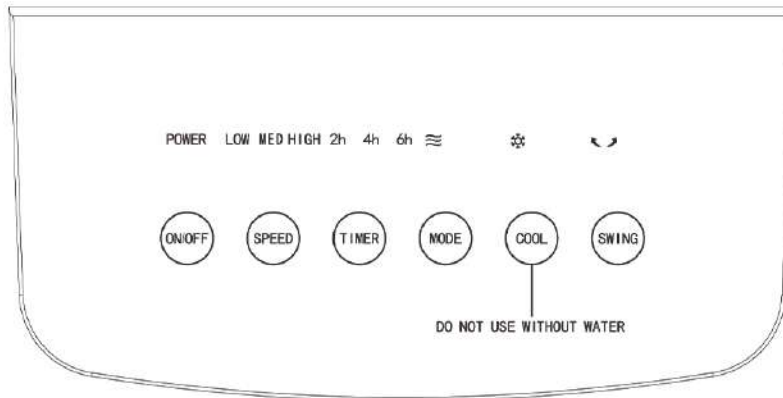 

Place the device on a firm horizontal surface and insert it into the socket. The power indicator light is used to remind the product to be in standby mode. When the "ON/OFF" button is first pressed, the default setting is low speed. When pressed again, the product is in standby mode.

- **ON/OFF Button:**

Press the on/off button to turn the air cooler on or off.

- **SPEED Button:**

Press this button to change the speed between low / medium / high.

- **TIMER Button:**

Press this button to set the timer, with a minimum setting of 2 hours and a maximum setting of 12 hours. After reaching the set time, the machine automatically stops working.

- **MODE Button:**

Press the button to switch the fan mode between normal mode > natural mode> and sleep mode.

1. Normal mode (mode indicator light off).
2. Natural mode (mode indicator light flashing): The speed changes randomly.
3. Sleep mode (mode indicator light always on): The speed changes randomly, decreases every 30 minutes, and then remains at the lowest speed.

- **COOL Button:**

Press this button to open or close the cooling system.

- **SWING Button:**

 
Press this button to control the left and right swings, and press it again to stop swinging. (Note: Manually moving the blinds up or down can also change the wind direction.)

NOTE:

- Lights on the control panel will indicate the corresponding functions you have selected.
- Do not turn on the cooling system when the water tank is empty.

REMOTE CONTROL: USER INSTRUCTION

Due to transportation safety reasons, batteries are not included in the packaging. Please prepare 2 pieces of 1.5V AAA batteries by yourself.

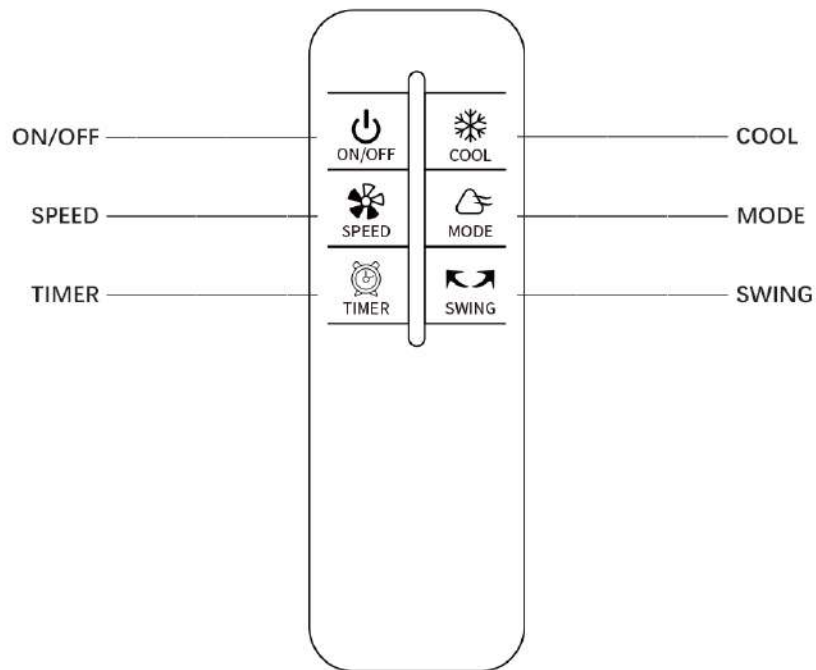

REMOTE CONTROL: INSTALLATION/REPLACEMENT OF BATTERIES

1. Flip the back of the remote control, hold and slide down the back cover of the remote control.
2. Insert 2 AAA batteries following the indications of the polarity symbols (+ and -) inside the battery compartment.

NOTES:

- Do not use rechargeable batteries.
- If not in use for a long time, please remove the batteries to prevent battery leakage from damaging your remote control.
- Do not allow water or liquid to enter the remote control.
- Do not dispose of batteries in fire, batteries may explode or leak
- Do not mix old and new batteries.
- Dispose of the used batteries at appropriate recycling points or in accordance with local regulations.

CLEANING AND MAINTENANCE

Always switch off the appliance before cleaning or maintenance and disconnect the mains plug from the socket to avoid accidents.

1. Use a soft and clean cloth to remove dust and stains on the surface of the appliance and avoid using hard objects that could damage the surface.
2. Loosen the screws on the back dust screen and carefully remove the dust screen and wet curtain.
3. Soak the wet curtain in warm water and a neutral detergent and then scrub it carefully with a soft brush to remove the dirt and dust. Then rinse it with clear water and finally dry it in the sun.
4. Once cleaning is complete, reinstall the wet curtain and dust net according to the original disassembly method. Make sure that the wet curtain is correctly installed in the appliance to ensure normal operation of the appliance.

Note:

- This product does not have a waterproof function. Keep the control panel dry and avoid contact with water. Do not immerse the entire device, internal components, remote control, power cord, plug, etc. in water and do not rinse them under the tap to avoid short circuits.
- Do not use corrosive substances such as alcohol, petrol, alkaline cleaning agents, washing powder, volatile substances, toluene or chemical cloths for cleaning. Improper cleaning can lead to discoloration and corrosion of the fan.
- After during long-term operation, the accumulation of dust on the wet curtain impairs the air flow and air purification. It is recommended to clean it every 2-4 weeks. If the dust load in the operating environment is high, the frequency of cleaning should be increased accordingly.

STORAGE

If you don't plan to use it in the short term, it is recommended to store it after cleaning to prevent dust accumulation. Follow the steps below to store it correctly:

1. Empty the water tank and run the fan for at least 30 minutes without turning on the pump to ensure that the wet curtain is dry. Let the fan dry completely before packaging it in the original packaging.
- Store the fan in a place away from direct sunlight and with low humidity. Avoid placing the fan near a fire source or flammable materials.

Trouble	Cause	Solution
Product not working	1. The power cord is unplugged or in poor contact.	1. Plug the power back in firmly or try plugging it into a different outlet to connect the power.
	2. The LED screen is damaged.	2. Contact customer service & repair center.
	3. Not working after a while or for other reasons.	3. Please provide the video and contact customer service & repair center.
Bad cooling effects	1. Air inlet or air outlet clogged or there are other heat sources.	1. Remove the obstruction or remove other sources of heat.
	2. Other reasons.	2. Please provide the unusable video, and contact customer service & repair center.
Water pump doesn't work	1. The water level in the water tank is lower than the minimum water level scale.	1. Adding water exceeds the minimum water level scale.
	2. The cooling mode is not activated.	2. Turn on the cooling mode.
	3. Other reasons.	3. Please provide the unusable video, and contact customer service & repair center.
The remote control does not work	1. Exceeding the control range of the remote control (10–16ft).	1. Bring the remote control close to the Air cooler and make sure it is pointed at the product.
	2. The remote control was not aiming at the signal receptor on the unit.	
	3. The batteries have no electricity it.	2. Replace the batteries.
Lack of accessories	1. Lack of ice box.	1. Contact customer service & repair center.
	2. Missing wheel.	

Note: The types of faults and possible causes include but are not limited to the above. If the problem remains unsolved or other problems are encountered after the operation of the above methods, please contact our after-sales mailbox for more help.



Warranty and Service

Thank you for your purchase!

Our goal is to ensure your 100% satisfaction with our warranty service!

This appliance comes with a 12 month warranty, starting from the date of initial purchase. During the 1 year warranty period, we will provide free service for any quality issues, installation problems, and missing parts.

Service Guarantee

All of our items are brand new and in excellent condition, In the event that the product you received does not meet this standard, please contact us .

Sincerely At Your Service

Your shopping experience is very important to us! If you are unsatisfied with our service with purchases, please feel free to let us know. We will always be here to offer you the best service and get your satisfaction.

The warranty will not apply in cases of

- Accident, misuse, or repairs performed by unauthorized personnel.
- Tampered with or used for commercial purposes.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by .

We are here to provide assistance

For any questions, please contact our customer service email to get extra after -sale service.

Email: Aftermarket311@gmail.com

ENVIRONMENT

CORRECT DISPOSAL OF THIS PRODUCT:



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

If you encounter any problems when
using our products,
please feel free to contact us through the
following Email to get a quick response
and a 100% satisfactory solution.

Questions or Problems?

Tell us
We are here
to help with
our lifetime professional
100% satisfied service
within 24 hours

✉ Email: Aftermarket311@gmail.com



MADE IN CHINA



Intertek
5003496