


EzShareCPAP

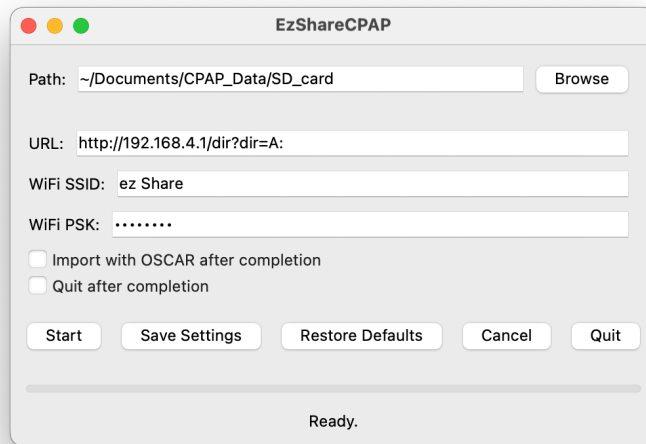

Overview

EzShareCPAP is a macOS program designed to download files from an [ez Share SD card/adaptor](#) when used in CPAP devices (such as the ResMed AirSense 10 Elite) to a local directory. These files can then be imported with applications such as [OSCAR](#) and [SleepHQ](#) for data analysis and visualisation.

Features

- **Wi-Fi Connectivity:** Connects to the ez Share SD card's Wi-Fi network.
- **File Synchronisation:** Downloads files from the SD card to a specified local directory.
- **User Interface:** Provides a graphical user interface (GUI) for ease of use.
- **Configuration:** Handles configuration settings directly through the GUI.
- **Real-time Updates:** Displays status updates during the file synchronisation process.
- **Import with OSCAR:** Option to automatically import data with OSCAR after completion.
- **Quit After Completion:** Option to automatically quit the application after completion.

Prerequisites

- macOS operating system.
- Python 3.x installed on your system (for source installation).
- Required Python packages: requests , beautifulsoup4 , PyQt6 (for source installation).

Installation

From Release Version (mac M series/ARM64/silicon only, for Intel use the source version)

1. Download the release version:

- Download the release version compiled by PyInstaller from [here](#).

2. Extract the ZIP file:

- Unzip the downloaded file and move to a desired location on your macOS system (e.g., Applications folder).

From Source

1. Clone the repository:

```
git clone https://github.com/adrianrfeeger/EzShareCPAP.git  
cd EzShareCPAP
```

2. Install the required packages:

```
pip install -r requirements.txt
```

3. Run the program:

```
python main.py
```

Compiling Standalone Using PyInstaller

1. Install PyInstaller:

```
pip install pyinstaller
```

2. Compile the application:

```
pyinstaller EzShareCPAP.spec
```

- This will create a standalone executable in the `dist` folder.

Usage

Graphical User Interface (GUI)

The GUI provides an easy way to configure and run the file synchronisation process.

Path:

Specify the local directory where the files will be downloaded.

URL:

Specify the URL of the ez Share SD card.

Wi-Fi SSID:

Specify the SSID of the ez Share Wi-Fi network. The default SSID is `ez Share`.

Wi-Fi PSK:

Specify the PSK (password) for the ez Share Wi-Fi network. The default PSK is `88888888`.

Checkboxes:

- **Import with OSCAR after completion:** Automatically imports data into OSCAR after the synchronisation process is completed.
- **Quit after completion:** Automatically quits the application after the synchronisation process is completed.

Buttons:

- **Start:** Initiates the synchronisation process.
- **Save Settings:** Saves the current settings to `config.ini`.
- **Restore Defaults:** Restores the default settings.
- **Cancel:** Cancels the current operation.
- **Quit:** Closes the application.

Progress Bar:

Displays the progress of the file synchronisation process.

Status Label:

Displays the current status of the application.

The GUI manages the configuration settings directly, eliminating the need to manually edit the `config.ini` file. Enter your settings in the GUI and click “Save Settings” to store them.

File Structure

- `.deepsources.toml` : Configuration file for DeepSource analysis.
- `EzShareCPAP.code-workspace` : Workspace settings for Visual Studio Code.
- `EzShareCPAP.spec` : PyInstaller specification file for building the standalone application.
- `README.md` : This file, containing documentation for the project.
- `config.ini` : Stores Wi-Fi credentials and paths configuration.
- `ezshare.py` : Manages Wi-Fi connection and file synchronisation.
- `file_ops.py` : Manages file operations, including directory traversal and file downloading.
- `gui.py` : Handles the graphical user interface and configuration settings.
- `icon_drive.png` : Image file for the drive icon.
- `icon.icns` : Icon file for the macOS application.
- `icon.png` : PNG version of the application icon.
- `main.py` : Entry point for the program.
- `requirements.txt` : Lists required Python packages for the project.
- `wifi.py` : Handles Wi-Fi connections specific to macOS.

Troubleshooting

Wi-Fi Connection Issues:

- Verify the SSID and PSK in the GUI are correct. Default SSID is `ez Share` , and the default PSK is `88888888` .
- Ensure the EzShare SD card/adaptor is inserted into a powered-on device (e.g., CPAP) and within range of your computer (5-10 metres).

File Download Issues:

- Confirm the URL in the GUI points to the correct EzShare SD card address.
- Ensure sufficient space is available in the local directory for file downloads.