

The Server Computer

Camera and stm communication cable must be connected to the host computer. Camera and stm communication port must be selected over the server application.



Image 23. Devices Connection Page - Server Application

After the connections are successful, ping pong ball balance and circle commands can be given to the embedded system via the server application. If you want to stop the system, the stop button should be used. Then you can switch to the other command you want.

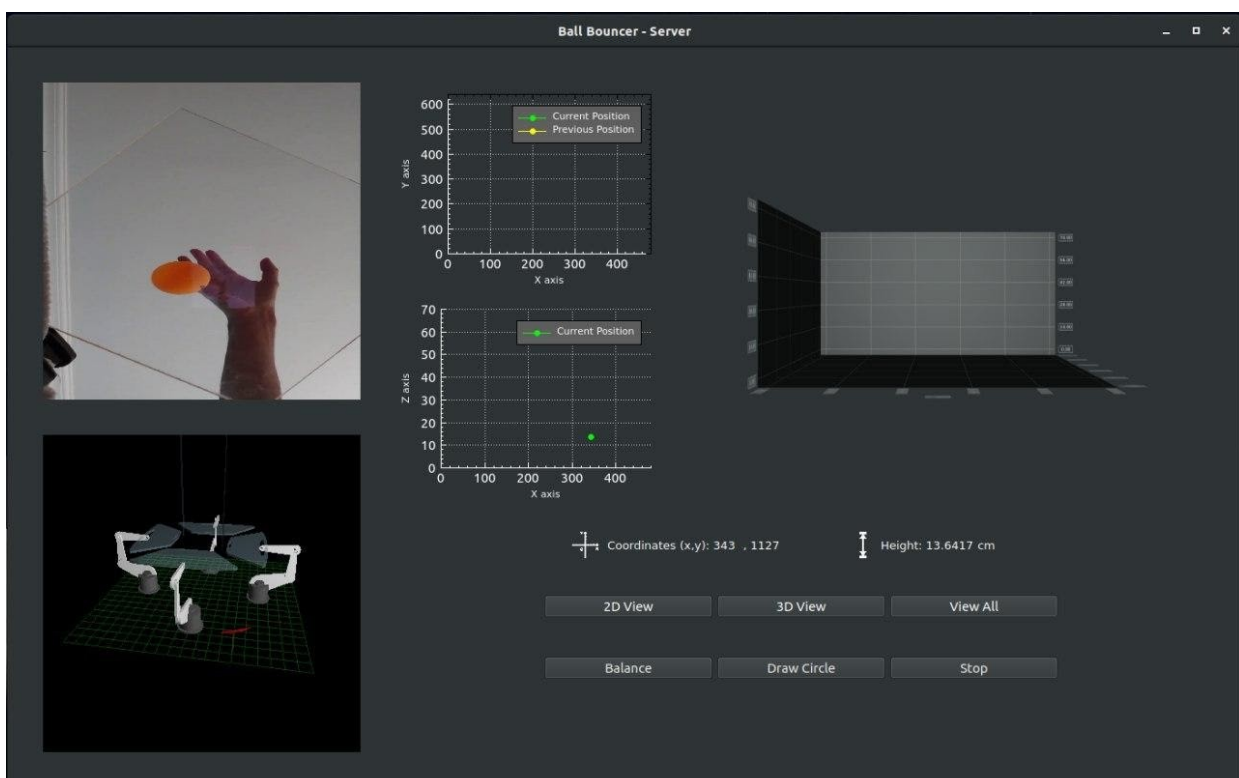


Image 24. Embedded System Control Panel

You can follow the camera and simulation live from the server application.

The Mobile Application

Install the application apk file to watch the system live from the mobile application. Then connect to the server computer's network.

The Desktop Application

Obtain the executable file. You can watch live after connecting to the network of the server computer from your Linux or Windows operating system.

The Embedded System

Just plug in the system's adapter and follow the steps in the server application.