

NEC Plotting Programs

NECPLOT

PATPLOT

ZPLOT

Program NECPLT

NECPLT will read a NEC input or output file and plot an isometric view of the structure from any viewing angle. For input data files it will check for errors in the model data. If an error is encountered the program may stop without making a plot. If you want to see the plot you can put -1 as the second integer parameter on the GE command to turn off error checking.

When an output file with a complete solution is read NECPLT will display the real or imaginary part of current as arrows. The unit magnitude arrow, for maximum normalized current, has three legs of equal length. The outer arrow leg shrinks as the log of current to a magnitude of 0.1, then the next leg shrinks as the log of magnitude until it reaches 0.01. The arrows are not visible for magnitudes of 0.001 or less.

If the model includes surface patches that are defined as rectangles, quadrilaterals or triangles the shapes will be displayed. For the center-normal-area patch input the patches cannot be drawn, but the current arrows will be drawn from an output file.

Commands:

- VA** *thet, phi, eta* – Sets the viewing angles.
- SC** *i* – Center the display on segment *i*. If *i* is zero or omitted the display is centered on the screen.
- PT** – Refresh the plot on the screen.
- PL** – Write a PostScript file for the plot. The file can be sent to a PostScript printer or opened in a program such as Adobe Illustrator.
- NF** – Read a new input file.
- RF** – Read further into the current input file to plot additional models.
- AR** *i* – Display arrows for the real part of the current. If *i* is not zero or omitted the arrow display is turned off.
- AI** *i* – Display arrows for the imaginary part of the current. If *i* is not zero or omitted the arrow display is turned off.
- ZX** *f* – Zoom the display by the factor *f*. If *f* is zero or omitted the display is scaled to fit the screen.
- SE** *i* – Mark the segment ends with tick marks. Free ends are shown by red tick marks. If *i* is not zero or blank the tick marks are removed.
- FE** *i* – Show segments with free ends as dashed lines. If *i* is not zero or blank the free end display is turned off.

- EX** – Exit the program and write the PostScript file if the PL command has been used.
- SH** – Display a table of commands accepted by program NECPLT. The number of segments, viewing angles, frequency and current arrow information are also shown.
- SP** r_1, r_2 – Scale the plot (and current arrows) by the factor r_1 and scale the current arrows only by the factor r_2 . This command can be used to reduce the arrow size on a plot that is too cluttered.

Program PATPLOT2 for Windows

PATPLOT2 is a program to read NEC output files and plot radiation patterns. For each pattern that it finds, the gain is displayed on a 2D polar or Cartesian plot. When a 3D pattern is found (more than one value of θ and ϕ) it offers the option to plot the 3D pattern. This is an enhanced version of the program PATPLOT that has been distributed with NEC, and would only plot polar patterns. The 3D plotting uses the subroutines developed by Dr. Waymond Scott Jr. at Georgia Tech. [1]. These programs have been modified to interface with the DIGLIB graphics library [2] which includes basic plotting routines with versions for Windows, UNIX, Macintosh and DEC/VMS operating systems.

PATPLOT2 operates in two modes with different sets of commands for 2D and 3D plots. It starts in 2D mode and reads and plots patterns until it finds a complete 3D pattern. Then it asks if the user wants to plot the 3D pattern. Each plot is displayed on the screen. It can be printed on a Postscript printer with the PL command. However, in the Windows and Macintosh versions it just writes the Postscript file on the disk in the directory in which the input file was opened. The user must use the operating system commands to send the file to a Postscript printer to be rendered.

2D mode

PATPLOT2 starts in 2D mode and plots each pattern as it is read. It checks whether the θ or ϕ angle is changing and shows the changing angle and fixed angle on the plot. The θ (vertical) component of gain is plotted as a solid line and the ϕ (horizontal) component as a dashed line. The default puts the zero angle at the top of the plot with the angle increasing clockwise, but this can be changed with input commands. The 2D plot also shows the frequency, input impedance and efficiency read from the file. The following commands are accepted by PATPLOT2 in 2D mode:

2D Commands:

- <return>* – Read and plot the next 2D pattern
- RD** – Read the remainder of a 3D pattern block without plotting. Then ask if a 3D plot is wanted. If a single θ or ϕ cut is found it will plot the 2D pattern.
- RF** – Skip out of a 3D pattern table to search for the next pattern table
- RW** – Rewind the file and start at the beginning
- CP** – Show 2D patterns on Cartesian plots
- PP** – Show 2D patterns on polar plots (default)
- ST** – Store the currently displayed 2D pattern to overlay on other plots
- RC** – Recall a stored 2D pattern to overlay on other plots
- RX** – Turn off the stored pattern overlay
- EX** – Exit from the program
- NF** – Open a new NEC output file
- RB** – Reverse the screen background black to white (toggels)
- PL** – Write a Postscript file for a printer

- PH** – Write a file of HPGL graphics commands for Hewlett Packard plotters
- PT** – Redraw the plot on the screen
- RM** – Put zero at the right of the plot with positive angles plotted clockwise
- RP** – Put zero at the right of the plot with positive angles plotted counterclockwise
- UP** – Put zero at the top of the plot with positive angles plotted counterclockwise
- UM** – Put zero at the top of the plot with positive angles plotted clockwise (default)

3D mode

When PATPLOT2 gets to the end of a 3D pattern table (two or more values of θ and ϕ) it displays a message asking if a 3D plot is wanted. The default is to make the 3D plot, and “n” must be entered to continue in 2D mode. When in 3D mode, the command 2D can be used to return to 2D mode and continue reading the NEC file.

The time to generate a 3D plot will depend on the number of angles in the pattern. In many cases, five degree increments in θ and ϕ (73×37 points for a sphere) will give a good rendering of the 3D pattern and will plot with little time delay. With two degree increments in θ and ϕ covering the sphere (181×91 points) plotting will take several seconds on a 200 MHz Pentium system, and the NEC output file will be fairly large (around 2 MB). The program is dimensioned for a maximum of 361×181 values in θ and ϕ , but it is usually not necessary to use such small increments. If the range of ϕ is less than 360 degrees, the exposed interior of the pattern will appear blank without lines. This can sometimes be useful to show the pattern shape on the exposed edge, as shown in [1]. If the range of θ angles is less than 180 degrees, lines will be drawn on the exposed interior.

On Windows systems the 3D plot on the screen is colored by phase for vertical and horizontal gain and by axial ratio for total gain. The frequency, maximum gain and angles for maximum gain are also shown. Commands in 3D mode are:

3D Commands:

- VA** $\theta \phi$ – Set the viewing angles to θ, ϕ degrees
- GV** – Plot vertical gain on a dB scale (default)
- GH** – Plot horizontal gain on a dB scale
- GT** – Plot total gain on a dB scale
- LV** – Plot vertical gain on a linear scale
- LH** – Plot horizontal gain on a linear scale
- LT** – Plot total gain on a linear scale
- GR** f_1 – set the plot range (origin to the peak) to f_1 dB (default 40 dB)
- CP** – Turn off color for phase and axial ratio (toggles)
- EX** – Exit from the program
- 2D** – Return to 2D plotting mode to continue reading the file
- RB** – Reverse the screen background black to white (toggels)
- PL** – Write a Postscript file for a printer
- PH** – Write a file of HPGL graphics commands for Hewlett Packard plotters

PT – Redraw the plot on the screen

References

- [1] W. Scott Jr., "A General Program for Plotting Three-Dimensional Antenna Patterns," IEEE Antennas and Propagation Society Newsletter, Vol. 31, No. 6, pp. 6-11, December 1989.
- [2] H. Brand, "DIGLIB — Divice Independent Graphics Library," *CAE Tools and Systems Newsletter*, Lawrence Livermore National Lab. Jan. 1986.

Program ZPLOT

Program ZPLOT will read NEC output files and plot the antenna input impedance or admittance versus frequency. Data can be displayed in Cartesian plots of impedance or admittance, real or imaginary parts of these quantities or a Smith chart. ZPLOT reads commands from the user's terminal and immediately displays the resulting plot on the screen. The user can then enter a command (PL) to send a displayed plot to a printer. The program is written in Fortran and must be linked with the graphics library DIGLIB [1].

ZPLOT includes capabilities for displaying multiple curves, combining data files and interpolating data. Data points from new files can be added to existing curves, and the combined data will be sorted in order of increasing frequency and plotted. In addition, the frequency samples can be interpolated using rational-function interpolation, or Cauchy's technique [1]. Data read from NEC output files or combinations of files or data generated by interpolation can be written to new files in a format including frequency and admittance or impedance. These files written from ZPLOT will be much smaller than the NEC output files which include a large amount of additional information. The impedance or admittance files written by ZPLOT can also be read by ZPLOT and plotted. The commands accepted by ZPLOT are described below.

Commands:

- AD** *ic* – Read a new file and add the data to curve *ic*. If *ic* is omitted or out of range a prompt is displayed for a new value. Next, the name of the input file is requested. The file may be a NEC output file or a compressed impedance or admittance file written by ZPLOT. After adding the new data points, all values for the curve are sorted in order of increasing frequency.
- CL** – Clear all curves and request a new input file.
- DV** – Change the device type for the terminal display. A table of available DIGLIB device drivers is displayed and a device number requested. The terminal device type can be changed permanently by changing the value assigned to the variable IDEV at the beginning of the program.
- ER** *ic* – Erase curve number *ic*.
- EX** – Exit from the program.
- FL** *f1 f2* – Limit the frequency range for Cartesian plots to the interval *f1* to *f2*.
- ID** – Display a table identifying the curves. The first line of each entry shows the file name and number of points. If the curve was obtained by interpolating another curve during the present ZPLOT run, the number of points fit and the slide interval are shown. The second line of each entry is the first title line obtained when the original NEC output file was read.

- IN** $ic\ np\ nf\ ns$ – Interpolate a curve using rational-function interpolation to create a new curve, where ic is the number of the curve to be interpolated, np is the number of points in the interpolated curve, nf is the number of points to fit in the sliding interpolation window and ns is the slide interval. Default values are ic = last curve, np =200, nf =7 and ns =1.
- NF** – Read a file and create a new curve.
- PL** – Send currently displayed plot to a printer. The DIGLIB device to which the plot is sent with the PL command is set by the variable IDLASR at the beginning of the program.
- PT** – Redraw the plot on the terminal screen.
- PZ** ic – Display a table of frequency, impedance and normalized impedance for curve ic .
- RB** – Reverse screen background, black to white.
- SC** – Display a Smith chart plot of normalized impedance.
- SH** – Display a table of commands accepted by program ZPLOT.
- SY** $ic\ ns$ – Put symbols on the Smith chart for curve ic with an interval of ns points between symbols. If ic or ns are omitted or zero, a prompt will be displayed for values. If a zero is entered in response to the prompt for ns , all symbols will be erased.
- VC** n – Set the VSWR circle on the Smith chart to $n : 1$. If n is omitted a prompt will be displayed for a value. The default is $3 : 1$ and $n = 0$ will eliminate the circle.
- YC** – Display a Cartesian plot of admittance $(G + jB)$ versus frequency.
- YI** – Display a plot of conductance G .
- YR** – Display a plot of susceptance B .
- YO** ic – Write a file of admittance versus frequency for curve ic . A prompt is displayed for the name of the file.
- ZC** – Display a Cartesian plot of impedance $(R + jX)$ versus frequency.
- ZI** – Display a plot of reactance X .
- ZR** – Display a plot of resistance R .
- ZN** Z_0 – Set the normalizing factor for impedance on the Smith chart to Z_0 .
- ZO** ic – Write a file of impedance versus frequency for curve ic . A prompt is displayed for the name of the file.

Rational-Function Interpolation

ZPLOT interpolates the antenna admittance over frequency using rational-function interpolation or Cauchy's technique [2]. The rational function of frequency f has the form

$$H(f) = \frac{\sum_{i=0}^m a_i f^i}{1 + \sum_{i=1}^n b_i f^i}. \quad (1)$$

The coefficients of the numerator and denominator polynomials are found by matching $H(f)$ to complex admittance values Y_k computed at N_f sample frequencies f_k to obtain the set of equations

$$H(f_k) = \frac{\sum_{i=0}^m a_i f_k^i}{1 + \sum_{j=1}^n b_j f_k^j} = Y_k, \quad k = 1, \dots, N_f \quad (2)$$

where $N_f \geq m + n + 1$. Equation (2) is then written in the form

$$\sum_{i=0}^m a_i f_k^i - Y_k \sum_{j=1}^n b_j f_k^j = Y_k \quad k = 1, \dots, N_f \quad (3)$$

which represents a matrix equation that can be solved for the coefficients a_i and b_i . The orders of the polynomials are chosen so that $m + n + 1 = N_f$, so that there are an equal number of conditions and unknowns. More specifically, $m = \lfloor N_f/2 \rfloor$ and $n = N_f - m - 1$, so that $m = n$ for N_f odd and $m = n + 1$ for N_f even. Other choices of m and n are possible, but approximately equal orders for numerator and denominator have been found to work well.

The rational function fit to the data samples tends to match the poles and zeros in the actual response function, and hence can be a very efficient means of interpolation. It is particularly effective in interpolating narrow resonances, since a single pole and residue can accurately represent a curve that would require a large number of discrete frequency samples. However, when the number of poles and zeros in $H(f)$ exceeds the number in the transfer function in the vicinity of the sample points the set of equations (3) may become ill-conditioned.

The interpolation in ZPLOT operates on a sliding window, so that for N sample points, N_f can have any value from 2 up to N . The value for N_f and the increment by which the window slides can be set in the IN command. The default is $N_f = 7$ and sliding by one interval. Since the samples do not need to be evenly spaced in frequency, the slide interval in frequency may be variable. Generally values of N_f of 5 or 7 have been found to work well. Larger values may be effective if the sample interval is such that the points span more than one resonance. If the sample interval is very small the equations may become ill-conditioned with small values of N_f . Ill-conditioned equations are indicated by a display PIVOT(i) = [small number] where i is the row number at which the routine FACTR was forced to use a small pivot element in the LU decomposition. When this message is printed, some of the

poles and zeros found may not accurately represent those in the sampled data. However, the interpolation may still be accurate as long as the poles with largest residues are found accurately.

File Formats

ZPLOT can read either a NEC output file or compressed impedance or admittance files. The latter two file types are written by ZPLOT in response to the ZO or YO commands. ZPLOT recognizes the file type by the first line in the file. If a file starts with a 1 in column one, it is assumed to be a NEC output file. ZPLOT reads the file searching for the FREQUENCY heading to get the frequency and the table ANTENNA INPUT PARAMETERS to get the admittance.

The compressed impedance or admittance files must start with *****NEC IMPEDANCE FILE** or *****NEC ADMITTANCE FILE**, respectively. The second line of the file is read as a title for labeling the plots. The third line is skipped, and can be used as a heading for the columns. The fourth and successive lines contain the frequency and impedance or admittance data. The quantities read are either f , Z_R , Z_I , I_{symbol} for an impedance file or f , Y_R , Y_I , I_{symbol} for an admittance file, where the subscripts R and I indicate real or imaginary parts. The input format is (9X, 3E12.5, I5). The first nine columns are skipped so that line numbers can be included there. However, the line numbers are not used by the program. The program reads the file, counting data lines, until an end of file is read.

The value I_{symbol} controls the placement of symbols on the Smith chart. A symbol will be drawn for any data point for which I_{symbol} is nonzero. Values of I_{symbol} can be set with the SY command. Alternatively, the impedance or admittance files can be edited to place symbols at selected frequencies. If symbols are not needed, these values can be omitted.

References:

- [1] H. R. Brand, *DIGLIB – Device Independent Graphics Library*, Lawrence Livermore National Laboratory, CAE Tools and Systems Newsletter, January 1986.
- [2] K. Kottapalli, T. K. Sarkar, Y. Hua, E. K. Miller and G. J. Burke, “Accurate Computation of Wide-Band Response of Electromagnetic Systems Utilizing Narrow-Band Information,” *IEEE Trans. Microwave Theory and Techniques*, Vol. 39, No. 4, pp. 682-687, April 1991.