



DC5



EVE




CH1



CH2



 VCC  
VCC  
GND  
A1  
A2  
B2  
B1  
GND



PWMA  
AIN2  
AIN1  
STBY  
IN1  
IN2  
PUMB  
GND



SCL  
SDA  
EVE  
GND

TB6612FNG



RX  
SCL  
SDA  
D3  
D2  
D1  
D0

D7/TX

D8

D9

D10

EVE

GND



SM/DRV-VISION-I2C

T-SIM7000/70706

SDA

SCL

GND

EVE

